




FRDM MCX C162 development platform

Getting started with your FRDM board

1. Connect the FRDM-MCXC162 board to a PC using the USB Type-C cable (USB cable not included).

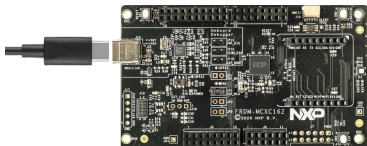

2. The board comes preprogrammed with a blinky LED demo
3. Download installation software and documentation here:
[nxp.com/FRDM-MCXC162](https://www.nxp.com/FRDM-MCXC162)

Software and expansion boards

1. Access software and tools through **nxp.com/MCUXpresso**
 - Expansion Board Hub **mcuxpresso.nxp.com/eb-hub** to find add-on boards from NXP and our partners with related MCUXpresso SDK-compatible drivers and examples
 - Application Code Hub **mcuxpresso.nxp.com/appcodehub** to browse application code examples from our experts to help kick start your project
2. Explore our entire FRDM platform of MCUs and MPUs at **nxp.com/FRDM**

Support

Visit **nxp.com/support** for a list of phone numbers within your region.

Warranty

Visit **nxp.com/warranty** for complete warranty information.

NXP and the NXP logo are trademarks of NXP B.V. All other product or service names are the property of their respective owners. © 2026 NXP B.V.

Document Number: MCXC162SPQSG REV 0

APN: 926-10136 REV A