

UM11942

PN5190 instruction layer

Rev. 4.0 — 6 May 2025

User manual

Document information

Information	Content
Keywords	PN5190, NFC, NFC frontend, controller, instruction layer
Abstract	This document describes the instruction layer commands and responses to work from a host controller, for evaluating the operation of NXP PN5190 NFC frontend controller. PN5190 is a next generation NFC frontend controller. The scope of this document is to describe the interface commands to work with PN5190 NFC frontend controller. For more information on the operation of PN5190 NFC frontend controller, refer to the data sheet and its complementary information.



1 Introduction

1.1 Introduction

This document describes the PN5190 Host Interface and the APIs. The physical host interface used in the documentation is SPI. SPI physical characteristic is not considered in the document.

Frame separation and flow control are part of this document.

1.1.1 Scope

The document describes the logical layer, instruction code, APIs which are relevant for the customer.

2 Host communication overview

PN5190 has two main modes of operation to communicate with the host controller.

1. HDLL-based communication is used when the device is triggered to enter:
 - a. **Encrypted Secure download Mode** to update its firmware
2. TLV command-response-based communication (given as an example).

2.1 HDLL mode


HDLL mode is used for packet exchange format to work with below IC operating modes:

1. Secure firmware download mode (SFWU), see [Section 3](#)

2.1.1 Description of HDLL

HDLL is the link layer developed by NXP to ensure a reliable FW download.

An HDLL message is made of a 2 byte header, followed by a frame, comprising the opcode and the Payload of the command. Each message ends with a 16-bit CRC, as described on the picture below:

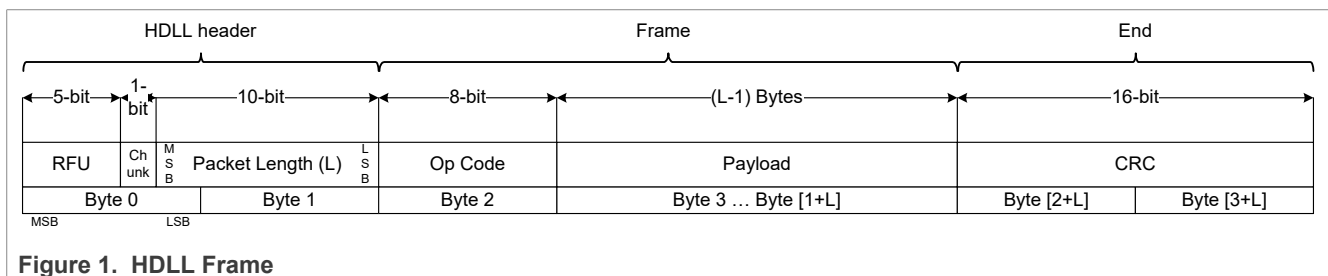

The HDLL header contains:

- A chunk bit. Which indicates if this message is the only or last chunk of a message (chunk = 0). Or if, at least, one other chunk follows (chunk = 1).
- The length of the Payload coded on 10 bits. So, the HDLL Frame Payload can go up to 1023 Bytes.

The byte order has been defined as big-endian, meaning Ms Byte first.

The CRC16 is compliant to X.25 (CRC-CCITT, ISO/IEC13239) standard with polynomial $x^{16} + x^{12} + x^5 + 1$ and pre-load value 0xFFFF.

It is calculated over the whole HDLL frame, that is, Header + Frame.

Sample C-code implementation:

```
static uint16_t phal_Host_CalcCrc16(uint8_t* p, uint32_t dwLength)
{
    uint32_t i ;
    uint16_t crc_new ;
    uint16_t crc = 0xffffU;
    for (I = 0; i < dwLength; i++)
    {
        crc_new = (uint8_t)(crc >> 8) | (crc << 8 );
    }
}
```

```

    crc_new ^= p[i];
    crc_new ^= (uint8_t)(crc_new & 0xff) >> 4;
    crc_new ^= crc_new << 12;
    crc_new ^= (crc_new & 0xff) << 5;
    crc = crc_new;
}
return crc;
}

```

2.1.2 Transport mapping over the SPI

For every NTS assertion, the first byte is always a HEADER (flow indication byte), it can be either 0x7F/0xFF with respect to write/read operation.

2.1.2.1 Write Sequence from the host (direction DH => PN5190)

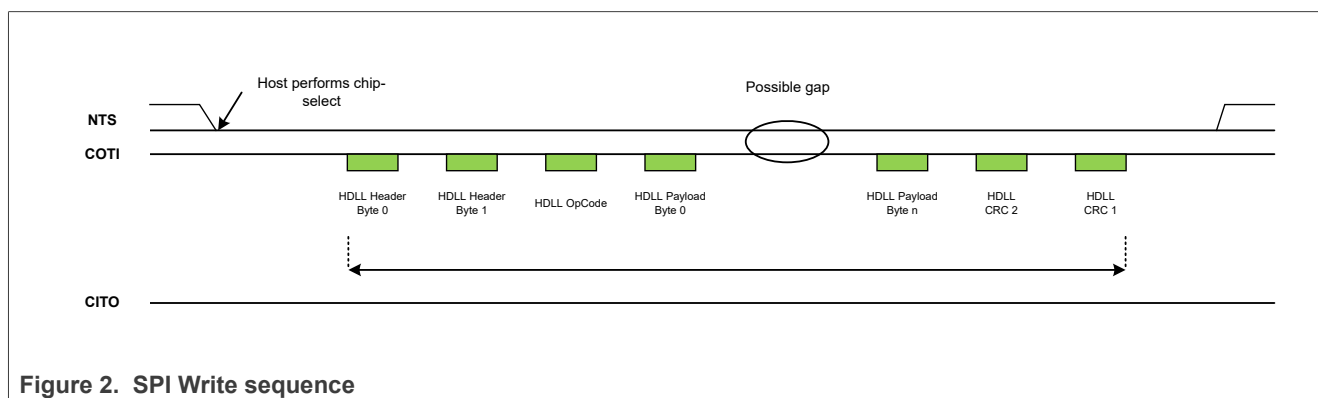


Figure 2. SPI Write sequence

2.1.2.2 Read Sequence from the host (Direction PN5190 => DH)

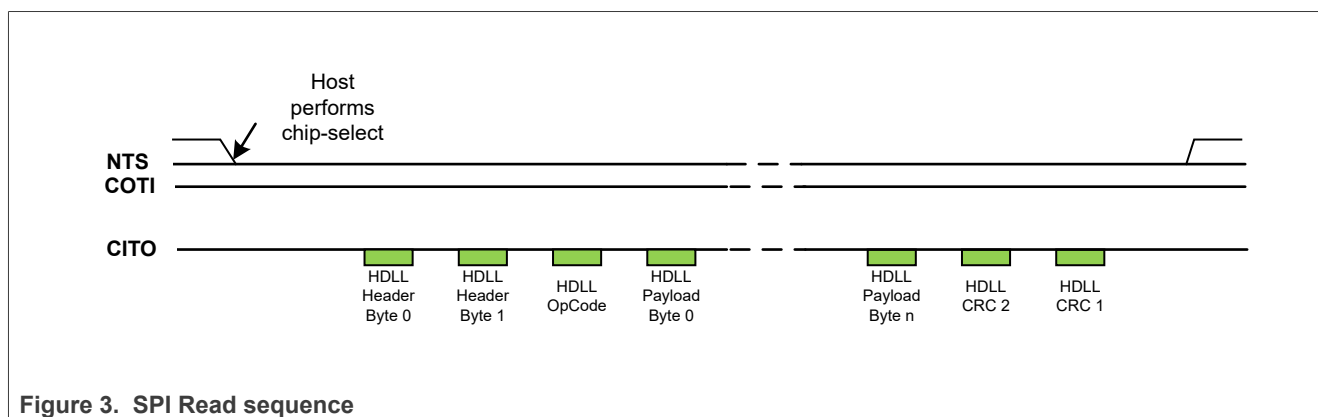


Figure 3. SPI Read sequence

2.1.3 HDLL protocol

HDLL is a command-response protocol. All the operations mentioned above are triggered through a specific command and validated based on the response.

Commands and responses follow HDLL message syntax, the command being sent by the device host, the response by the PN5190. The opcode indicates the command and response type.

HDLL-based communications, only used when the PN5190 is triggered to enter the **“Secure firmware download”** mode.

2.2 TLV mode

TLV stands for **Tag Length Value**.

2.2.1 Frame definition

A SPI frame starts with the falling edge of NTS and ends with the rising edge of NTS. SPI is per physical definition full duplex but PN5190 uses SPI in a half-duplex mode. SPI mode is limited to CPOL 0 and CPHA 0 with a max clock speed as specified in [ref.\[2\]](#). Every SPI frame is composed of a 1 byte header and n-bytes of body.

2.2.2 Flow indication

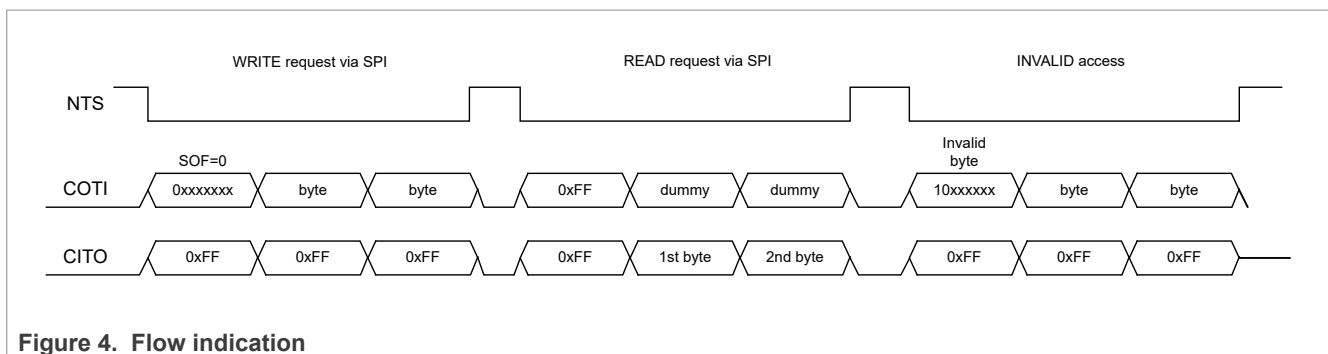


Figure 4. Flow indication

The HOST always sends as a first byte the flow indication byte, whether it wants to write or read data from the PN5190.

If there is a read request and no data is available, the response contains 0xFF.

The data after the flow indication byte is one or several messages.

For every NTS assertion, the first byte is always a HEADER (flow indication byte), it can be either 0x7F/0xFF with respect to write/read operation.

2.2.3 Message type

A host controller shall communicate with PN5190 using messages which are transported within SPI frames.

There are three different message types:

- Command
- Response
- Event

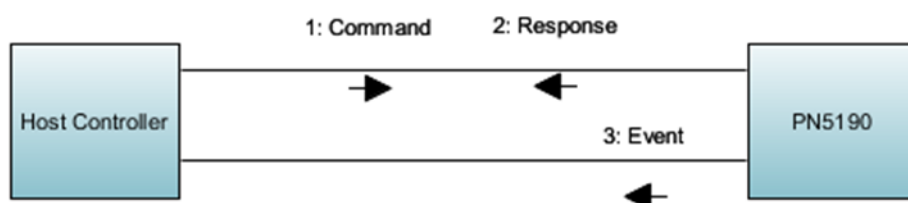


Figure 5. Communication of host controller

The communication diagram above shows the allowed directions for the different message types as below:

- Command and response.
- Commands are only sent from host controller to PN5190.
- Responses and events are only sent from PN5190 to host controller.
- Command responses are synchronized using the IRQ pin.
- Host can send the commands only when IRQ is low.
- Host can read the response/event only when IRQ is high.

2.2.3.1 Allowed sequences and rules

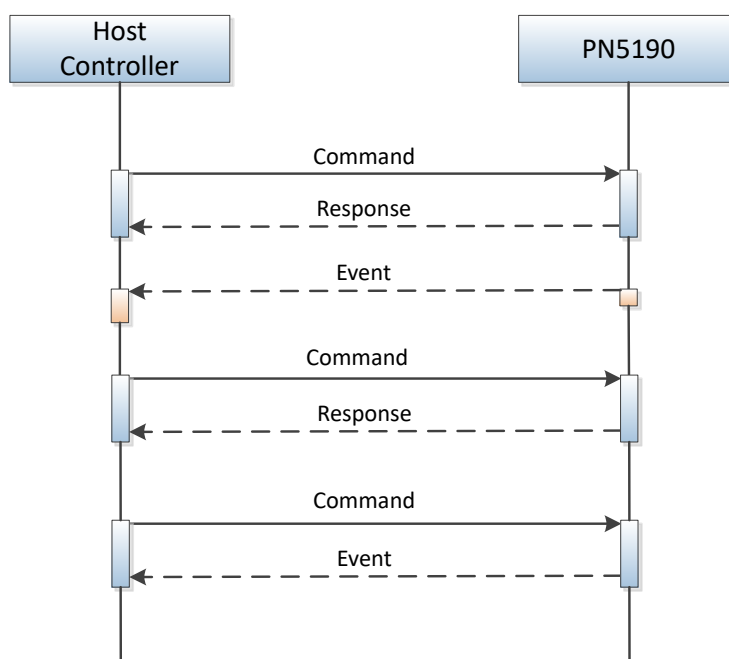


Figure 6. Allowed sequences and rules

Allowed sequences of command, response, and events

- A command is always acknowledged by a response, or an event, or both.
- Host controller is not allowed to send another command before have not received a response to the previous command.
- Events may be sent asynchronously at any time (NOT interleaved within a command/response pair).
- EVENT messages are never combined with the RESPONSE messages within one frame.

Note: The availability of a message (either RESPONSE or EVENT) is signaled with the IRQ going high, from low. IRQ stays high until all the response or event frame is read. Only after IRQ signal is low, the host can send the next command.

2.2.4 Message format

Each message is coded in a TLV structure with n-bytes payload for each message except for SWITCH_MODE_NORMAL command.

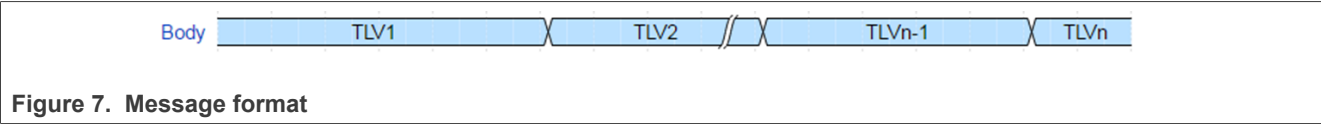


Figure 7. Message format

Each TLV is composed of:

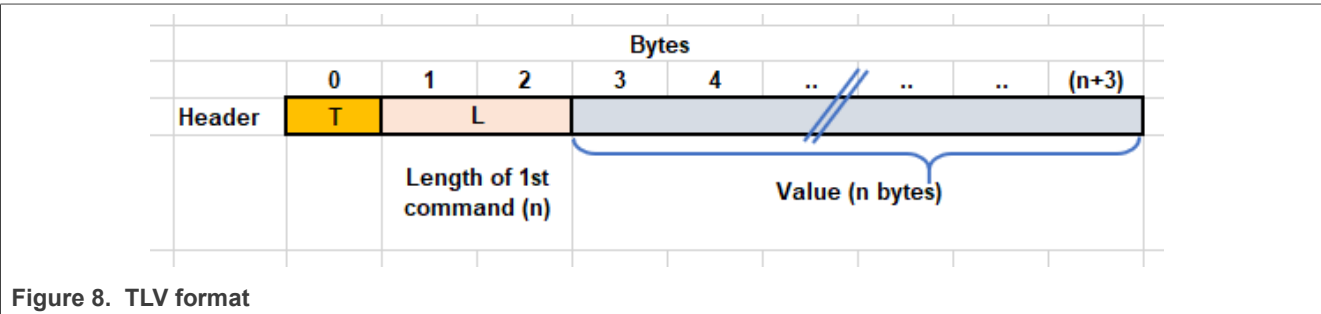


Figure 8. TLV format

Type (T) => 1 byte

Bit[7] Message Type

0: COMMAND or RESPONSE message

1: EVENT message

Bit[6:0]: Instruction code

Length (L) => 2 bytes (should be in big-endian format)

Value (V) => N bytes of value/data of the TLV (Command Parameters / Response data) based on Length field (big-endian format)

2.2.4.1 Split frame

COMMAND message must be sent in one SPI frame.

RESPONSE and EVENT messages can be read in multiple SPI frames, e.g. to read out the length byte.

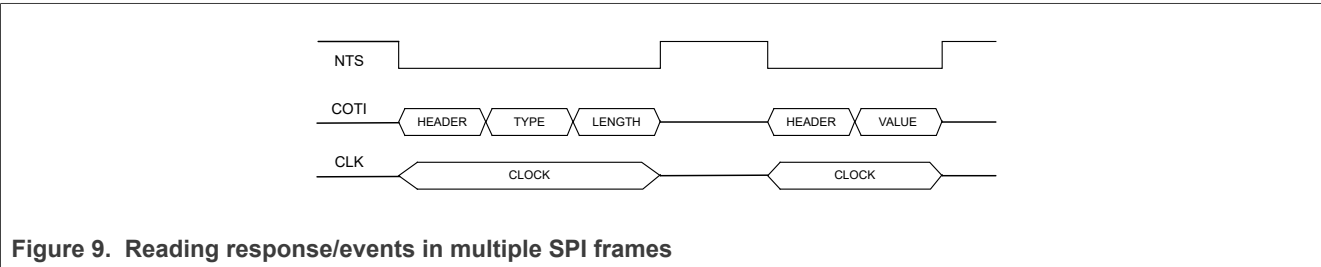


Figure 9. Reading response/events in multiple SPI frames

RESPONSE or EVENT messages can be read in single SPI frame but delayed by NO-CLOCK in between, e.g., to read out the length byte.

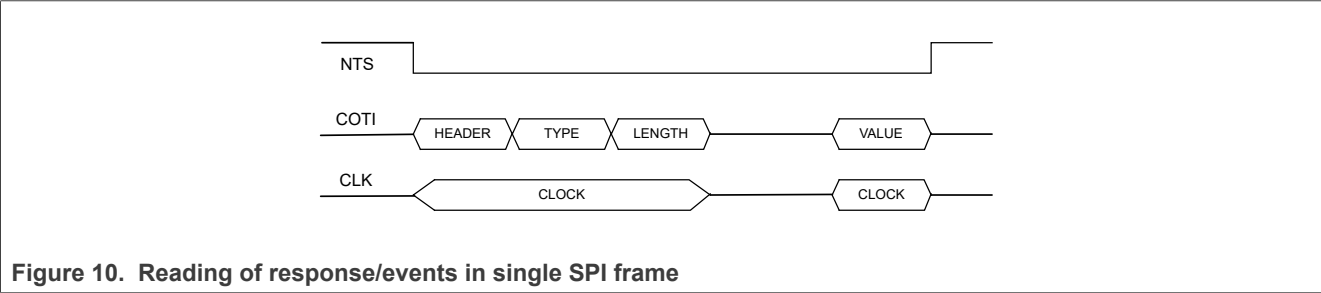


Figure 10. Reading of response/events in single SPI frame

3 IC operating boot mode - secured FW download mode

3.1 Introduction

Part of the PN5190 firmware code is permanently stored in the ROM, while the rest of the code and the data are stored in the embedded flash. User data is stored in flash and is protected by anti-tearing mechanisms that ensure the integrity and availability of the data. In order to provide NXPs' customers with features that are compliant with the latest standards (EMVCo, NFC Forum, and so on), both the code and user data in FLASH can be updated.

The authenticity and integrity of the encrypted firmware is protected by asymmetric/symmetric key signature and reverse chained hash mechanism. The first `DL_SEC_WRITE` command contains the hash of the second command and is protected by an RSA signature on the payload of first frame. PN5190 firmware uses the RSA public key to authenticate the first command. The chained hash in each command is used to authenticate the subsequent command, to ensure that the firmware code and data are not accessed by third parties.

The payloads of the `DL_SEC_WRITE` commands are encrypted with an AES-128 key. After authentication of each command, the payload content is decrypted and written to flash by PN5190 firmware.

For NXP firmware, NXP is in charge of delivering new secure firmware updates, together with new User data. The update procedure is equipped with a mechanism to protect the authenticity, integrity, and confidentiality of NXP code and data.

HDLL-based frame packet schema is used for all command and responses for secured firmware upgrade mode. The [Section 2.1](#) provides the overview of HDLL frame packet schema used.

PN5190 ICs supports both legacy encrypted secured FW download and hardware crypto assisted encrypted secure FW download protocol depending upon the variant used.

The two types are:

- Legacy secure FW download protocol that works with **PN5190 B0/B1 IC** version only.
- Hardware crypto assisted secure FW download protocol that works with **PN5190B2 IC** version only, that uses the on-chip hardware crypto blocks

The following sections explain the commands and responses of **Secure firmware download** mode.

3.2 How to trigger the “Secured firmware download” mode

Below diagram, and subsequent steps, show on how to trigger **Secured firmware download** mode.

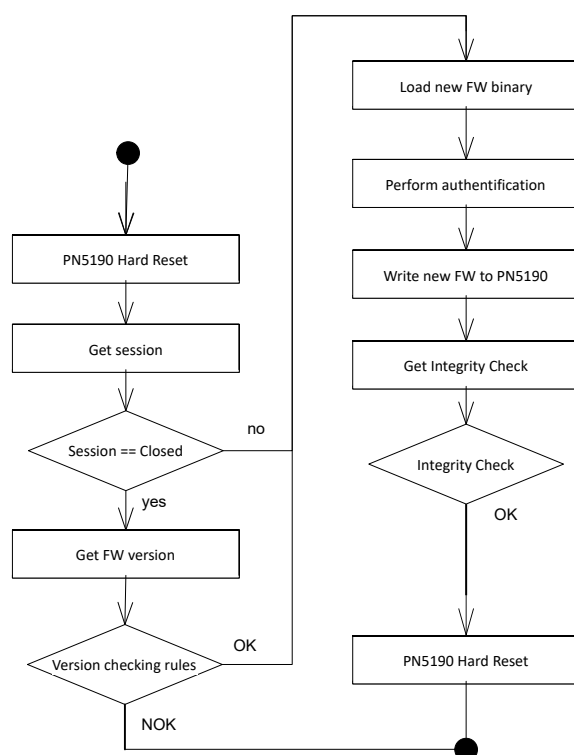


Figure 11. Procedure to enter Secured firmware download mode

Pre-condition: PN5190 is in Operation state.

Main scenario:

1. Entry condition where DWL_REQ pin is used to enter "Secured firmware download" mode.
 - a. Device host pulls DWL_REQ pin high (valid only if secure firmware update through DWL_REQ pin) OR
 - b. Device host performs a hard-reset to boot the PN5190
2. Entry condition where DWL_REQ pin is not used for entering into "Secured firmware download" mode (pinless download).
 - a. Device host performs a hard-reset to boot the PN5190
 - b. Device host sends SWITCH_MODE_NORMAL (Section 4.5.4.5) to enter into normal application mode.
 - c. Now when IC is in normal mode of application, Device host sends SWITCH_MODE_DOWNLOAD (Section 4.5.4.9) to enter into secure download mode.
3. Device host sends DL_GET_VERSION (Section 3.4.4), or DL_GET_DIE_ID (Section 3.4.6), or DL_GET_SESSION_STATE (Section 3.4.5) command.
4. Device host reads the current hardware and firmware version, session, Die-id from the device.
 - a. Device host checks session status if last download was completed
 - b. Device host applies the version checking rules to decide whether to start the download or exit download.
5. Device host loads from a file the firmware binary code to be downloaded
6. Device host provides a first DL_SEC_WRITE (Section 3.4.8) command that contains:
 - a. The version of the new firmware,
 - b. A 16-byte nonce of arbitrary values used for encryption key obfuscation
 - c. A digest value of the next frame,
 - d. The digital signature of the frame itself

7. The device host loads the secure download protocol sequence to the PN5190 with DL_SEC_WRITE (Section 3.4.8) commands
8. When the last DL_SEC_WRITE (Section 3.4.8) command has been sent, the device host executes the DL_CHECK_INTEGRITY (Section 3.4.7) command to check if the memories have been successfully written.
9. Device host reads the new firmware version and checks the session status if closed for reporting to the upper layer
10. Device host pulls the DWL_REQ pin to low (if DWL_REQ pin is used to enter download mode)
11. Device host performs hard reset (toggling VEN pin) on the device to reboot the PN5190

Post-condition: The firmware is updated; new firmware version number is reported.

3.3 Firmware signature and version control

In the PN5190 firmware download mode, a mechanism ensures that only a firmware signed and delivered by NXP will be accepted for NXP firmware.

Following is applicable only for the encrypted secure NXP firmware.

During a download session, a new 16 bits firmware version is sent. It is composed of a major and a minor number:

- Major number: 8 bits (MSB)
- Minor number: 8 bits (LSB)

Note: The PN5190 checks if the new major version number is bigger or equal to the current one. If not, the secured firmware download is rejected, and the session is kept closed.

3.4 HDLL commands for legacy encrypted download and hardware crypto assisted encrypted download

This section provides the information about the commands and responses that were used for both types of downloads for NXP firmware download.

3.4.1 HDLL Command OP codes

Note: HDLL command frames are 4 bytes aligned. Unused payload bytes are left nil.

Table 1. List of HDLL command OP codes

PN5190 B0/ B1 (Legacy download)	PN5190 B2 (Crypto assisted download)	Command Alias	Description
0xF0	0xE5	DL_RESET	Performs a soft reset
0xF1	0xE1	DL_GET_VERSION	Returns the version numbers
0xF2	0xDB	DL_GET_SESSION_STATE	Returns the current session state
0xF4	0xDF	DL_GET_DIE_ID	Returns the die ID
0xE0	0xE7	DL_CHECK_INTEGRITY	Checks and return the CRCs over the different areas as well as pass/fail status flags for each
0xC0	0x8C	DL_SEC_WRITE	Writes x bytes to memory starting at absolute address y

3.4.2 HDLL Response Opcodes

Note: HDLL response frames are 4 bytes aligned. Unused payload bytes are left nil. Only DL_OK responses can contain payload values.

Table 2. List of HDLL response OP codes

Opcode	Response Alias	Description
0x00	DL_OK	Command passed
0x01	DL_INVALID_ADDR	Address not allowed
0x0B	DL_UNKNOW_CMD	Unknown command
0x0C	DL_ABORTED_CMD	Chunk sequence is too large
0x1E	DL_ADDR_RANGE_OFL_ERROR	Address out of range
0x1F	DL_BUFFER_OFL_ERROR	Buffer is too small
0x20	DL_MEM_BSY	Memory busy
0x21	DL_SIGNATURE_ERROR	Signature mismatch
0x24	DL_FIRMWARE_VERSION_ERROR	Current version equal or higher
0x28	DL_PROTOCOL_ERROR	Protocol error
0x2A	DL_SFWU_DEGRADED	Flash data corruption
0x2D	PH_STATUS_DL_FIRST_CHUNK	First chunk received
0x2E	PH_STATUS_DL_NEXT_CHUNK	Wait for the next chunk
0xC5	PH_STATUS_INTERNAL_ERROR_5	Length mismatch

3.4.3 DL_RESET command

Frame exchange:

PN5190 B0/B1: [HDLL] -> [0x00 0x04 0xF0 0x00 0x00 0x00 0x18 0x5B]

PN5190 B2: [HDLL] -> [0x00 0x04 0xE5 0x00 0x00 0x00 0xBF 0xB9]

[HDLL] <- [0x00 0x04 STAT 0x00 CRC16]

The reset prevents the PN5190 from sending the DL_STATUS_OK answer. Therefore, only erroneous status can be received.

STAT is the return status.

3.4.4 DL_GET_VERSION command

Frame exchange:

PN5190 B0/B1: [HDLL] -> [0x00 0x04 0xF1 0x00 0x00 0x00 0x6E 0xEF]

PN5190 B2: [HDLL] -> [0x00 0x04 0xE1 0x00 0x00 0x00 0x75 0x48]

[HDLL] <- [0x00 0x08 STAT HW_V RO_V MODEL_ID FM1V FM2V RFU1 RFU2 CRC16]

The payload frame of the GetVersion response is:

Table 3. Response to the GetVersion command

Field	Byte	Description
STAT	1	Status

Table 3. Response to the GetVersion command ...continued

Field	Byte	Description
HW_V	2	Hardware version
RO_V	3	ROM code
MODEL_ID	4	Model ID
FMxV	5-6	Firmware version (used for download)
RFU1-RFU2	7-8	-

Expected values of different fields of response and their mapping is as below:

Table 4. Expected values of the response of the GetVersion command

IC Type	HW Version (hex)	ROM Version (hex)	Model ID (hex)	FW Version (hex)
PN5190 B0	0x51	0x02	0x00	xx.yy
PN5190 B1	0x52	0x02	0x00	xx.yy
PN5190 B2	0x53	0x03	0x00	xx.yy

3.4.5 DL_GET_SESSION_STATE command

Frame exchange:

PN5190 B0/B1: [HDLL] -> [0x00 0x04 0xF2 0x00 0x00 0x00 0xF5 0x33]

PN5190 B2: [HDLL] -> [0x00 0x04 0xDB 0x00 0x00 0x00 0x31 0x0A]

[HDLL] <- [0x00 0x04 STAT SSTA RFU CRC16]

The payload frame of the GetSession response is:

Table 5. Response to the GetSession command

Field	Byte	Description
STAT	1	Status
SSTA	2	Session state <ul style="list-style-type: none"> 0x00: closed 0x01: open 0x02: locked (download no more allowed)
RFU	3-4	

3.4.6 DL_GET_DIE_ID command

Frame exchange:

PN5190 B0/B1: [HDLL] -> [0x00 0x04 0xF4 0x00 0x00 0x00 0xD2 0xAA]

PN5190 B2: [HDLL] -> [0x00 0x04 0xDF 0x00 0x00 0x00 0xFB 0xFB]

[HDLL] <- [0x00 0x14 STAT 0x00 0x00 0x00 ID0 ID1 ID2 ID3 ID4 ID5 ID6 ID7 ID8 ID9 ID10 ID11 ID12 ID13 ID14 ID15 CRC16]

The payload frame of the GetDield response is:

Table 6. Response to the GetDiel command

Field	Byte	Description
STAT	1	Status
RFU	2-4	
DIEID	5-20	ID of the die (16 bytes)

3.4.7 DL_CHECK_INTEGRITY command

Frame exchange:

PN5190 B0/B1: [HDLL] -> [0x00 0x04 0xE0 0x00 0x00 0x00 CRC16]

PN5190 B2: [HDLL] -> [0x00 0x04 0xE7 0x00 0x00 0x00 0x52 0xD1]

[HDLL] <- [0x00 0x20 STAT LEN_DATA LEN_CODE 0x00 [CRC_INFO] [CRC32] CRC16]

The payload frame of the CheckIntegrity response is:

Table 7. Response to the CheckIntegrity command

Field	Byte	Value/Description	
STAT	1	Status	
LEN_DATA	2	Total number of data sections	
LEN_CODE	3	Total number of code sections	
RFU	4	Reserved	
[CRC_INFO]	5-8	32 bits (little-endian). If a bit is set, the CRC of the corresponding section is OK, otherwise Not OK.	
		Bit	Area integrity status
		[31:28]	Reserved [3]
		[27:23]	Reserved [1]
		[22]	Reserved [3]
		[21:20]	Reserved [1]
		[19]	RF configuration area (PN5190 B0/B1) [2] Reserved (PN5190 B2) [3]
		[18]	Protocol configuration area (PN5190 B0/B1) [2] RF configuration area (PN5190 B2) [2]
		[17]	Reserved (PN5190 B0/B1) [3] User configuration area (PN5190 B2) [2]
		[16:6]	Reserved [3]
		[5:4]	Reserved For PN5190 B0/B1 [3] Reserved For PN5190 B2 [1]
		[3:0]	Reserved [1]
[CRC32]	9-136	CRC32 of the 32 sections. Each CRC is of 4 bytes stored in little-endian format. First 4 bytes of CRC is of bit CRC_INFO[31], next 4 bytes of CRC is of bit CRC_INFO[30] and so on.	

Note:

- **[1]** This bit must be 1 for the PN5190 to function properly (with features and or encrypted FW download).
- **[2]** This bit is set to 1 by default, but user modified settings invalidate the CRC. No effect on PN5190 functionality..
- **[3]** This bit value, even if it is 0, is not relevant. This bit value can be ignored..

3.4.8 DL_SEC_WRITE command

The DL_SEC_WRITE command is to be considered in the context of a sequence of secure write commands: the encrypted “secured firmware download” (often referred to as eSFWu).

The secure write command first opens the download session and passes the RSA authentication. The next ones are passing encrypted addresses and bytes to write into the PN5190 Flash. All but the last one contains the next ones hash, therefore informing they are not the last, and cryptographically bonding the sequence frames together.

Other commands (except DL_RESET and DL_CHECK_INTEGRITY) can be inserted between the secured write commands of a sequence without breaking it.

3.4.8.1 First DL_SEC_WRITE command

A secured write command is the first one if and only if:

1. The frame length is 312 bytes
2. No secured write command has been received since last reset.
3. The embedded signature is successfully verified by the PN5190.

The response to the first frame command would be as below:

```
[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]
```

STAT is the return status.

Note: At least one chunk of data must be written during a eSFWu even though the data written may only be one-byte long. Therefore, the first command will always contain the hash of the next command, since there will at least be two commands.

3.4.8.2 Middle DL_SEC_WRITE commands

A secured write command is a ‘middle one’ if and only if:

1. The opcode is as described in [Section 3.4.1](#) for DL_SEC_WRITE command.
2. A first secured write command has already been received and successfully verified before
3. No reset has occurred since receiving the first secured write command
4. The frame length is equal to the data size + header size + hash size: $FLEN = SIZE + 6 + 32$
5. The digest of the whole frame is equal to the hash value received in the previous frame

The response to the first frame command would be as below:

```
[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]
```

STAT is the return status.

3.4.8.3 Last DL_SEC_WRITE command

A secured write command is the last one if and only if:

1. The opcode is as described in [Section 3.4.1](#) for DL_SEC_WRITE command.
2. A first secured write command has already been received and successfully verified before

3. No reset has occurred since receiving the first secured write command
4. The frame length is equal to the data size + header size: $FLEN = SIZE + 6$
5. The digest of the whole frame is equal to the hash value received in the previous frame

The response to the first frame command would be as below:

```
[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]
```

STAT is the return status.

4 IC operating boot mode - Normal Operation mode

4.1 Introduction

Generally PN5190 IC must be in normal mode of operation to get the NFC functionality from it.

When PN5190 IC boots, it is always waiting for commands to be received from a host to perform operation, unless events generated within PN5190 IC resulted in PN5190 IC boot.

4.2 Commands list overview

Table 8. PN5190 command list

Command code	Command name
0x00	WRITE_REGISTER
0x01	WRITE_REGISTER_OR_MASK
0x02	WRITE_REGISTER_AND_MASK
0x03	WRITE_REGISTER_MULTIPLE
0x04	READ_REGISTER
0x05	READ_REGISTER_MULTIPLE
0x06	WRITE_E2PROM
0x07	READ_E2PROM
0x08	TRANSMIT_RF_DATA
0x09	RETRIEVE_RF_DATA
0x0A	EXCHANGE_RF_DATA
0x0B	MFC_AUTHENTICATE
0x0C	EPC_GEN2_INVENTORY
0x0D	LOAD_RF_CONFIGURATION
0x0E	UPDATE_RF_CONFIGURATION
0x0F	GET_RF_CONFIGURATION
0x10	RF_ON
0x11	RF_OFF
0x12	CONFIGURE_TESTBUS_DIGITAL
0x13	CONFIGURE_TESTBUS_ANALOG
0x14	CTS_ENABLE
0x15	CTS_CONFIGURE
0x16	CTS_RETRIEVE_LOG
0x17-0x18	RFU
0x19	up to FW v2.01: RFU
	from FW v2.03 onwards: RETRIEVE_RF_FELICA_EMD_DATA
0x1A	RECEIVE_RF_DATA
0x1B-0x1F	RFU

Table 8. PN5190 command list...continued

Command code	Command name
0x20	SWITCH_MODE_NORMAL
0x21	SWITCH_MODE_AUTOCOLL
0x22	SWITCH_MODE_STANDBY
0x23	SWITCH_MODE_LPCD
0x24	RFU
0x25	SWITCH_MODE_DOWNLOAD
0x26	GET_DIEID
0x27	GET_VERSION
0x28	RFU
0x29	up to FW v2.05: RFU
	from FW v2.06 onwards: GET_CRC_USER_AREA
0x2A	up to FW v2.03: RFU
	from FW v2.05 onwards: CONFIGURE_MULTIPLE_TESTBUS_DIGITAL
0x2B	up to FW v2.09: RFU
	from FW v2.0A onwards: CTS_FAST_CONFIGURE
0x2C–0x3F	RFU
0x40	ANTENNA_SELF_TEST (Not Supported)
0x41	PRBS_TEST
0x42–0x4F	RFU

4.3 Response status values

Following are the response status values, that are returned as part of the response from PN5190 after the command is operationalized.

Table 9. PN5190 response status values

Response status	Response status value	Description
PN5190_STATUS_SUCCESS	0x00	Indicates that operation completed successfully
PN5190_STATUS_TIMEOUT	0x01	Indicates that the operation of the command resulted in timeout
PN5190_STATUS_INTEGRITY_ERROR	0x02	Indicates that the operation of the command resulted in RF data integrity error
PN5190_STATUS_RF_COLLISION_ERROR	0x03	Indicates that the operation of the command resulted in RF collision error
PN5190_STATUS_RFU1	0x04	Reserved
PN5190_STATUS_INVALID_COMMAND	0x05	Indicates that the given command is invalid/not implemented
PN5190_STATUS_RFU2	0x06	Reserved

Table 9. PN5190 response status values...continued

Response status	Response status value	Description
PN5190_STATUS_AUTH_ERROR	0x07	Indicates that MFC authentication failed (permission denied)
PN5190_STATUS_MEMORY_ERROR	0x08	Indicates that the operation of the command resulted in a programming error or internal memory error
PN5190_STATUS_RFU4	0x09	Reserved
PN5190_STATUS_NO_RF_FIELD	0x0A	Indicates that there no or error in internal RF field presence (applicable only if initiator/reader mode)
PN5190_STATUS_RFU5	0x0B	Reserved
PN5190_STATUS_SYNTAX_ERROR	0x0C	Indicates that invalid command frame length is received
PN5190_STATUS_RESOURCE_ERROR	0x0D	Indicates that an internal resource error occurred
PN5190_STATUS_RFU6	0x0E	Reserved
PN5190_STATUS_RFU7	0x0F	Reserved
PN5190_STATUS_EXTERNAL_RF_FIELD	0x10	In reader mode, it indicates that external RF field is present. In card/target mode, this indicates that external RF is not present during the execution of the command.
PN5190_STATUS_RX_TIMEOUT	0x11	Indicates that data is not received after RFExchange is initiated and RX is timed out.
PN5190_STATUS_USER_CANCELLED	0x12	Indicates that the present command in-progress is aborted
PN5190_STATUS_PREVENT_STANDBY	0x13	Indicates that PN5190 is prevented to go into Standby mode
PN5190_STATUS_RFU9	0x14	Reserved
PN5190_STATUS_CLOCK_ERROR	0x15	Indicates that clock to the CLIF did not start
PN5190_STATUS_RFU10	0x16	Reserved
PN5190_STATUS_PRBS_ERROR	0x17	Indicates that the PRBS command returned an error
PN5190_STATUS_INSTR_ERROR	0x18	Indicates that operation of the command is failed (it may include, the error in instruction parameters, syntax error, error in operation itself, pre-requirements for the instruction is not met etc.)
PN5190_STATUS_ACCESS_DENIED	0x19	Indicates that access to internal memory is denied
PN5190_STATUS_TX_FAILURE	0x1A	Indicates that TX over RF is failed
PN5190_STATUS_NO_ANTENNA	0x1B	Indicates that no antenna is connected/present
PN5190_STATUS_TXLDO_ERROR	0x1C	Indicates that there is an error in TXLDO when the VUP is not available and RF is switched ON.
PN5190_STATUS_RFCFG_NOT_APPLIED	0x1D	Indicates that RF configuration is not loaded when RF is switched ON
PN5190_STATUS_TIMEOUT_WITH_EMD_ERROR	0x1E	up to FW 2.01: not expected
		from FW 2.03 onwards:

Table 9. PN5190 response status values...continued

Response status	Response status value	Description
		Indicates that during Exchange with LOG ENABLE BIT is set in FeliCa EMD register, FeliCa EMD Error was observed
PN5190_STATUS_INTERNAL_ERROR	0x7F	Indicates that the NVM operation failed
PN5190_STATUS_SUCCSES_CHAINING	0xAF	Indicates that, furthermore data is pending to be read

4.4 Events Overview

There are two ways events are notified to the host.

4.4.1 Normal events over IRQ pin

These events are categories as below:

1. Always enabled – Host is always notified
2. Controlled by Host – Host is notified, if the respective Event Enable bit is set in the register (EVENT_ENABLE (01h)).

Low-level interrupts from the peripheral IPs including the CLIF shall be completely handled within the firmware and host shall be notified only of the events listed in the events section.

Firmware implements two event registers as RAM registers that can be written / Read using [Section 4.5.1.1](#) / [Section 4.5.1.5](#) commands.

The register EVENT_ENABLE (0x01) => Enable specific/all event notifications.

The register EVENT_STATUS (0x02) => Part of the Event message payload.

Events shall be cleared by the host once the event message is read-out by the host.

Events are asynchronous in nature and are notified to the host, if they are enabled within the EVENT_ENABLE register.

Following is the list of events that shall be available to the host as part of event message.

Table 10. PN5190 events (contents of EVENT_STATUS)

Bit - Range		Field ref.[1]	Always Enabled (Y/N)
31	12	RFU	NA
11	11	CTS_EVENT ref.[2]	N
10	10	IDLE_EVENT	Y
9	9	LPCD_CALIBRATION_DONE_EVENT	Y
8	8	LPCD_EVENT	Y
7	7	AUTOCOLL_EVENT	Y
6	6	TIMER0_EVENT	N
5	5	TX_OVERCURRENT_EVENT	N
4	4	RFON_DET_EVENT ref.[2]	N
3	3	RFOFF_DET_EVENT ref.[2]	N
2	2	STANDBY_PREV_EVENT	Y

Table 10. PN5190 events (contents of EVENT_STATUS)...continued

Bit - Range		Field ref.[1]	Always Enabled (Y/N)
1	1	GENERAL_ERROR_EVENT	Y
0	0	BOOT_EVENT	Y

Note:

- [1] Note that no two events are clubbed except in case of errors. In case of errors during the operation, functional event (e.g. BOOT_EVENT, AUTOCALL_EVENT etc.) and GENERAL_ERROR_EVENT will be set.
- [2] This event will automatically be disabled after it is posted to the host. The host should enable again these events if it wishes to get these events notified to it.

4.4.1.1 Event message formats

The event message format differs depending upon the occurrences of an event and different state of the PN5190.

Host must read tag (T) and length of the message (L) and then read the corresponding number of bytes as value (V) of the events.

In general, the event message (see [Figure 12](#)) contains the EVENT_STATUS as defined in [Table 11](#) and event data corresponds to the respective event bit set in EVENT_STATUS.

Note:

For some events, payload does not exist. For e.g. If TIMER0_EVENT is triggered, only EVENT_STATUS is provided as part of the event message.

The [Table 11](#) also details out whether the event data is present for the corresponding event in the event message.

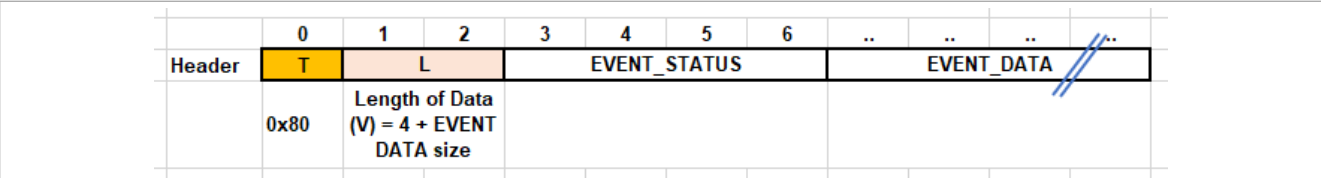


Figure 12. Event message format when no errors occurred

GENERAL_ERROR_EVENT may also occur with other events.

In this scenario, the event message (see [Figure 13](#)) contains the EVENT_STATUS as defined in [Table 11](#) and GENERAL_ERROR_STATUS_DATA as defined in [Table 14](#) and then the event data corresponds to the respective event bit set in EVENT_STATUS as defined in [Table 11](#).

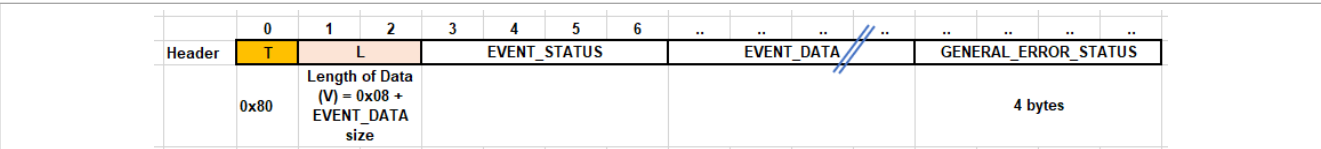


Figure 13. Event message format when an error occurred

Note:

Only after the BOOT_EVENT or after POR, STANDBY, ULPCD, the host will be able to work in the normal operation mode by issuing the commands listed above.

In case of aborting an existing running command, only after `IDLE_EVENT`, the host will be able to work in the normal operation mode by issuing the commands listed above.

4.4.1.2 Different EVENT status definitions

4.4.1.2.1 Bit definitions for EVENT_STATUS

Table 11. Definitions for EVENT_STATUS bits

Bit (To – From)		Event	Description	Event data of the corresponding event (if any)
31	12	RFU	Reserved	
11	11	CTS_EVENT	This bit is set, when CTS event is generated.	Table 84
10	10	IDLE_EVENT	This bit is set, when the ongoing command is canceled due to issue of SWITCH_MODE_NORMAL command.	No event data
9	9	LPCD_CALIBRATION_DONE_EVENT	This bit is set when the LPCD calibration-done event is generated.	Table 16
8	8	LPCD_EVENT	This bit is set, when the LPCD event is generated.	Table 15
7	7	AUTOCOLL_EVENT	This bit is set, when the AUTOCOLL operation is completed.	Table 51
6	6	TIMER0_EVENT	This bit is set, when the TIMER0 event is occurred.	No event data
5	5	TX_OVERCURRENT_ERROR_EVENT	This bit is set, when the current on the TX driver is higher than the defined threshold in the EEPROM. Upon this condition, the field is automatically switched OFF before the notification to the host. Please refer to Section 4.4.2.2 .	No event data
4	4	RFON_DET_EVENT	This bit is set, when the external RF field is detected.	No event data
3	3	RFOFF_DET_EVENT	This bit is set, when already existing external RF field disappears.	No event data
2	2	STANDBY_PREV_EVENT	This bit is set, when standby is prevented because of prevention conditions exist	Table 13
1	1	GENERAL_ERROR_EVENT	This bit is set, when any general error conditions exist	Table 14
0	0	BOOT_EVENT	This bit is set, when PN5190 is booted with POR/Standby	Table 12

4.4.1.2.2 Bit definitions for BOOT_STATUS_DATA

Table 12. Definitions for BOOT_STATUS_DATA bits

Bit to	Bit From	Boot status	Boot reason due to
31	27	RFU	Reserved

Table 12. Definitions for BOOT_STATUS_DATA bits...continued

Bit to	Bit From	Boot status	Boot reason due to
26	26	ULP_STANDBY	Bootup Reason due to exiting from ULP_STANDBY.
25	23	RFU	Reserved
22	22	BOOT_RX_ULPDET	RX ULPDET resulted in boot in ULP-Standby mode
21	21	RFU	Reserved
20	20	BOOT_SPI	Bootup Reason due to SPI_NTS signal being pulled low
19	17	RFU	Reserved
16	16	BOOT_GPIO3	Bootup Reason due to transitioning of GPIO3 from low to high.
15	15	BOOT_GPIO2	Bootup Reason due to transitioning of GPIO2 from low to high.
14	14	BOOT_GPIO1	Bootup Reason due to transitioning of GPIO1 from low to high.
13	13	BOOT_GPIO0	Bootup Reason due to transitioning of GPIO0 from low to high.
12	12	BOOT_LPDET	Bootup Reason due to external RF field presence during STANDBY/SUSPEND
11	11	RFU	Reserved
10	8	RFU	Reserved
7	7	BOOT_SOFT_RESET	Bootup Reason due to soft reset of IC
6	6	BOOT_VDDIO_LOSS	Bootup Reason due to loss of VDDIO. Refer to Section 4.4.2.3
5	5	BOOT_VDDIO_START	Bootup Reason if STANDBY entered with VDDIO LOSS. Refer to Section 4.4.2.3
4	4	BOOT_WUC	Bootup Reason due to wake-up counter elapsed during either STANDBY operation.
3	3	BOOT_TEMP	Bootup Reason due to IC temperature is more than the configured threshold limit. Please refer to Section 4.4.2.1
2	2	BOOT_WDG	Bootup Reason due to watchdog reset
1	1	RFU	Reserved
0	0	BOOT_POR	Bootup Reason due power-on reset

4.4.1.2.3 Bit definitions for STANDBY_PREV_STATUS_DATA

Table 13. Definitions for STANDBY_PREV_STATUS_DATA bits

Bit to	Bit From	Standby prevention	Standby prevented due to
31	26	RFU	RESERVED
25	25	RFU	RESERVED
24	24	PREV_TEMP	ICs operating temperature is out of threshold
23	23	RFU	RESERVED
22	22	PREV_HOSTCOMM	Host interface communication

Table 13. Definitions for STANDBY_PREV_STATUS_DATA bits...continued

Bit to	Bit From	Standby prevention	Standby prevented due to
21	21	PREV_SPI	SPI_NTS signal being pulled low
20	18	RFU	RESERVED
17	17	PREV_GPIO3	GPIO3 signal transitioning from low to high
16	16	PREV_GPIO2	GPIO2 signal transitioning from low to high
15	15	PREV_GPIO1	GPIO1 signal transitioning from low to high
14	14	PREV_GPIO0	GPIO0 signal transitioning from low to high
13	13	PREV_WUC	Wake-up counter elapsed
12	12	PREV_LPDET	Low-power detection. Occurs when an external RF signal is detected in the process of going into standby.
11	11	PREV_RX_ULPDET	RX ultra-low power detection. Occurs when RF signal is detected in the process of going to ULP_STANDBY.
10	10	RFU	RESERVED
9	5	RFU	RESERVED
4	4	RFU	RESERVED
3	3	RFU	RESERVED
2	2	RFU	RESERVED
1	1	RFU	RESERVED
0	0	RFU	RESERVED

4.4.1.2.4 Bit definitions for GENERAL_ERROR_STATUS_DATA

Table 14. Definitions for GENERAL_ERROR_STATUS_DATA bits

Bit to	Bit from	Error status	Description
31	6	RFU	Reserved
5	5	XTAL_START_ERROR	XTAL start failed during boot
4	4	SYS_TRIM_RECOVERY_ERROR	Internal system trim memory error occurred, but recovery is failed. System works in downgraded mode.
3	3	SYS_TRIM_RECOVERY_SUCCESS	Internal system trim memory error occurred, and recovery was successful. Host must perform reboot of the PN5190 for the recovery to take effect.
2	2	TXLDO_ERROR	TXLDO error
1	1	CLOCK_ERROR	Clock error
0	0	GPADC_ERROR	ADC error

4.4.1.2.5 Bit definitions for LPCD_STATUS_DATA

Table 15. Definitions for LPCD_STATUS_DATA bytes

Bit to	Bit From	Status bits applicability as per the underlying operation of LPCD or ULPCD			Description for the corresponding bit is set in status byte.
			LPCD	ULPCD	
31	7	RFU			Reserved
6	6	Abort_HIF	Y	N	Aborted due to HIF activity
5	5	CLKDET error	N	Y	Aborted due to CLKDET error occurred
4	4	XTAL Timeout	N	Y	Aborted due to XTAL Timeout occurred
3	3	VDDPA LDO Overcurrent	N	Y	Aborted due to VDDPA LDO overcurrent occurred
2	2	External RF field	Y	Y	Aborted due to external RF field
1	1	GPIO3 Abort	N	Y	Aborted due to GPIO3 level change
0	0	Card Detected	Y	Y	Card is detected

4.4.1.2.6 Bit definitions for LPCD_CALIBRATION_DONE Status data

Table 16. Definitions for LPCD_CALIBRATION_DONE status data bytes for ULPCD

Bit to	Bit From	Status of LPCD_CALIBRATION DONE event	Description for the corresponding bit is set in status byte.
31	11		Reserved
10	0	Reference value from ULPCD calibration	The measured RSSI value during ULPCD calibration which is used as reference during ULPCD

Table 17. Definitions for LPCD_CALIBRATION_DONE status data bytes for LPCD

Bit to	Bit From	Status of LPCD_CALIBRATION DONE event	Description for the corresponding bit is set in status byte.
31	16	Channel 1 reference	The measured channel 1 values during LPCD calibration
15	0	Channel 0 reference	The measured channel 0 values during LPCD calibration

4.4.2 Handling of different boot scenarios

The PN5190 IC handles different error conditions related to IC parameters as below.

4.4.2.1 Handling of over temperature scenario when PN5190 is under operation

Whenever the PN5190 IC's internal temperature is reaching to the threshold value as configured in the EEPROM field `TEMP_WARNING` [ref.\[2\]](#), the IC enters into the standby. And consequently if EEPROM field `ENABLE_GPIO0_ON_OVERTEMP` [ref.\[2\]](#) is configured to raise a notification to the host, then `GPIO0` will be pulled high to notify the IC over temperature.

As and when the IC temperature falls below the threshold value as configured in the EEPROM field `TEMP_WARNING` [ref.\[2\]](#), the IC will bootup with `BOOT_EVENT` as in [Table 11](#) and `BOOT_TEMP` boot status bit is set as in [Table 12](#) and GPIO0 will be pulled low.

4.4.2.2 Handling of overcurrent

If PN5190 IC senses the overcurrent condition, the IC switches off RF power and sends the `TX_OVERCURRENT_ERROR_EVENT` as in [Table 11](#).

The duration of the overcurrent condition can be controlled by modifying the EEPROM field `TXLDO_CONFIG` [ref.\[2\]](#).

For information on IC over current threshold, refer to document [ref.\[2\]](#).

Note:

If there are any other pending events or response, they will be sent to the host.

4.4.2.3 Loss of VDDIO during operation

If PN5190 IC encounters that there is no VDDIO (VDDIO loss), the IC enters into standby.

IC boots only when the VDDIO is available, with `BOOT_EVENT` as in [Table 11](#) and `BOOT_VDDIO_START` boot status bit is set as in [Table 12](#).

For information on PN5190 IC static characteristics, refer to document [ref.\[2\]](#).

4.4.3 Handling of abort scenarios

The PN5190 IC has a support of aborting the present executing commands and the behavior of the PN5190 IC, when such abort command such as [Section 4.5.4.5.2](#) is sent to PN5190 IC is as shown in [Table 18](#).

Note:

When PN5190 IC is in ULPCD and ULP-Standby mode, it cannot be aborted either by sending a [Section 4.5.4.5.2](#) OR by starting a SPI transaction (by pulling low on SPI_NTS signal).

Table 18. Expected event response when different commands terminated with [Section 4.5.4.5.2](#)

Commands	Behavior when Switch Mode Normal command is sent
All commands where low power is not entered	<code>EVENT_STAUS</code> is set to "IDLE_EVENT"
Switch Mode LPCD	<code>EVENT_STATUS</code> is set to "LPCD_EVENT" with "LPCD_STATUS_DATA" indicating status bits as "Abort_HIF"
Switch Mode Standby	<code>EVENT_STAUS</code> is set to "BOOT_EVENT" with "BOOT_STATUS_DATA" indicating bits "BOOT_SPI"
Switch Mode Autocoll(No Autonomous mode, autonomous mode with standby and autonomous mode without standby)	<code>EVENT_STAUS</code> is set to "AUTOCOLL_EVENT" with <code>STATUS_DATA</code> bits indicating command was user canceled.

4.5 Normal Mode Operation Instruction Details

4.5.1 Register Manipulation

Instructions of this section are used to access the logical registers of PN5190.

4.5.1.1 WRITE_REGISTER

This instruction is used to write a 32-bit value (little-endian) to a logical register.

4.5.1.1.1 Conditions

The address of the register must exist, and the register must either have the READ-WRITE or WRITE-ONLY attribute.

4.5.1.1.2 Command

Table 19. WRITE_REGISTER command value

Write a 32-Bit value to a register.

Payload Field	Length	Value/Description
Register Address	1 Byte	Address of the register.
Value	4 Bytes	32-Bit register value which must be written. (Little-endian)

4.5.1.1.3 Response

Table 20. WRITE_REGISTER response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.5.1.1.4 Event

There are no events for this command.

4.5.1.2 WRITE_REGISTER_OR_MASK

This instruction is used to modify the content of register using a logical OR operation. The content of the register is read and a logical OR operation is performed with the provided mask. The modified content is written back to the register.

4.5.1.2.1 Conditions

The address of the register must exist, and the register must have the READ-WRITE attribute.

4.5.1.2.2 Command

Table 21. WRITE_REGISTER_OR_MASK command value

Perform a logical OR operation on a register using provided mask.

Payload field	Length	Value/description
Register Address	1 Byte	Address of the register.
Mask	4 Bytes	Bitmask used as operand for logical OR operation. (Little-endian)

4.5.1.2.3 Response

Table 22. WRITE_REGISTER_OR_MASK response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.5.1.2.4 Event

There are no events for this command.

4.5.1.3 WRITE_REGISTER_AND_MASK

This instruction is used to modify the content of register using a logical AND operation. The content of the register is read and a logical AND operation is performed with the provided mask. The modified content is written back to the register.

4.5.1.3.1 Conditions

The address of the register must exist, and the register must have the READ-WRITE attribute.

4.5.1.3.2 Command

Table 23. WRITE_REGISTER_AND_MASK command value

Perform a logical AND operation on a register using provided mask.

Payload field	Length	Value/description
Register Address	1 Byte	Address of the register.
Mask	4 Bytes	Bitmask used as operand for logical AND operation. (Little-endian)

4.5.1.3.3 Response

Table 24. WRITE_REGISTER_AND_MASK response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.5.1.3.4 Event

There are no events for this command.

4.5.1.4 WRITE_REGISTER_MULTIPLE

This instruction functionality is similar to the [Section 4.5.1.1](#), [Section 4.5.1.2](#), [Section 4.5.1.3](#), with the possibility to combine them. In fact, it takes an array of register-type-value set and performs appropriate action. The type reflects the action which is either write register, logical OR operation on a register or logical AND operation on a register.

4.5.1.4.1 Conditions

The respective logical address of the register within a set must exist.

The register access attribute must allow execution of required action (type):

- Write action (0x01): READ-WRITE or WRITE-ONLY attribute
- OR mask action (0x02): READ-WRITE attribute
- AND mask action (0x03): READ-WRITE attribute

The size of 'Set' array must be in the range from 1 – 43, inclusive.

Field 'Type' must be in the range of 1 – 3, inclusive

4.5.1.4.2 Command

Table 25. WRITE_REGISTER_MULTIPLE command value
Perform a write register operation using a set of Register-Value pairs.

Payload field	Length	Value/description			
Set [1...n]	6 Bytes	Register Address	1 Byte	Logical address of the register.	
		Type	1 Byte	0x1	Write Register
				0x2	Write Register OR Mask
				0x3	Write Register AND Mask
		Value	4 Bytes	32 Bite register value which must be written, or bitmask used for logical operation. (Little-endian)	

Note: In case of an exception the operation is not rolled-back, i.e. registers which have been modified until exception occurs remain in modified state. Host must take proper actions to recover to a defined state.

4.5.1.4.3 Response

Table 26. WRITE_REGISTER_MULTIPLE response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.5.1.4.4 Event

There are no events for this command.

4.5.1.5 READ_REGISTER

This instruction is used to read back the content of a logical register. The content is present in the response, as 4-byte value in little-endian format.

4.5.1.5.1 Conditions

The address of the logical register must exist. The access attribute of the register must either be READ-WRITE or READ-ONLY.

4.5.1.5.2 Command

Table 27. READ_REGISTER command value

Read back content of a register.

Payload Field	Length	Value/Description
Register Address	1 Byte	Address of the logical register

4.5.1.5.3 Response

Table 28. READ_REGISTER response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
Register Value	4 Bytes	32-Bit register value which has been read out. (Little-endian)

4.5.1.5.4 Event

There are no events for this command.

4.5.1.6 READ_REGISTER_MULTIPLE

This instruction is used to read multiple logical registers at once. The result (content of each register) is provided in the response to the instruction. Register address itself is not included in the response. The order of the register contents within the response corresponds to the order of the register addresses within the instruction.

4.5.1.6.1 Conditions

All register addresses within the instruction must exist. The access attribute for each register must either be READ-WRITE or READ-ONLY. The size of 'Register Address' array must be in the range from 1 – 18, inclusive.

4.5.1.6.2 Command

Table 29. READ_REGISTER_MULTIPLE command value

Perform a read register operation on a set of registers.

Payload Field	Length	Value/Description
Register Address[1...n]	1 Byte	Register Address

4.5.1.6.3 Response

Table 30. READ_REGISTER_MULTIPLE response value

Payload field	Length	Value/description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS

Table 30. READ_REGISTER_MULTIPLE response value...continued

Payload field	Length	Value/description		
		PN5190_STATUS_INSTR_ERROR (No further data is present)		
Register Value [1...n]	4 Bytes	Value	4 Bytes	32-Bit register value which has been read out (little-endian).

4.5.1.6.4 Event

There are no events for this command.

4.5.2 E2PROM Manipulation

The accessible area in E2PROM is as per EEPROM map and addressable size.

Note:

1. Wherever the 'E2PROM Address' is mentioned in the below instructions, shall refer to the size of the addressable EEPROM area.

4.5.2.1 WRITE_E2PROM

This instruction is used to write one or more values to E2PROM. The field 'Values' contains the data to be written to E2PROM starting at the address given by field 'E2PROM Address'. The data is written in sequential order.

Note: Note that this is a blocking command, this means the NFC FE is blocked during the write operation. This can take several milliseconds.

4.5.2.1.1 Conditions

'E2PROM Address' field must be in the range as per [ref.\[2\]](#). The number of bytes within 'Values' field must be in the range from 1 – 1024 (0x0400), inclusive. Write operation must not go beyond EEPROM address as mentioned in [ref.\[2\]](#). Error response shall be sent to the host if address exceeds the EEPROM address space as in [ref.\[2\]](#).

4.5.2.1.2 Command

Table 31. WRITE_E2PROM command value

Write given values sequentially to E2PROM.

Payload field	Length	Value/description
E2PROM Address	2 Byte	Address in EEPROM from which write operation shall start. (Little-endian)
Values	1 – 1024 Bytes	Values which must be written to E2PROM in sequential order.

4.5.2.1.3 Response

Table 32. WRITE_EEPROM response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR

Table 32. WRITE_EEPROM response value...continued

Payload Field	Length	Value/Description
		PN5190_STATUS_MEMORY_ERROR

4.5.2.1.4 Event

There are no events for this command.

4.5.2.2 READ_EEPROM

This instruction is used to read back data from EEPROM memory area. The field 'EEPROM Address' indicates the start address of the read operation. The response contains the data read from EEPROM.

4.5.2.2.1 Conditions

'EEPROM Address' field must be in a valid range.

'Number of bytes' field must be in the range from 1 – 256, inclusive.

Read operation must not go beyond the last accessible EEPROM address.

Error response shall be sent to the host, if address exceeds the EEPROM address space.

4.5.2.2.2 Command

Table 33. READ_EEPROM command value

Read out values from EEPROM sequentially.

Payload field	Length	Value/description
EEPROM Address	2 Byte	Address in EEPROM from which read operation shall start. (Little-endian)
Number of Bytes	2 Byte	Number of bytes to be read out. (Little-endian)

4.5.2.2.3 Response

Table 34. READ_EEPROM response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR (No further data is present)
Values	1 – 1024 Bytes	Values which have been read out in sequential order.

4.5.2.2.4 Event

There are no events for this command.

4.5.2.3 GET_CRC_USER_AREA

This instruction is used to calculate the CRC values for the complete user configuration area, and for the protocol area in the EEPROM of the PN5190 IC.

4.5.2.3.1 Command

This command does not have parameters, i.e. the TLV command packet does not have a "Value" field.

4.5.2.3.2 Response

Table 35. GET_CRC_USER_AREA response value

Payload field	Length	Value/description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR indicates an error. Note: The values of CRC_UserArea and CRC_ProtocolArea are invalid, but still host should read all 8 bytes following.
CRC_UserArea	4 Bytes	4 bytes of calculated CRC of user RF configuration area in little-endian format.
CRC_ProtocolArea	4 Bytes	4 bytes of calculated CRC of protocol area in little-endian format.

4.5.2.3.3 Event

There are no events for this command.

4.5.3 CLIF data Manipulation

The instructions described within this section describe the commands for RF transmission and reception.

4.5.3.1 EXCHANGE_RF_DATA

The RF exchange function performs a transmission of the TX data and is waiting for the reception of any RX data.

The function returns in case of a reception (either erroneous or correct) or a timeout happened. The timer is started with the END of TRANSMISSION and stopped with the START of RECEPTION. Timeout value preconfigured in EEPROM shall be used in case timeout not configured before execution of Exchange command.

If transceiver_state is

- in IDLE the TRANSCEIVE mode is entered.
- In WAIT_RECEIVE, the transceiver state is reset to TRANSCEIVE MODE in case of initiator bit is set
- In WAIT_TRANSMIT, the transceiver state is reset to TRANSCEIVE MODE in case initiator bit is NOT set

The field 'Number of valid bits in last Byte' indicate the exact data length to be transmitted.

4.5.3.1.1 Conditions

Size of 'TX Data' field must be in the range from 0 – 1024, inclusive.

'Number of valid bits in last Byte' field must be in the range from 0 – 7.

The command must not be called during an ongoing RF transmission. Command shall ensure the right state of the transceiver for transmitting the data.

Note:

This command is valid only for Reader mode and P2P" Passive/Active initiator mode.

4.5.3.1.2 Command

Table 36. EXCHANGE_RF_DATA command value

Write TX data to internal RF transmission buffer and starts transmission using transceive command and wait until reception or Time-Out to prepare a response to the host.

Payload Field	Length	Value/Description	
Number of valid bits in last Byte	1 Byte	0	All bits of last byte are transmitted
		1 – 7	Number of bits within last byte to be transmitted.
RFExchangeConfig	1 Byte	Configuration of the RFExchange function. Details see below	
TX Data	n bytes	TX data which must be sent out via CLIF using transceive command. n = 0 – 1024 bytes	

Table 37. RFexchangeConfig Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
								Bits 4 – 7 are RFU
				X				Include RX Data in response based on RX_STATUS, if bit set to 1b.
					X			Include EVENT_STATUS register in response, if bit set to 1b.
						X		Include RX_STATUS_ERROR register in response, if bit is set to 1b.
							X	Include RX_STATUS register in response, if bit is set to 1b.

4.5.3.1.3 Response

Table 38. EXCHANGE_RF_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present) PN5190_STATUS_TIMEOUT PN5190_STATUS_RX_TIMEOUT PN5190_STATUS_NO_RF_FIELD PN5190_STATUS_TIMEOUT_WITH_EMD_ERROR
RX_STATUS	4 Bytes	If RX_STATUS is requested (little-endian)
RX_STATUS_ERROR	4 Bytes	If RX_STATUS_ERROR is requested (little-endian)
EVENT_STATUS	4 Bytes	If EVENT_STATUS is requested (little-endian)
RX Data	1 – 1024 Bytes	If RX data is requested. RX data received during RF reception phase of RF exchange.

4.5.3.1.4 Event

There are no events for this command.

4.5.3.2 TRANSMIT_RF_DATA

This instruction is used to write data into the internal CLIF transmission buffer and start transmission using transceive command internally. The size of this buffer is limited to 1024 bytes. After this instruction has been executed, an RF reception is started automatically.

The command returns immediately after Transmission is complete not waiting for the reception completion.

4.5.3.2.1 Conditions

The number of bytes within the 'TX Data' field must be in the range from 1 – 1024, inclusive.

The command must not be called during an ongoing RF transmission.

4.5.3.2.2 Command

Table 39. TRANSMIT_RF_DATA command value

Write TX data to internal CLIF transmission buffer.

Payload Field	Length	Value/Description
Number of valid bits in last Byte	1 Byte	0 All bits of last byte are transmitted 1 – 7 Number of bits within last byte to be transmitted.
RFU	1 Byte	Reserved
TX Data	1 – 1024 Bytes	TX data which shall be used during next RF transmission.

4.5.3.2.3 Response

Table 40. TRANSMIT_RF_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_NO_RF_FIELD PN5190_STATUS_NO_EXTERNAL_RF_FIELD

4.5.3.2.4 Event

There are no events for this command.

4.5.3.3 RETRIEVE_RF_DATA

This instruction is used to read data from the internal CLIF RX buffer, which contains the RF response data (if any) posted to it from the previous execution of [Section 4.5.3.1](#) with option not to include the received data in the response or [Section 4.5.3.2](#) command.

4.5.3.3.1 Command

Table 41. RETRIEVE_RF_DATA command value

Read RX data from internal RF reception buffer.

Payload Field	Length	Value/Description
Empty	Empty	Empty

4.5.3.3.2 Response

Table 42. RETRIEVE_RF_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
RX Data	1 – 1024 Bytes	RX data which has been received during last successful RF reception.

4.5.3.3.3 Event

There are no events for this command.

4.5.3.4 RECEIVE_RF_DATA

This instruction waits for the data received through RF Interface of the reader.

In reader mode, this instruction returns either if there is a reception (either erroneous or correct) or an FWT timeout occurred. The timer is started with the END of TRANSMISSION and stopped with the START of RECEPTION. The default timeout value preconfigured in EEPROM shall be used in case timeout not configured before execution of Exchange command.

In target mode, this instruction returns either in case of reception (either erroneous or correct) or External RF error.

Note:

This instruction shall be used with TRANSMIT_RF_DATA command to perform TX and RX operation...

4.5.3.4.1 Command

Table 43. RECEIVE_RF_DATA command value

Payload Field	Length	Value/Description
ReceiveRFConfig	1 Byte	Configuration of the ReceiveRFConfig function. See Table 44

Table 44. ReceiveRFConfig bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
								Bits 4 – 7 are RFU
				X				Include RX Data in response based on RX_STATUS, if bit set to 1b.
					X			Include EVENT_STATUS register in response, if bit set to 1b.
						X		Include RX_STATUS_ERROR register in response, if bit is set to 1b.
							X	Include RX_STATUS register in response, if bit is set to 1b.

4.5.3.4.2 Response

Table 45. RECEIVE_RF_DATA response value

Payload field	Length	Value/description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:

Table 45. RECEIVE_RF_DATA response value...continued

Payload field	Length	Value/description
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present) PN5190_STATUS_TIMEOUT PN5190_STATUS_NO_RF_FIELD PN5190_STATUS_NO_EXTERNAL_RF_FIELD
RX_STATUS	4 Bytes	If RX_STATUS is requested (little-endian)
RX_STATUS_ERROR	4 Bytes	If RX_STATUS_ERROR is requested (little-endian)
EVENT_STATUS	4 Bytes	If EVENT_STATUS is requested (little-endian)
RX Data	1 – 1024 Bytes	If RX data is requested. RX data received over RF.

4.5.3.4.3 Event

There are no events for this command.

4.5.3.5 RETRIEVE_RF_FELICA_EMD_DATA (FeliCa EMD Configuration)

This instruction is used to read data from the internal CLIF RX buffer, which contains a FeliCa EMD response data (if any) posted to it from the previous execution of EXCHANGE_RF_DATA command returning with Status 'PN5190_STATUS_TIMEOUT_WITH_EMD_ERROR'.

Note: This command is available from PN5190 FW v02.03 onwards.

4.5.3.5.1 Command

Read RX data from internal RF reception buffer.

Table 46. RETRIEVE_RF_FELICA_EMD_DATA command value

Payload Field	Length	Value/Description	
FeliCaRFRetrieveConfig	1 Byte	00 - FF	Configuration of the RETRIEVE_RF_FELICA_EMD_DATA function
		configuration (bitmask) description	bit 7..2: RFU bit 1: Include RX_STATUS_ERROR register in response, if bit is set to 1b. bit 0: Include RX_STATUS register in response, if bit is set to 1b.

4.5.3.5.2 Response

Table 47. RETRIEVE_RF_FELICA_EMD_DATA response value

Payload field	Length	Value/description
Status	1 Byte	Status of the operation. Expected values are as below: PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)

Table 47. RETRIEVE_RF_FELICA_EMD_DATA response value...continued

Payload field	Length	Value/description
RX_STATUS	4 Byte	If RX_STATUS is requested (little-endian)
RX_STATUS_ERROR	4 Byte	If RX_STATUS_ERROR is requested (little-endian)
RX Data	1...1024 Byte	FeliCa EMD RX data which has been received during last unsuccessful RF reception using Exchange Command.

4.5.3.5.3 Event

There are no events for this command.

4.5.4 Switching Operation Mode

PN5190 supports 4 different operation modes:

4.5.4.1 Normal

This is the default mode, where all instructions are allowed.

4.5.4.2 Standby

PN5190 is in standby/sleep state to save power. Wake-up conditions must be set to define when to leave standby again.

4.5.4.3 LPCD

PN5190 is in low-power card detection mode, where it tries to detect a card which is entering the operating volume, with lowest possible power consumption.

4.5.4.4 Autocoll

PN5190 is acting as RF listener, performing target mode activation autonomously (to guarantee real-time constraints)

4.5.4.5 SWITCH_MODE_NORMAL

The Switch Mode Normal command has three use-cases.

4.5.4.5.1 UseCase1: Enter normal operation mode upon power up (POR)

Use to reset to Idle state for receiving / processing the next command by entering normal operation mode.

4.5.4.5.2 UseCase2: Terminating already running command to switch to normal operation mode (abort command)

Use to reset to Idle state for receiving / processing the next command by terminating the already running commands.

Commands such as standby, LPCD, Exchange, PRBS, and Autocoll shall be possible to be terminated using this command.

This is the only special command, that does not have a response. Instead, it has an EVENT notification.

Refer to [Section 4.4.3](#) for more information on the type of events occur during different underlying command execution.

4.5.4.5.2.1 UseCase2.1:

This command shall reset all the CLIF TX, RX, and Field Control Registers to Boot state. Issuing this command shall turn OFF any existing RF Field.

4.5.4.5.2.2 UseCase2.2:

Available from PN5190 FW v02.03 onwards:

This command shall not modify CLIF TX, RX, and Field Control Registers but shall only move the transceiver to IDLE state.

4.5.4.5.3 UseCase3: Normal operation mode upon soft-reset/exit from standby, LPCD

In this case, the PN5190 directly enters into the normal operation mode, by sending the IDLE_EVENT to the host ([Figure 12](#) or [Figure 13](#)) and “IDLE_EVENT” bit is set in [Table 11](#).

There is no requirement to send SWITCH_MODE_NORMAL command.

Note:

After the IC is switched to normal mode, all the settings of RF are modified to default state. It is imperative that, respective RF configuration and other related registers must be loaded with appropriate values before performing an RF ON or RF Exchange operation.

4.5.4.5.4 Command frame to send for different use-cases

4.5.4.5.4.1 UseCase1: Command enter normal operation mode upon power up (POR)

0x20 0x01 0x00

4.5.4.5.4.2 UseCase2: Command to terminating already running commands to switch to normal operation mode

Use case 2.1:

0x20 0x00 0x00

Use case 2.2: (From FW v02.02 onwards):

0x20 0x02 0x00

4.5.4.5.4.3 UseCase3: Command for normal operation mode upon soft-reset/exit from standby, LPCD, ULPCD


None. PN5190 enters normal operation mode directly.

4.5.4.5.5 Response


None

4.5.4.5.6 Event


A BOOT_EVENT (in EVENT_STATUS register) is set indicating that the normal mode is entered and is sent to the host. Refer to [Figure 12](#) and [Figure 13](#) for the event data.

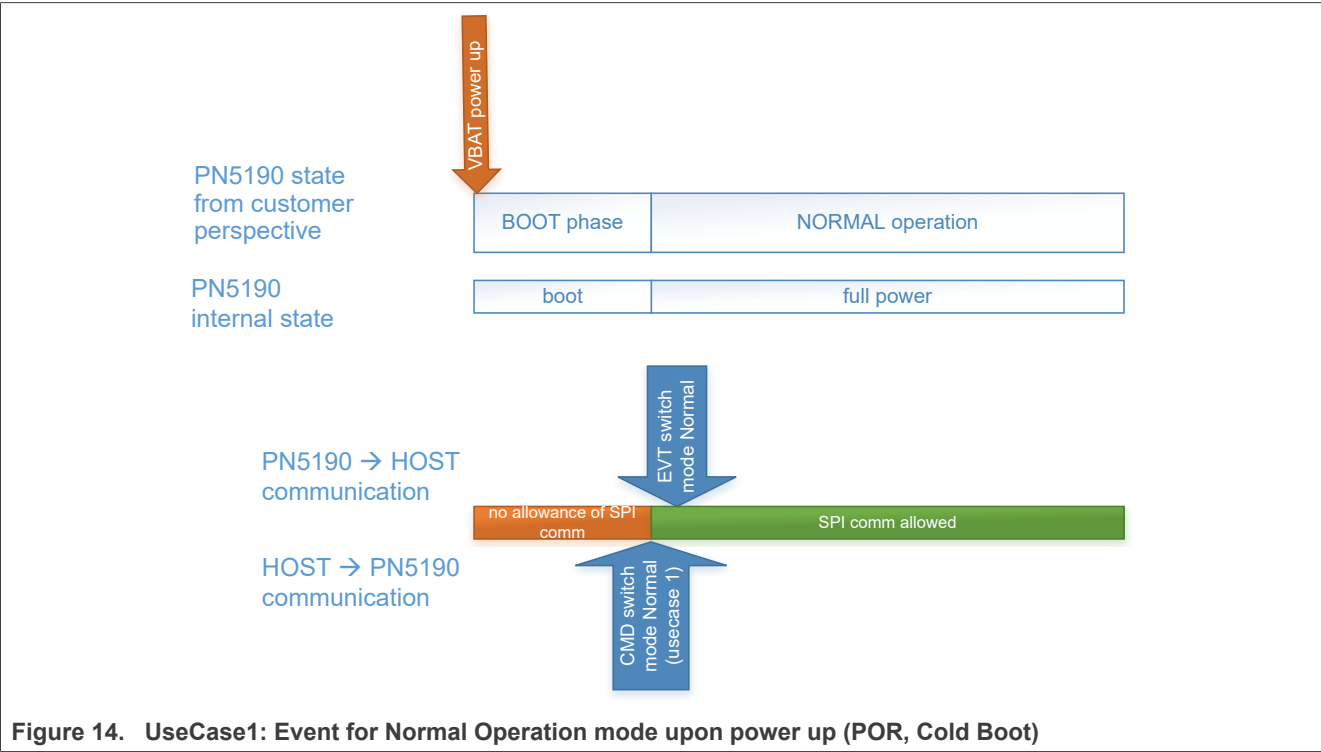

An IDLE_EVENT (in EVENT_STATUS register) is set indicating the normal mode is entered and is sent to the host. Refer to [Figure 12](#) and [Figure 13](#) for the event data.

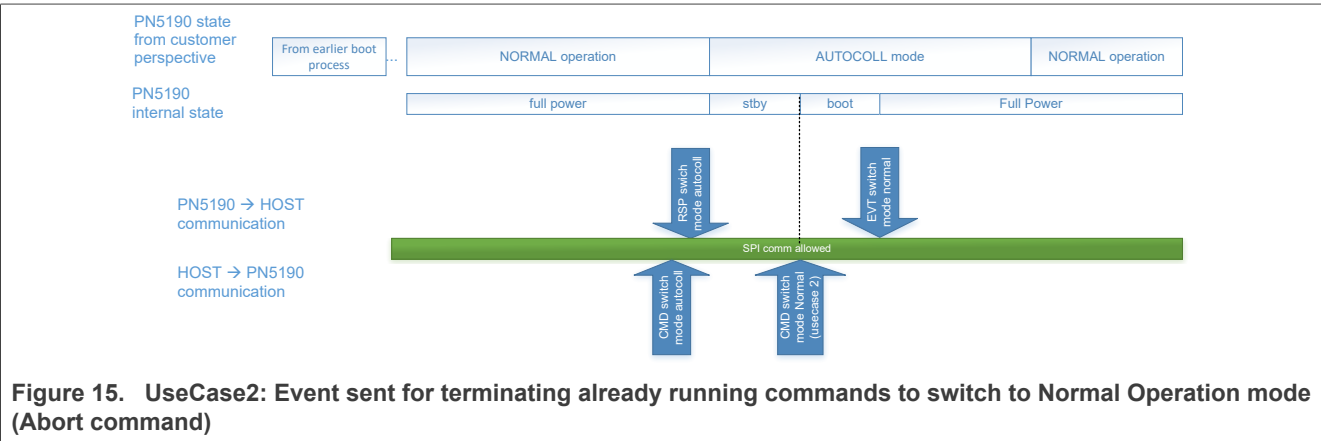

A BOOT_EVENT (in EVENT_STATUS register) is set indicating the normal mode is entered and is sent to the host. Refer to [Figure 12](#) and [Figure 13](#) for the event data.

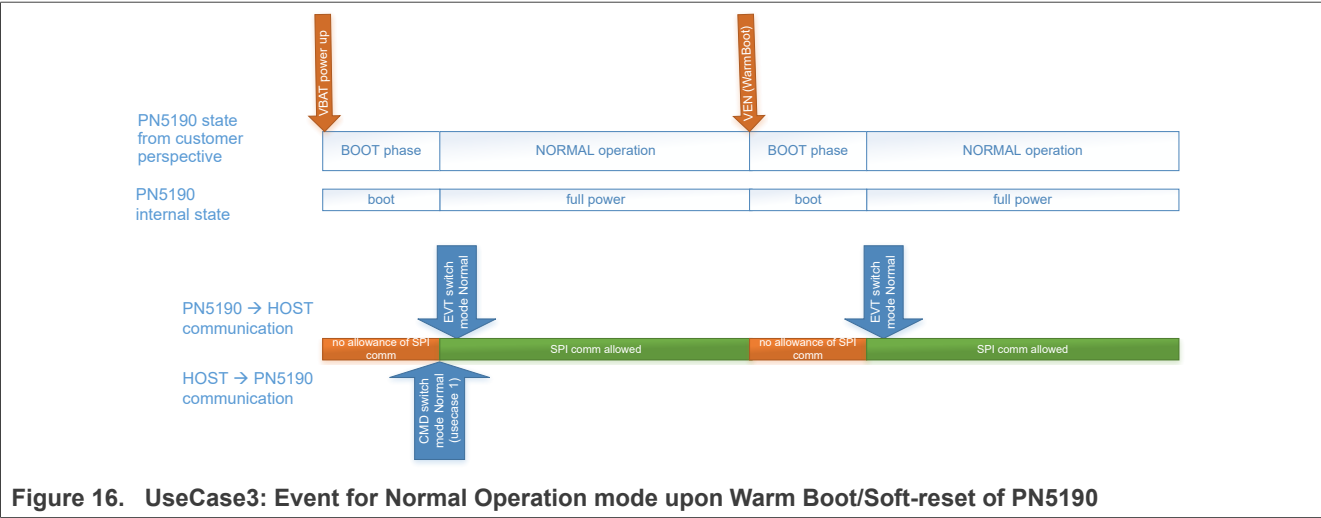

4.5.4.6 SWITCH_MODE_AUTOCOLL

The Switch Mode Autocoll automatically performs the card activation procedure in target mode.

Field 'Autocoll Mode' must be in the range from 0 – 2, inclusive.

In case if field 'Autocoll Mode' is set to 2 (Autocoll): Field 'RF Technologies' ([Table 49](#)) must contain a bitmask indicating the RF Technologies to support during Autocoll.

No instructions must be sent while being in this mode.

Termination is indicated using an interrupt.

4.5.4.6.1 Command

Table 48. SWITCH_MODE_AUTOCOLL command value

Parameter	Length	Value/Description	
RF Technologies	1 Byte	Bitmask indicating the RF technology to listen for during Autocoll.	
Autocoll Mode	1 Byte	0	No Autonomous mode , i.e. Autocoll terminates when the external RF field is not present. Termination in case of <ul style="list-style-type: none">• NO RF FIELD or RF FIELD has disappeared• PN5190 is ACTIVATED in TARGET mode
		1	Autonomous mode with standby . When no RF field is present, Autocoll automatically enters Standby mode. Once RF external RF field is detected, PN5190 enters again Autocoll mode. Termination in case of <ul style="list-style-type: none">• PN5190 is ACTIVATED in TARGET mode From PN5190 FW v02.03 onwards: If EEPROM Field "bCard ModeUltraLowPowerEnabled" at address '0xCDF' is set to '1', then PN5190 enters Ultra low-power standby.
		2	Autonomous mode without standby . When no RF field is present, PN5190 waits until RF field is present before starting the Autocoll algorithm. Standby is not used in this case. Termination in case of

Table 48. SWITCH_MODE_AUTOCOLL command value...continued

Parameter	Length	Value/Description
		<ul style="list-style-type: none"> PN5190 is ACTIVATED in TARGET mode

Table 49. RF Technologies Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
0	0	0	0					RFU
				X				If set to 1b, listening for NFC-F Active is enabled. (Not available).
					X			If set to 1b, listening for NFC-A Active is enabled. (Not available).
						X		If set to 1b, listening for NFC-F is enabled. (Not available).
							X	If set to 1b, listening for NFC-A is enabled.

4.5.4.6.2 Response

The response only signalizes that the command has been processed.

Table 50. SWITCH_MODE_AUTOCOLL response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode is not been entered due to wrong settings)

4.5.4.6.3 Event

The event notification is sent when the command has finished, and the normal mode is entered. Host shall read-out the response bytes based on the event value.

Note:

When the status is not “PN5190_STATUS_INSTR_SUCCESS”, then further “Protocol” and “Card_Activated” data bytes are not present.

Technology information is retrieved from the registers using [Section 4.5.1.5](#), [Section 4.5.1.6](#) commands.

Following table shows the event data which is sent as part of the event message [Figure 12](#) and [Figure 13](#).

Table 51. EVENT_SWITCH_MODE_AUTOCOLL – AUTOCOLL_EVENT data

Switch operation mode Autocoll event

Payload Field	Length	Value/Description
Status	1 byte	Status of the operation
		PN5190_STATUS_INSTR_SUCCESS PN5190 is ACTIVATED in TARGET mode. Further data in this event are valid.
		PN5190_STATUS_PREVENT_STANDBY Indicates that PN5190 is prevented to go into Standby mode. This status is valid only when the Autocoll mode is selected as “Autonomous mode with standby”.

Table 51. EVENT_SWITCH_MODE_AUTOCOLL – AUTOCOLL_EVENT data...continued

Switch operation mode Autocoll event

Payload Field	Length	Value/Description	
		PN5190_STATUS_NO_EXTERNAL_RF_FIELD	Indicates that no external RF field is present during the execution of Autocoll in Non-Autonomous mode
		PN5190_STATUS_USER_CANCELLED	Indicates that the present command in-progress is aborted by the switch mode normal command
Protocol	1 byte	0x10	Activated as Passive TypeA
		0x11	Activated as Passive TypeF 212
		0x12	Activated as Passive TypeF 424
		0x20	Activated as Active TypeA
		0x21	Activated as Active TypeF 212
		0x22	Activated as Active TypeF 424
		Other values	Invalid
Card_Activated	1 byte	0x00	No card activation process as per ISO 14443-3
		0x01	Indicates that device is activated in Passive mode

Note:

After reading the event data, data received from the card/device that was activated (such as 'n' bytes of ATR_REQ/RATS as per ISO18092/ISO1443-4), shall be read using [Section 4.5.3.3](#) command.

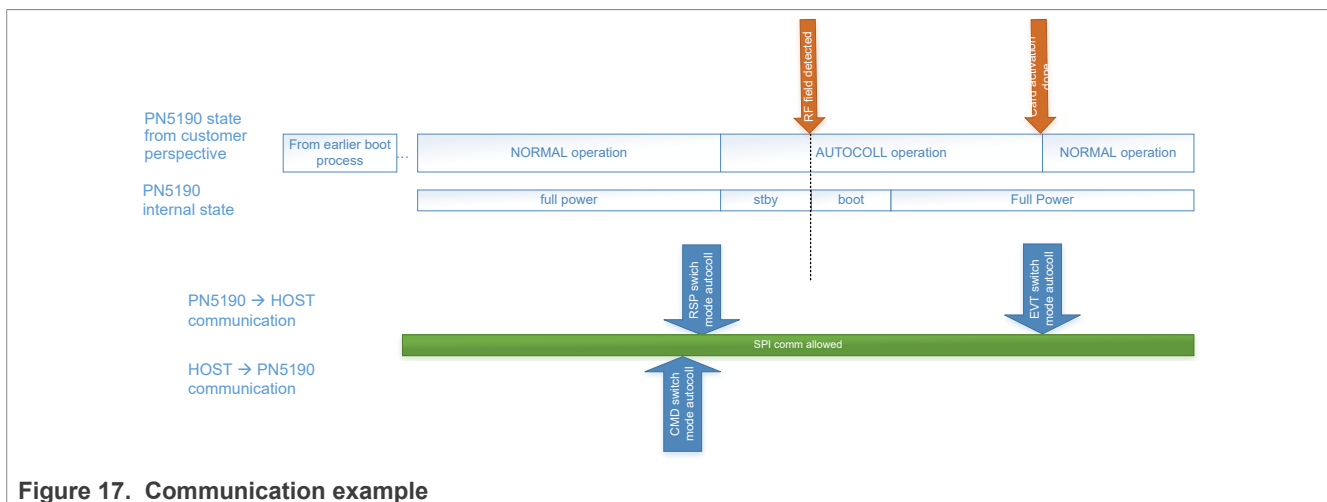
4.5.4.6.4 Communication example

Figure 17. Communication example

4.5.4.7 SWITCH_MODE_STANDBY

The Switch Mode Standby automatically sets the IC into Standby mode. The IC will wake up after configured wake-up sources meeting the wake-up conditions.

Note:

Counter expiry for ULP STANDBY and HIF abort for STANDBY are available by default to exit standby modes.

4.5.4.7.1 Command

Table 52. SWITCH_MODE_STANDBY command value

Parameter	Length	Value/Description
Config	1 Byte	Bitmask controlling the wake-up source to be used and the Standby mode to enter. Refer to Table 53
Counter Value	2 Bytes	Used value for wake-up counter in milliseconds. Maximum supported value is 2690 for standby. Maximum supported value is 4095 for ULP standby. The value to be provided is in little-endian format. This parameter contents are valid only if the “Config Bitmask” is enabled for wake-up on counter expire.

Table 53. Config Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
X								Enter ULP standby if bit is set to 1b Enter standby if bit is set to 0b.
	0							RFU
		X						Wake-up on GPIO-3 when it is high, if bit is set to 1b. (Not applicable for ULP standby)
			X					Wake-up on GPIO-2 when it is high, if bit is set to 1b. (Not applicable for ULP standby)
				X				Wake-up on GPIO-1 when it is high, if bit is set to 1b. (Not applicable for ULP standby)
					X			Wake-up on GPIO-0 when it is high, if bit is set to 1b. (Not applicable for ULP standby)
						X		Wake-up on wake-up counter expires, if bit is set to 1b. For ULP-Standby, this option is by default enabled.
							X	Wake-up on external RF field, if bit is set to 1b.

Note: From PN5190 FW v02.03, if EEPROM Field “CardModeUltraLowPowerEnabled” at address ‘0xCDF’ is set to ‘1’, ULP standby configuration cannot be used with SWITCH_MODE_STANDBY Command.

4.5.4.7.2 Response

The response only signalizes that the command has been processed and the standby state will be entered only after the response is fully read by the host.

Table 54. SWITCH_MODE_STANDBY response value

Switch operation mode standby


Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode has not been entered – due to wrong settings)

4.5.4.7.3 Event

The event notification is sent when the command has finished, and the normal mode is entered. Refer to the format of the event that will be sent after completion of the command as in [Figure 12](#) and [Figure 13](#).

In case if PN5190 is prevented to go in Standby mode, then the event “STANDBY_PREV_EVENT” bit set in EVENT_STATUS as mentioned [Table 11](#) is sent to the host along the reason of standby prevention as mentioned in [Table 13](#).

4.5.4.7.4 Communication Example

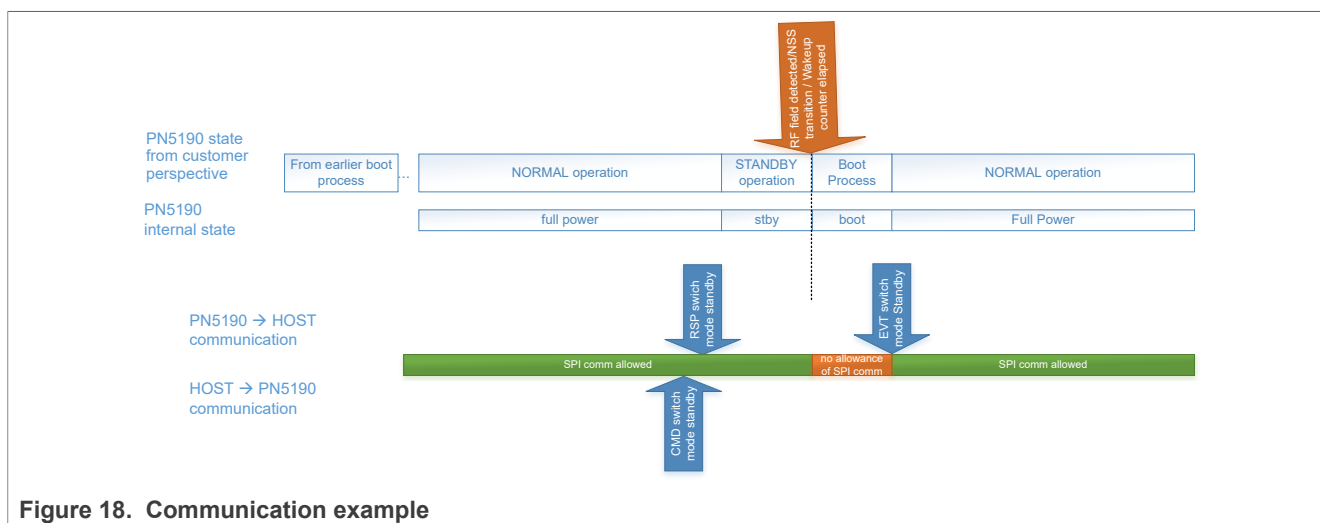

4.5.4.8 SWITCH_MODE_LPCD

The Switch Mode LPCD performs a detuning detection on the antenna due to changing environment around the antenna.

There are 2 different modes of LPCD. The HW-based (ULPCD) solution offers a competitive power consumption with a reduced sensitivity. The FW-based (LPCD) solution offers a best-in-class sensitivity with an increased power consumption.

In the Single Mode of FW based(LPCD), there is no calibration event sent to host.

When Single mode is invoked, calibration and successive measurements are all done after exiting standby.

For calibration event in single mode, first issue single mode with calibration event command. After calibration, an LPCD calibration event is received after which the single mode command must be sent with the reference value obtained from the previous step as the input parameter.

The configuration of the LPCD is done in the EEPROM/Flash Data settings before the command is called.

Note:

GPIO3 abort for ULPCD, HIF abort for LPCD are available by default to exit low-power modes.

Wake-up due to counter expire is always enabled.

For ULPCD, DC-DC configuration should be disabled in EEPROM/Flash Data settings and should provide VUP supply through VBAT. The necessary jumper settings should be made. For EEPROM/Flash Data settings, refer to document [ref.\[2\]](#).

If the command is for LPCD/ULPCD calibration, the host still has to send the complete frame.

4.5.4.8.1 Command

Table 55. SWITCH_MODE_LPCD command value

Parameter	Length	Value/description	
bControl	1 Byte	0x00	Enter ULPCD calibration. Command stops after calibration and an event with reference value is sent to the host.
		0x01	Enter ULPCD.
		0x02	LPCD calibration without standby. Command stops after calibration and an event with reference value is sent to the host. During calibration IC does not enter Standby.
		0x03	Enter LPCD execution including standby. Command requires Reference Values from an LPCD calibration. Command stops due to wake up reason.
		0x04	Single mode LPCD. Command executes the calibration including standby and then automatically enters LPCD execution. No Reference Values will be returned to the device host. Command stops due to wake up reason.
		0x0C	LPCD calibration with standby. Command stops after calibration and an event with reference value is sent to the host. Similar to option 0x02, but here IC will enter Standby.
		0x13	Enter LPCD mode and return with AUTOCOLL Event when wakeup due to load change/Ext RF from LPCD standby
Other Values	RFU		
Wake-up Control	1 Byte	Bitmask controlling the wake-up source to be used for LPCD/ULPCD. Content of this field is not considered for calibration. Refer to Table 56	
Reference Value	4 Bytes	Reference value to be used during ULPCD/LPCD. For ULPCD, Byte 2 which holds the HF Attenuator value is used during both the calibration and measurement phase. For LPCD, Content of this field is not considered for calibration and Single mode. Refer to Table 57 for the correct info on all the 4 bytes.	
Counter Value	2 Bytes	Value for wake-up counter in milliseconds. Maximum supported value is 2690 for LPCD. Maximum supported value is 4095 for ULPCD. The value to be provided is in little-endian format. Content of this field is not considered for LPCD calibration. For single mode and single mode with calibration event, the duration of standby before calibration can be configured from the EEPROM configuration: <code>LPCD_SETTINGS->wCheckPeriod</code> . For single mode with calibration, WUC value to be non-zero.	

Table 56. Wake-up Control Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
0	0	0	0	0	0	0		RFU
							X	Wake-up on external RF field, if bit is set to 1b.

Table 57. Reference Value byte info

Reference value bytes	ULPCD	LPCD
Byte 0	Reference Byte 0	Channel 0 Reference Byte 0
Byte 1	Reference Byte 1	Channel 0 Reference Byte 1
Byte 2	HF Attenuator value	Channel 1 Reference Byte 0
Byte 3	NA	Channel 1 Reference Byte 1

4.5.4.8.2 Response

Table 58. SWITCH_MODE_LPCD response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode has not been entered – due to wrong settings)

4.5.4.8.3 Event

The event notification is sent when the command has finished, and the normal mode is entered with the following data as part of the event mentioned in Figure 12 and Figure 13.

Table 59. EVT_SWITCH_MODE_LPCD

Payload field	Length	Value/description
LPCD Status	4 bytes	Refer to Table 15

4.5.4.8.4 Communication Example

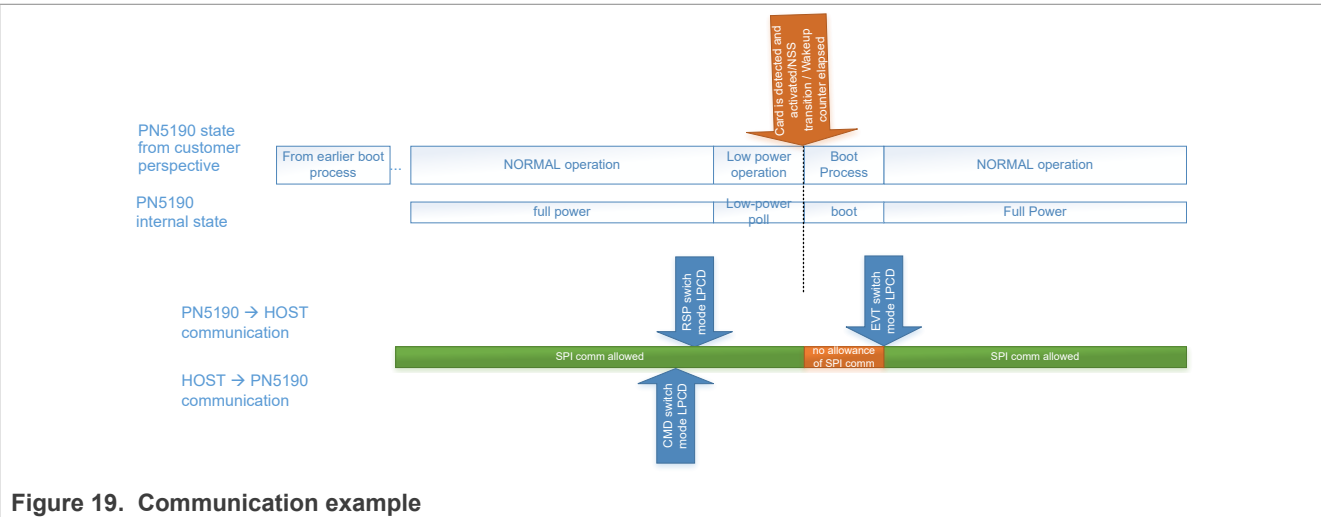


Figure 19. Communication example

4.5.4.9 SWITCH_MODE_DOWNLOAD

The Switch Mode Download command enters the Firmware download mode.

Only way to come out download mode, is to issue a reset to PN5190.

4.5.4.9.1 Command

This command does not have parameters, i.e. the TLV command packet does not have a "Value" field.

4.5.4.9.2 Response

The response only signalizes that the command has been processed and the Download mode shall be entered after the response is read by the host.

Table 60. SWITCH_MODE_DOWNLOAD response value
Switch operation mode Autocoll

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode has not been entered)

4.5.4.9.3 Event

No event generation.

4.5.4.9.4 Communication Example

4.5.5 MIFARE Classic Authentication

4.5.5.1 MFC_AUTHENTICATE

This instruction is used to perform a MIFARE Classic Authentication on an activated card. It takes the key, card UID, and the key type to authenticate at given block address. The response contains one byte indicating the authentication status.

4.5.5.1.1 Conditions

Field `Key` must be 6 bytes long. Field `Key Type` must contain the value `0x60` or `0x61`. Block address may contain any address from `0x0` – `0xff`, inclusive. Field `UID` must be bytes long and should contain the 4-byte UID of the card. An ISO14443-3 MIFARE Classic product-based card should be put into state `ACTIVE` or `ACTIVE*` prior to execution of this instruction.

In case of a runtime error related to the authentication, this field 'Authentication Status' is set accordingly.

4.5.5.1.2 Command

Table 61. MFC_AUTHENTICATE Command
Perform authentication on an activated MIFARE Classic product-based card.

Payload Field	Length	Value/Description
Key	6 Bytes	Authentication key to be used.
Key Type	1 Byte	0x60 Key Type A
		0x61 Key Type B
Block Address	1 Byte	The address of the block for which the authentication must be performed.
UID	4 Bytes	UID of the card.

4.5.5.1.3 Response

Table 62. MFC_AUTHENTICATE Response
Response to MFC_AUTHENTICATE.

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_TIMEOUT PN5190_STATUS_AUTH_ERROR

4.5.5.1.4 Event

There is no event for this instruction.

4.5.6 ISO 18000-3M3 (EPC GEN2) Support

4.5.6.1 EPC_GEN2_INVENTORY

This instruction is used to perform an inventory of ISO18000-3M3 tags. It implements an autonomous execution of several commands according to ISO18000-3M3 in order to guarantee the timings specified by that standard.

If present in payload of the instruction, first a *Select* command is executed followed by a *BeginRound* command. If there is a valid response in the first timeslot (no timeout, no collision), the instruction sends an *ACK* and saves the received PC/XPC/UII. The instruction then performs an action according to the field 'Timeslot Processed Behavior':

- If this field is set to 0, a *NextSlot* command is issued to handle the next timeslot. This is repeated until the internal buffer is full
- If this field is set to 1, the algorithm pauses
- If this field is set to 2, a *Req_Rn* command is issued if, and only if, there has been a valid tag response in this timeslotCommand

Field 'Select Command Length' must contain the length of the field 'Select Command', which must be in the range from 1 – 39, inclusive. If 'Select Command Length' is 0, the fields 'Valid Bits in last Byte' and 'Select Command' must not be present.

The field Bits in last Byte should contain the number of bits to be transmitted in the last byte of the 'Select Command' field. The value must be in the range from 1 – 7, inclusive. If the value is 0, all bits from last byte from 'Select Command' field are transmitted.

The field 'Select Command' should contain a *Select* command according to ISO18000-3M3 without trailing CRC-16c and must have the same length as indicated in field 'Select Command Length'.

Field 'BeginRound Command' should contain a *BeginRound* command according to ISO18000-3M3 without trailing CRC-5. The last 7 bits of the last byte of 'BeginRound Command' are ignored as the command has an actual length of 17 bits.

'Timeslot Processed Behavior' must contain a value from 0 – 2, inclusive.

Table 63. EPC_GEN2_INVENTORY command value
Perform an ISO 18000-3M3 Inventory

Payload field	Length	Value/description
ResumeInventory	1 Byte	00 Initial GEN2_INVENTORY

Table 63. EPC_GEN2_INVENTORY command value...continued

Perform an ISO 18000-3M3 Inventory

Payload field	Length	Value/description	
		01	Resume the GEN2_INVENTORY command – the remaining fields below are empty (any payload is ignored)
Select Command Length	1 Byte	0	No Select command is set prior to BeginRound command. 'Valid Bits in last Byte' field and 'Select command' field shall not be present.
		1 – 39	Length (n) of the 'Select command' field.
Valid Bits in last Byte	1 Byte	0	All bits of last byte of 'Select command' field are transmitted.
		1 – 7	Number of bits to be transmitted in the last byte of 'Select command' field.
Select Command	n Bytes	If present, this field contains the Select command (according to ISO18000-3, Table 47) which is sent prior to BeginRound command. CRC-16c shall not be included.	
BeginRound Command	3 Bytes	This field contains the BeginRound command (according to ISO18000-3, Table 49). CRC-5 shall not be included.	
Timeslot Processed Behavior	1 Byte	0	Response contains max. Number of timeslots which may fit in response buffer.
		1	Response contains only one timeslot.
		2	Response contains only one timeslot. If timeslot contains valid card response, also the card handle is included.

4.5.6.1.1 Response

The length of the Response might be “1” in case of resume Inventory.

Table 64. EPC_GEN2_INVENTORY response value

Payload Field	Length	Value/Description			
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:			
		PN5190_STATUS_SUCCESS (Read Timeslot status in next byte for Tag response)			
		PN5190_STATUS_INSTR_ERROR (No further data is present)			
Timeslot [1...n]	3 – 69 Bytes	Timeslot Status	1 Byte	0	Tag response available. 'Tag Reply Length' field, 'Valid bits in last byte' field, and 'Tag reply' field present.
				1	Tag response available.
				2	No tag replied in timeslot. 'Tag Reply Length' field and 'Valid bits in last byte' field, shall be set to zero. 'Tag reply' field shall not be present.
				3	Two or more tags responded in the timeslot. (Collision). 'Tag Reply Length' field and 'Valid bits in last byte' field, shall be set to zero. 'Tag reply' field shall not be present.

Table 64. EPC_GEN2_INVENTORY response value...continued

Payload Field	Length	Value/Description			
		Tag Reply Length	1 Byte	0–66	Length of 'Tag Reply' field (i). If Tag Reply Length is 0, then the Tag Reply field is not present.
		Valid bits in last Byte	1 Byte	0	All bits of last byte of 'Tag reply' field are valid.
				1–7	Number of valid bits of last byte of 'Tag reply' field. If Tag Reply Length is zero, the value of this byte shall be ignored.
		Tag Reply	'n' Bytes	Reply of the tag according to ISO18000-3_2010, Table 56.	
		Tag Handle	0 or 2 Bytes	Handle of the tag, in case field 'Timeslot Status' is set to '1'. Otherwise field not present.	

4.5.6.1.2 Event

There are no events for this command.

4.5.7 RF configuration management

Refer to the [Section 6](#), for TX and RX configuration for different RF technologies and data rates supported by PN5190. The values are not present in the range mentioned below, should be considered as RFU.

4.5.7.1 LOAD_RF_CONFIGURATION

This instruction is used to load the RF configuration from EEPROM into internal CLIF registers. RF configuration refers to a unique combination of RF Technology, mode (target/initiator) and baud rate. RF configuration can be loaded separately for the CLIF receiver (RX configuration) and transmitter (TX configuration) path. The value 0xFF must be used if the corresponding configuration for a path shall not be changed.

4.5.7.1.1 Conditions

Field 'TX Configuration' must be in the range from 0x00 – 0x2B, inclusive. If the value is 0xFF, TX configuration is not changed.

Field 'RX Configuration' must be in the range from 0x80 – 0xAB, inclusive. If the value is 0xFF, RX configuration is not changed.

A special configuration with TX Configuration = 0xFF and RX Configuration = 0xAC is used to load the Boot-up registers one time.

This special configuration is required to update the register configurations (both TX and RX) that are different from the IC reset values.

4.5.7.1.2 Command

Table 65. LOAD_RF_CONFIGURATION command value

Load RF TX and RX settings from E2PROM.

Payload Field	Length	Value/Description	
TX Configuration	1 Byte	0xFF	TX RF Configuration not changed.
		0x0 – 0x2B	Corresponding TX RF Configuration loaded.
RX Configuration	1 Byte	0xFF	RX RF Configuration not changed.
		0x80 – 0xAB	Corresponding RX RF Configuration loaded.

4.5.7.1.3 Response

Table 66. LOAD_RF_CONFIGURATION response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR

4.5.7.1.4 Event

There are no events for this command.

4.5.7.2 UPDATE_RF_CONFIGURATION

This instruction is used to update the RF configuration (see definition in [Section 4.5.7.1](#)) within E2PROM. The instruction allows updating at register granularity value, i.e. not the complete set needs to be updated (though, it is possible to do it).

4.5.7.2.1 Conditions

The size of the field array `Configuration` must be in the range from 1 – 15, inclusive. The field array `Configuration` must contain a set of RF Configuration, Register Address and Value. The field `RF configuration` must be in the range from 0x0 – 0x2B for TX Configuration and 0x80 – 0xAB for the RX configuration, inclusive. The address within field `Register Address` must exist within the respective RF configuration. Field `Value` should contain a value which has to be written into the given register and must be 4 bytes long (little-endian format).

4.5.7.2.2 Command

Table 67. UPDATE_RF_CONFIGURATION command value

Update the RF configuration

Payload Field	Length	Value/Description		
Configuration[1...n]	6 Bytes	RF Configuration	1 Byte	RF Configuration for which the register must be changed.
		Register Address	1 Byte	Register Address within the given RF technology.
		Value	4 Bytes	Value which must be written into the register. (Little-endian)

4.5.7.2.3 Response

Table 68. UPDATE_RF_CONFIGURATION response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_MEMORY_ERROR

4.5.7.2.4 Event

There are no events for this command.

4.5.7.3 GET_RF_CONFIGURATION

This instruction is used to read out an RF configuration. The register address-value-pairs are available in the response. In order to know how many pairs are to be expected, first size information can be retrieved from the first TLV, which indicates the total length of the payload.

4.5.7.3.1 Conditions

The field `RF configuration` must be in the range from `0x0 – 0x2B` for TX Configuration and `0x80 – 0xAB` for the RX configuration, inclusive.

4.5.7.3.2 Command

Table 69. GET_RF_CONFIGURATION command value

Retrieve the RF configuration.

Payload Field	Length	Value/Description
RF Configuration	1 Byte	RF Configuration for which the set of register value pairs must be retrieved.

4.5.7.3.3 Response

Table 70. GET_RF_CONFIGURATION Response value

Payload Field	Length	Value/Description		
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:		
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)		
Pair[1...n]	5 Bytes	Register Address	1 Byte	Register Address within the given RF technology.
		Value	4 Bytes	32-Bit register value.

4.5.7.3.4 Event

There is not event for the instruction.

4.5.8 RF Field Handling

4.5.8.1 RF_ON

This instruction is used to enable the RF on. The DPC regulation at initial FieldOn shall be handled in this command.

4.5.8.1.1 Command

Table 71. RF_FIELD_ON command value

Configure RF_FIELD_ON.

Payload Field	Length	Value/Description		
RF_on_config	1 Byte	Bit 0	0	Use collision avoidance
			1	Disable collision avoidance
		Bit 1	0	No P2P active
			1	P2P active

4.5.8.1.2 Response

Table 72. RF_FIELD_ON response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_RF_COLLISION_ERROR (RF field is not switched on due to RF collision) PN5190_STATUS_TIMEOUT (RF field is not switched on due to timeout) PN5190_STATUS_TXLDO_ERROR (TXLDO error due to VUP is not available) PN5190_STATUS_RFCFG_NOT_APPLIED (RF configuration is not applied prior to this command)

4.5.8.1.3 Event

There is no event for this instruction.

4.5.8.2 RF_OFF

This instruction is used to disable the RF Field.

4.5.8.2.1 Command

Table 73. RF_FIELD_OFF command value

Payload Field	Length	Value/Description
Empty	Empty	empty

4.5.8.2.2 Response

Table 74. RF_FIELD_OFF response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)

4.5.8.2.3 Event

There is no event for this instruction.

4.5.9 Test bus configuration

The available test bus signals on the selected PAD configurations are listed in [Section 7](#) for the reference. These must be referred for providing the configuration for test bus instructions as mentioned below.

4.5.9.1 CONFIGURE_TESTBUS_DIGITAL

This instruction is used to switch available digital test bus signal on selected pad configurations.

4.5.9.1.1 Command

Table 75. CONFIGURE_TESTBUS_DIGITAL command value

Payload field	Length	Value/description	
TB_SignalIndex	1 Byte		Refer to Section 7
TB_BitIndex	1 Byte		Refer to Section 7
TB_PadIndex	1 Byte		The pad index, on which the digital signal to be output
		0x00	AUX1 pin
		0x01	AUX2 pin
		0x02	AUX3 pin
		0x03	GPIO0 pin
		0x04	GPIO1 pin
		0x05	GPIO2 pin
		0x06	GPIO3 pin
		0x07-0xFF	RFU

4.5.9.1.2 Response

Table 76. CONFIGURE_TESTBUS_DIGITAL response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)

4.5.9.1.3 Event

There is no event for this instruction.

4.5.9.2 CONFIGURE_TESTBUS_ANALOG

This instruction is used to get available analog test bus signal on selected pad configurations.

The signal on analog test bus can be obtained in different modes. They are:

4.5.9.2.1 RAW mode

In this mode, the signal chosen by `TB_SignalIndex0` is shifted by `Shift_Index0`, masked with `Mask0` and output on `AUX1`. Similarly, the signal chosen by `TB_SignalIndex1` is shifted by `Shift_Index1`, masked with `Mask1` and output on `AUX2`.

This mode offers flexibility for the customer to output any signal that is 8 bits wide or lesser and not requiring sign conversion to be output onto the analog pads.

4.5.9.2.2 COMBINED mode

In this mode, analog signal will be the 10 bit signed `ADCI/ADCQ/pcrm_if_rssi` value converted to an unsigned value, scaled back to 8 bits and then output on either `AUX1` or `AUX2` pads.

Only one of either `ADCI/ADCQ` (10-bit) converted values can be output to `AUX1/AUX2` at any time.

If the `Combined_Mode` Signal payload field value is 2 (Analog and Digital Combined), then analog and digital test bus is routed on `AUX1`(Analog Signal) and `GPIO0`(Digital Signal).

The signals to be routed are configured in the EEPROM address mentioned below:

0xCE9 - `TB_SignalIndex`

0xCEA - `TB_BitIndex`

0xCEB - Analog `TB_Index`

The test bus Index and test bus bit have to be configured in EEPROM before we issue the combined mode with option 2.

Note:

The host shall provide all the fields, regardless of field applicability in “raw” or “combined” mode. The PN5190 IC only considers the applicable field values.

4.5.9.2.3 Command

Table 77. CONFIGURE_TESTBUS_ANALOG command value

Payload field	Length	Value/description		Field applicability for combined mode
bConfig	1 Byte		Configurable bits. Refer to Table 78	Yes
Combined_Mode Signal	1 Byte	0 – ADCI/ADCQ 1 – pcrn_if_rssi 2 – Analog and Digital Combined 3 - 0xFF – Reserved		Yes

Table 77. CONFIGURE_TESTBUS_ANALOG command value...continued

Payload field	Length	Value/description		Field applicability for combined mode
TB_SignalIndex0	1 Byte		Signal index of the analog signal. Refer to Section 7	Yes
TB_SignalIndex1	1 Byte		Signal index of the analog signal. Refer to Section 7	Yes
Shift_Index0	1 Byte		DAC0 input shift positions. Direction will be decided by bit in bConfig[1].	No
Shift_Index1	1 Byte		DAC1 input shift positions. Direction will be decided by bit in bConfig[2].	No
Mask0	1 Byte		DAC0 mask	No
Mask1	1 Byte		DAC1 mask	No

Table 78. Config bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description	Applicable to mode
X	X							DAC1 output shift Range – 0, 1, 2	Raw
		X	X					DAC0 output shift Range – 0, 1, 2	Raw
				X				In combined mode, signal on AUX1/AUX2 pin 0 → Signal on AUX1 1 → Signal on AUX2	Combined
					X			DAC1 input shift direction 0 → Shift right 1 → Shift left	Raw
						X		DAC0 input shift direction 0 → Shift right 1 → Shift left	Raw
							X	Mode. 0 → Raw mode 1 → Combined mode	Raw/Combined

4.5.9.2.4 Response

Table 79. CONFIGURE_TESTBUS_ANALOG response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)

4.5.9.2.5 Event

There is no event for this instruction.

4.5.9.3 CONFIGURE_MULTIPLE_TESTBUS_DIGITAL

This instruction is used to switch multiple available digital test bus signal on selected pad configurations.

Note: *If this length is ZERO then a Digital test bus is RESET.*

4.5.9.3.1 Command

Table 80. CONFIGURE_MULTIPLE_TESTBUS_DIGITAL command value

Payload field	Length	Value/description	
TB_SignalIndex #1	1 Byte	Refer to 8 below	
TB_BitIndex #1	1 Byte	Refer to 8 below	
TB_PadIndex #1	1 Byte	The pad index, on which the digital signal to be output	
		0x00	AUX1 pin
		0x01	AUX2 pin
		0x02	AUX3 pin
		0x03	GPIO0 pin
		0x04	GPIO1 pin
		0x05	GPIO2 pin
		0x06	GPIO3 pin
		0x07-0xFF	RFU
TB_SignalIndex #2	1 Byte	Refer to 8 below	
TB_BitIndex #2	1 Byte	Refer to 8 below	
TB_PadIndex #2	1 Byte	The pad index, on which the digital signal to be output	
		0x00	AUX1 pin
		0x01	AUX2 pin
		0x02	AUX3 pin
		0x03	GPIO0 pin
		0x04	GPIO1 pin
		0x05	GPIO2 pin
		0x06	GPIO3 pin
		0x07-0xFF	RFU

4.5.9.3.2 Response

Table 81. CONFIGURE_MULTIPLE_TESTBUS_DIGITAL response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR (No further data is present)

4.5.9.3.3 Event

There is no event for this instruction.

4.5.10 CTS Configuration

4.5.10.1 CTS_ENABLE

This instruction is used to enable/disable the CTS logging feature.

4.5.10.1.1 Command

Table 82. CTS_ENABLE command value

Payload Field	Length	Value/Description		
Enable/Disable	1 Byte	Bit 0	0	Disable the CTS Logging Feature
			1	Enable the CTS Logging Feature
		Bit 1-7	RFU	

4.5.10.1.2 Response

Table 83. CTS_ENABLE response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)

4.5.10.1.3 Event

Following table shows the event data which will be sent as part of the event message as shown in [Figure 12](#) and [Figure 13](#).

Table 84. This informs the host that data had been received. EVT_CTS_DONE

Payload Field	Length	Value/Description
Event	1 byte	00 ... TRIGGER has occurred, data is ready for reception.

4.5.10.2 CTS_CONFIGURE

This instruction is used to configure all the required CTS registers such as triggers, test bus registers, sampling configuration etc.,

Note:

[ref.\[1\]](#) provides a better understanding of CTS configuration. The captured data to be sent as part of the response to [Section 4.5.10.4](#) command.

4.5.10.2.1 Command

Table 85. CTS_CONFIGURE command value

Payload Field	Length	Value/Description
PRE_TRIGGER_SHIFT	1 Byte	Defines the length of the after-trigger acquisition sequence in 256 bytes units. 0 means no shift; n means n*256 bytes block shift. Note: Valid only if TRIGGER_MODE is "PRE" or "COMB" trigger mode
TRIGGER_MODE	1 Byte	Specifies Acquisition mode to be used.
		0x00 - POST mode
		0x01 - RFU
		0x02 - PRE Mode
		0x03 - 0xFF - Invalid
RAM_PAGE_WIDTH	1 Byte	Specifies the amount of on-chip memory that is covered by an acquisition. Granularity is chosen by design as 256 Bytes (i.e. 64 32-bits words). Valid values are as below: 0x00h - 256 bytes 0x02h - 768 bytes 0x01h - 512 bytes 0x03h - 1024 bytes 0x04h - 1280 bytes 0x05h - 1536 bytes 0x06h - 1792 bytes 0x07h - 2048 bytes 0x08h - 2304 bytes 0x09h - 2560 bytes 0x0Ah - 2816 bytes 0x0Bh - 3072 bytes 0x0Ch - 3328 bytes 0x0Dh - 3584 bytes 0x0Eh - 3840 bytes 0x0Fh - 4096 bytes 0x10h - 4352 bytes 0x11h - 4608 bytes 0x12h - 4864 bytes 0x13h - 5120 bytes 0x14h - 5376 bytes 0x15h - 5632 bytes 0x16h - 5888 bytes 0x17h - 6144 bytes 0x18h - 6400 bytes 0x19h - 6656 bytes 0x1Ah - 6912 bytes 0x1Bh - 7168 bytes 0x1Ch - 7424 bytes 0x1Dh - 7680 bytes 0x1Eh - 7936 bytes 0x1Fh - 8192 bytes

Table 85. CTS_CONFIGURE command value...continued

Payload Field	Length	Value/Description
		Note: if values provided is more than 0x1F, the value will be masked with 0x1F and resultant value will be considered.
SAMPLE_CLK_DIV	1 Byte	The decimal value of this field specifies the clock rate division factor to be used during acquisition. CTS clock = 13.56 MHz / 2 ^{SAMPLE_CLK_DIV}
		00 - 13560 kHz 01 - 6780 kHz 02 - 3390 kHz 03 - 1695 kHz 04 - 847.5 kHz 05 - 423.75 kHz 06 - 211.875 kHz 07 - 105.9375 kHz 08 - 52.96875 kHz 09 - 26.484375 kHz 10 - 13.2421875 kHz 11 - 6.62109375 kHz 12 - 3.310546875 kHz 13 - 1.6552734375 kHz 14 - 0.82763671875 kHz 15 - 0.413818359375 kHz
SAMPLE_BYTE_SEL	1 Byte	These bits are used to specify which bytes of the two 16-bits input buses contribute to the interleave mechanism that generates data to be transferred to the on-chip memory. The meaning and usage of them is depending from the SAMPLE_MODE_SEL values. Note: Given value is always masked with 0x0F and then effective value is considered.
SAMPLE_MODE_SEL	1 Byte	Selects the sampling interleave mode as described by the CTS design specs. Decimal value 3 is reserved and will be treated as 0. Note: Given value is always masked with 0x03, and then effective value is considered.
TB0	1 Byte	Selects which test bus to be connected to TB0. Refer to Section 7 (TB_Signal_Index value)
TB1	1 Byte	Selects which test bus to be connected to TB1. Refer to Section 7 (TB_Signal_Index value)
TB2	1 Byte	Selects which test bus to be connected to TB2. Refer to Section 7 (TB_Signal_Index value)
TB3	1 Byte	Selects which test bus to be connected to TB3. Refer to Section 7 (TB_Signal_Index value)
TTB_SELECT	1 Byte	Selects which TB to be connected to the trigger sources. Refer to Section 7 (TB_Signal_Index value)
RFU	4 Bytes	Send always 0x00000000
MISC_CONFIG	24 Bytes	Trigger occurrences, polarity etc. Refer to ref.[1] for understanding of CTS configuration to use.

4.5.10.2.2 Response

Table 86. CTS_CONFIGURE response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR

4.5.10.2.3 Event

There is no event for this instruction.

4.5.10.3 CTS_FAST_CONFIGURE

This instruction is used to both configure and enable CTS feature.

After the first use of this command, the subsequent uses of this command take considerably less time.

This Command cannot be used for disabling CTS.

Note:

[ref.\[1\]](#) provides a better understanding of CTS Fast configuration. The captured data to be sent as part of the response to [Section 4.5.10.4](#) command.

4.5.10.3.1 Command

Table 87. CTS_FAST_CONFIGURE command value

Payload Field	Length	Value/Description
PRE_TRIGGER_SHIFT	1 Byte	Defines the length of the after-trigger acquisition sequence in 256 bytes units. 0 means no shift; n means n*256 bytes block shift. Note: Valid only if TRIGGER_MODE is "PRE" or "COMB" trigger mode
TRIGGER_MODE	1 Byte	Specifies Acquisition mode to be used.
		0x00 - POST mode
		0x01 - RFU
		0x02 - PRE Mode
		0x03 - 0xFF - Invalid
RAM_PAGE_WIDTH	1 Byte	Specifies the amount of on-chip memory that is covered by an acquisition. Granularity is chosen by design as 256 Bytes (i.e. 64 32-bits words). Valid values are as below: 0x00h - 256 bytes 0x02h - 768 bytes 0x01h - 512 bytes 0x03h - 1024 bytes 0x04h - 1280 bytes 0x05h - 1536 bytes 0x06h - 1792 bytes 0x07h - 2048 bytes 0x08h - 2304 bytes 0x09h - 2560 bytes

Table 87. CTS_FAST_CONFIGURE command value...continued

Payload Field	Length	Value/Description
		0x0Ah - 2816 bytes 0x0Bh - 3072 bytes 0x0Ch - 3328 bytes 0x0Dh - 3584 bytes 0x0Eh - 3840 bytes 0x0Fh - 4096 bytes 0x10h - 4352 bytes 0x11h - 4608 bytes 0x12h - 4864 bytes 0x13h - 5120 bytes 0x14h - 5376 bytes 0x15h - 5632 bytes 0x16h - 5888 bytes 0x17h - 6144 bytes 0x18h - 6400 bytes 0x19h - 6656 bytes 0x1Ah - 6912 bytes 0x1Bh - 7168 bytes 0x1Ch - 7424 bytes 0x1Dh - 7680 bytes 0x1Eh - 7936 bytes 0x1Fh - 8192 bytes Note: if values provided is more than 0x1F, the value will be masked with 0x1F and resultant value will be considered.
SAMPLE_CLK_DIV	1 Byte	The decimal value of this field specifies the clock rate division factor to be used during acquisition. $\text{CTS clock} = 13.56 \text{ MHz} / 2^{\text{SAMPLE_CLK_DIV}}$
		00 - 13560 kHz 01 - 6780 kHz 02 - 3390 kHz 03 - 1695 kHz 04 - 847.5 kHz 05 - 423.75 kHz 06 - 211.875 kHz 07 - 105.9375 kHz 08 - 52.96875 kHz 09 - 26.484375 kHz 10 - 13.2421875 kHz 11 - 6.62109375 kHz 12 - 3.310546875 kHz 13 - 1.6552734375 kHz 14 - 0.82763671875 kHz 15 - 0.413818359375 kHz
SAMPLE_BYTE_SEL	1 Byte	These bits are used to specify which bytes of the two 16-bits input buses contribute to the interleave mechanism that generates data to be transferred to the on-chip memory. The meaning and usage of them is depending from the SAMPLE_MODE_SEL values.

Table 87. CTS_FAST_CONFIGURE command value...continued

Payload Field	Length	Value/Description
		Note: Given value is always masked with 0x0F and then effective value is considered.
SAMPLE_MODE_SEL	1 Byte	Selects the sampling interleave mode as described by the CTS design specs. Decimal value 3 is reserved and will be treated as 0. Note: Given value is always masked with 0x03, and then effective value is considered.
TB0	1 Byte	Selects which test bus to be connected to TB0. Refer to Section 7 (TB_Signal_Index value)
TB1	1 Byte	Selects which test bus to be connected to TB1. Refer to Section 7 (TB_Signal_Index value)
TB2	1 Byte	Selects which test bus to be connected to TB2. Refer to Section 7 (TB_Signal_Index value)
TB3	1 Byte	Selects which test bus to be connected to TB3. Refer to Section 7 (TB_Signal_Index value)
TTB_SELECT	1 Byte	Selects which TB to be connected to the trigger sources. Refer to Section 7 (TB_Signal_Index value)
RFU	4 Bytes	Send always 0x00000000
MISC_CONFIG	24 Bytes	Trigger occurrences, polarity etc. Refer to ref.[1] for understanding of CTS configuration to use.

4.5.10.3.2 Response

Table 88. CTS_FAST_CONFIGURE response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR

4.5.10.3.3 Event

Following table shows the event data which will be sent as part of the event message as shown in [Figure 12](#) and [Figure 13](#).

Table 89. EVT_CTS_DONE This informs the host that data has been received.

Payload Field	Length	Value/Description
Event	1 byte	00 ... TRIGGER has occurred, data is ready for reception.

4.5.10.4 CTS_RETRIEVE_LOG

This instruction retrieves the data log of the captured test bus data samples stored in the memory buffer.

4.5.10.4.1 Command

Table 90. CTS_RETRIEVE_LOG command value

Payload Field	Length	Value/Description
ChunkSize	1 byte	0x01-0xFF Contains the number of bytes of data expected.

4.5.10.4.2 Response

Table 91. CTS_RETRIEVE_LOG response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present) PN5190_STATUS_SUCCSES_CHAINING
Log Data [1...n]	CTSRequest	Captured Samples Data chunk

Note:

Maximum size of 'Log Data' is depended upon the 'ChunkSize' that has been provided as part of the command.

Total Log size shall be available in the TLV header response.

4.5.10.4.3 Event

There is no event for this instruction.

4.5.11 TEST_MODE Commands

4.5.11.1 ANTENNA_SELF_TEST

This instruction is used to verify if the antenna is connected and the matching components are populated / assembled.

Note:

This command is not yet available. See the release notes for the availability.

4.5.11.2 PRBS_TEST

This instruction is used to generate the PRBS sequence for the different configurations of the Reader mode protocols and bit-rates. Once the instruction is executed, the PRBS test sequence will be available on RF.

Note:

Host should make sure that appropriate RF technology configuration is loaded using [Section 4.5.7.1](#) and RF is switched ON using [Section 4.5.8.1](#) command before sending this command.

4.5.11.2.1 Command

Table 92. PRBS_TEST command value

Payload Field	Length	Value/Description	
prbs_type	1 Byte	00	PRBS9(default)
		01	PRBS15
		02-FF	RFU

4.5.11.2.2 Response

Table 93. PRBS_TEST response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_NO_RF_FIELD

4.5.11.2.3 Event

There is no event for this instruction.

4.5.12 Chip Info Commands

4.5.12.1 GET_DIEID

This instruction is used to read-out the die ID of the PN5190 chip.

4.5.12.1.1 Command

This command does not have parameters, i.e. the TLV command packet does not have a "Value" field.

4.5.12.1.2 Response

Table 94. GET_DIEID response value

Payload field	Length	Value/description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (no further data is present)
Values	16 Bytes	16 bytes die ID.

4.5.12.1.3 Event

There are no events for this command.

4.5.12.2 GET_VERSION

This instruction is used to read-out the HW version, ROM version, and the FW version of the PN5190 chip.

4.5.12.2.1 Command

This command does not have parameters, i.e. the TLV command packet does not have a "Value" field.

There is a command DL_GET_VERSION ([Section 3.4.4](#)) available in download mode that can be used to read-out HW version, ROM version, and FW version.

4.5.12.2.2 Response

Table 95. GET_VERSION response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 9]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
HW_V	1 byte	Hardware version
RO_V	1 byte	ROM code
FW_V	2 bytes	Firmware version (used for download)
RFU1-RFU2	1-2 bytes	-

The expected response for different version of PN5190 IC is mentioned in ([Section 3.4.4](#))

4.5.12.2.3 Event

There are no events for this command.

5 Appendix (Examples)

This appendix consists of the examples for the above mentioned commands. The examples are only for illustrative purpose to show the contents of command.

5.1 Example for WRITE_REGISTER

Following sequence of data sent from host to write a 0x12345678 value into register 0x1F.

Command frame sent to PN5190: *0000051F78563412*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *00000100*

5.2 Example for WRITE_REGISTER_OR_MASK

Following sequence of data sent from host to perform logical OR operation on register 0x1F with a mask as 0x12345678

Command frame sent to PN5190: *0100051F78563412*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *01000100*

5.3 Example for WRITE_REGISTER_AND_MASK

Following sequence of data sent from host to perform logical AND operation on register 0x1F with a mask as 0x12345678

Command frame sent to PN5190: *0200051F78563412*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *02000100*

5.4 Example for WRITE_REGISTER_MULTIPLE

Following sequence of data sent from host to perform logical AND operation on register 0x1F with a mask as 0x12345678, and on logical OR operation on register 0x20 with a mask as 0x11223344, and a write to register 0x21 with a value as 0xAABBCCDD.

Command frame sent to PN5190: *0300121F03785634122002443322112101DDCCBBAA*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *03000100*

5.5 Example for READ_REGISTER

Following sequence of data sent from host to read the contents of register 0x1F and assuming the register has the value of 0x12345678

Command frame sent to PN5190: *0400011F*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation):

0400050078563412

5.6 Example for READ_REGISTER_MULTIPLE

Following sequence of data sent from host to read the contents of registers 0x1F that contain the value of 0x12345678, and register 0x25 that contain the value of 0x11223344

Command frame sent to PN5190: 0500021F25

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation):
050009007856341244332211

5.7 Example for WRITE_E2PROM

Following sequence of data sent from host to write to E2PROM locations 0x0130 to 0x0134 with the contents as 0x11, 0x22, 0x33, 0x44, 0x55

Command frame sent to PN5190: 06000730011122334455

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 06000100

5.8 Example for READ_E2PROM

Following sequence of data sent from host to read from E2PROM locations 0x0130 to 0x0134 where the contents stored are: 0x11, 0x22, 0x33, 0x44, 0x55

Command frame sent to PN5190: 07000430010500

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation):
070006001122334455

5.9 Example for TRANSMIT_RF_DATA

Following sequence of data sent from host to send a REQA command (0x26), with number of bits to be transmitted as '0x07', assuming that required registers are set before and RF is switched ON.

Command frame sent to PN5190: 0800020726

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 08000100

5.10 Example for RETREIVE_RF_DATA

Following sequence of data sent from host to receive the data received/stored in the internal CLIF buffer (assuming that 0x05 was received), assuming that a TRANSMIT_RF_DATA is already sent after RF is switched ON.

Command frame sent to PN5190: 090000

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 090003000400

5.11 Example for EXCHANGE_RF_DATA

Following sequence of data sent from host to transmit a REQA (0x26), with number of bits in last byte to send set as 0x07, with all status to be received along with the data. Assumption is that required RF registers are already set and RF is switched ON.

Command frame sent to PN5190: 0A0003070F26

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation): 0A000F0002000000000000200000000004400

5.12 Example for LOAD_RF_CONFIGURATION

Following sequence of data sent from host to set the RF configuration. For TX, 0x00 and for RX, 0x80

Command frame sent to PN5190: 0D00020080

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 0D000100

5.13 Example for UPDATE_RF_CONFIGURATION

Following sequence of data sent from host to update the RF configuration. For TX, 0x00, with register address for CLIF_CRC_TX_CONFIG and value as 0x00000001

Command frame sent to PN5190: 0E0006001201000000

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation): 0E000100

5.14 Example for RF_ON

Following sequence of data sent from host to switch ON the RF field using collision avoidance and No P2P active. It is assumed, the corresponding RF TX and RX configuration are already set in PN5190.

Command frame sent to PN5190: 10000100

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 10000100

5.15 Example for RF_OFF

Following sequence of data sent from host to switch OFF the RF field.

Command frame sent to PN5190: 110000

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 11000100

6 Appendix (RF protocol configuration indexes)

This appendix consists of the RF protocol configuration indexes supported by the PN5190.
The TX and RX config settings have to be used in [Section 4.5.7.1](#), [Section 4.5.7.2](#), [Section 4.5.7.3](#) commands.

TX					RX					
Setting	Protocol	alternate	Speed	Modulation	Setting	Protocol	alternate	Speed	Modulation	
P C D	0x00	ISO14443A	NFC-PI-106, NFC-AI-106	106	Miller	0x80	ISO14443A	NFC-PI-106, NFC-AI-106	106	Manch SubC
	0x01	ISO14443A		212	Miller	0x81	ISO14443A		212	BPSK
	0x02	ISO14443A		424	Miller	0x82	ISO14443A		424	BPSK
	0x03	ISO14443A		848	Miller	0x83	ISO14443A		848	BPSK
	0x04	ISO14443B		106	NRZ	0x84	ISO14443B		106	BPSK
	0x05	ISO14443B		212	NRZ	0x85	ISO14443B		212	BPSK
	0x06	ISO14443B		424	NRZ	0x86	ISO14443B		424	BPSK
	0x07	ISO14443B		848	NRZ	0x87	ISO14443B		848	BPSK
	0x08	Felica	NFC-PI-212, NFC-AI-212	212		0x88	Felica	NFC-PI-212, NFC-AI-212	212	
	0x09	Felica	NFC-PI-424, NFC-AI-424	424		0x89	Felica	NFC-PI-424, NFC-AI-424	424	
	0x0a	ISO15693_ASK100		26	Iout4/ASK100	0x8a	ISO15693		6P6	Manch424
	0x0b	ISO15693_ASK10		26	Iout4/ASK10	0x8b	ISO15693		26	Manch424
	0x0c					0x8c	ISO15693		53	Manch424
	0x0d					0x8d	ISO15693		106	Plutus
	0x0e					0x8e	ISO15693		212	Plutus
	0x0f	ISO180003m3		TARI=18_80us	ASK	0x8f	ISO180003m3_Man424_4		106	Manch424/4 period
0x10	ISO180003m3		TARI=9_44us	ASK	0x90	ISO180003m3_Man424_2		212	Manch424/2 period	
0x11					0x91	ISO180003m3_Man488_4		212	Manch488/4 period	
0x12					0x92	ISO180003m3_Man488_2		424	Manch488/2 period	
P I C C	0x13	ISO14443A-PICC	NFC-PT-106	106	Manch SubC	0x93	ISO14443A-PICC	NFC-PT-106	106	Miller
	0x14	ISO14443A-PICC		212	BPSK	0x94	ISO14443A-PICC		212	Miller
	0x15	ISO14443A-PICC		424	BPSK	0x95	ISO14443A-PICC		424	Miller
	0x16	ISO14443A-PICC		848	BPSK	0x96	ISO14443A-PICC		848	Miller
	0x17	NFC-PT-212		212		0x97	NFC-PT-212		212	
	0x18	NFC-PT-424		424		0x98	NFC-PT-424		424	
	0x19	NFC-AT-106		106		0x99	NFC-AT-106		106	
	0x1a	NFC-AT-212		212		0x9a	NFC-AT-212		212	
	0x1b	NFC-AT-424		424		0x9b	NFC-AT-424		424	
	0x1c	GTM			All	All	GTM			All
	0x1d	B_Prime		All	All	0x9d	B_Prime		All	All
	0xFF	NO		CHANGE		0x9E	Boot		All	
	0xFF	NOT		DEFINED		0xFF	NO		CHANGE	

Figure 20. RF Protocol configuration indexes

Figure 20. RF Protocol configuration indexes

7 Appendix (CTS and TESTBUS signals)

Below table specifies the different signals available from PN5190 to capture using CTS instructions (Section 4.5.10) and TESTBUS instructions.

Serial Number	TB_Signal Index	Name	Bit7	Bit6	Bit5	Bit4	TB_Bit_Index			Bit3	Bit2	Bit1	Bit0
17	0x5c	obs_clf_sigpro_rm4	signal_active	mf_pt_s0_q[14:8]									
18	0x6d	obs_clf_sigpro_rm5	mf_pt_s0_q[7:0]										
19	0x6e	obs_clf_sigpro_rm6	rm_dsp_enable_o	mf_pt_s1_q[14:8]									
20	0x6f	obs_clf_sigpro_rm7	mf_pt_s1_q[7:0]										
21	0x70	obs_clf_sigpro_rm8	rm_sdata_o	sync_filt_out[14:8]									
22	0x71	obs_clf_sigpro_rm9	sync_filt_out[7:0]										
29	0x78	obs_clf_tbcntrol_patchbox0	adc_data_i_q[2]										
30	0x79	obs_clf_tbcntrol_patchbox1	adc_data_i_q[9]										
31	0x7a	obs_clf_tbcntrol_patchbox2	adc_data_q_q[2]										
32	0x7b	obs_clf_tbcntrol_patchbox3	adc_data_q_q[9]										
35	0x86	obs_clf_tbcntrol_patchbox14	adc_data_q_q[6:0]										
41	0x8b	obs_clf_txenc1	bit_gen_enable	symbol_enable	tx_enable_o	tx_active	tx_state[2:0]						tx_rate_enable
44	0x42	obs_clf_rxdec0	mmp_msgs[3:0]										
45	0x45	obs_clf_rxdec3	fp_flg_par_ignored	fp_ieof	fp_flg_par_irrelevant		fp_flg_collon_detected		fp_byte_dmark		fp_state	fp_phase[1:0]	
47	0x68	obs_clf_sigpro_rm0	rm_dsp_enable_o	rm_cor_adc_i_q[14:8]									
48	0x69	obs_clf_sigpro_rm1	rm_cor_adc_i_q[7:0]										
49	0x6a	obs_clf_sigpro_rm2	rm_dsp_enable_o	rm_cor_adc_q_q[14:8]									
50	0x6b	obs_clf_sigpro_rm3	rm_cor_adc_q_q[7:0]										

Figure 21. CTS and TESTBUS signals

Figure 21. CTS and TESTBUS signals

These have to be used for Section 4.5.9.1, Section 4.5.9.2, Section 4.5.10.2 command.

8 Abbreviations

Table 96. Abbreviations

Abbr.	Meaning
CLK	Clock
DWL_REQ	Download Request pin (also called DL_REQ)
EEPROM	Electrically Erasable Programmable Read Only Memory
FW	Firmware
GND	Ground
GPIO	General Purpose Input Output
HW	Hardware
I ² C	Inter-Integrated Circuit (serial data bus)
IRQ	Interrupt Request
ISO/IEC	International Standard Organization / International Electrotechnical Community
NFC	Near Field Communication
OS	Operating System
PCD	Proximity Coupling Device (Contactless reader)
PICC	Proximity Integrated Circuit Card (Contactless card)
PMU	Power Management unit
POR	Power-on reset
RF	Radiofrequency
RST	Reset
SFWU	secure firmware download mode
SPI	Serial Peripheral Interface
VEN	V Enable pin

9 References

- [1] Tool - CTS configuration part of NFC Cockpit ([link](#))
- [2] Data sheet - PN5190 - NFC Frontend supporting challenging RF environment for payment, physical access control ([link](#))

10 Note about the source code in the document

The example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2021-2025 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials must be provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

11 Revision history

Table 97. Revision history

Document ID	Release date	Description
UM11942 v.4.0	6 May 2025	<ul style="list-style-type: none"> Section 4.2 "Commands list overview": updated. Section 4.5.4.8 "SWITCH_MODE_LPCD": Section 4.5.4.8.1 "Command": updated with new option LPCD_WITH_AUTOCOLL_EVENT for command SWITCH_MODE_LPCD. Section 4.5.10 "CTS Configuration": updated with new command CTS_FAST_CONFIGURE. Section 4.5.10.3 "CTS_FAST_CONFIGURE": added. Section 4.5.12.1 "GET_DIEID": Section 4.5.12.1.1 "Command" updated. Section 4.5.12.2 "GET_VERSION": Section 4.5.12.2.1 "Command" updated. Section 9 "References": updated.
UM11942 v.3.9	17 June 2024	<ul style="list-style-type: none"> Section 4.5.2.3.2 "Response": updated.
UM11942 v.3.8	23 November 2023	<ul style="list-style-type: none"> Section 4.5.4.6.2 "Response": Table 49 "RF Technologies Bitmask": updated. Section 10 "Note about the source code in the document": added.
UM11942 v.3.7	25 May 2023	<ul style="list-style-type: none"> Document type and title changed from product data sheet addendum to user manual. Editorial cleanup. Updated editorial terms for SPI signals. Section 4.5.2.3 "GET_CRC_USER_AREA": added command GET_CRC_USER_AREA in Table 8 "PN5190 command list". Section 3.4.1 "HDLL Command OP codes": updated various differentiated details for PN5190B1 and PN5190B2. Section 3.4.7 "DL_CHECK_INTEGRITY command": updated response.
UM11942 v.3.6	11 January 2023	<ul style="list-style-type: none"> Enhanced Check Integrity response description in Section 3.4.7 "DL_CHECK_INTEGRITY command".
UM11942 v.3.5	4 November 2022	<ul style="list-style-type: none"> Section 4.5.4.6.3 "Event": added.
UM11942 v.3.4	1 July 2022	<ul style="list-style-type: none"> Section 4.5.9.3 "CONFIGURE_MULTIPLE_TESTBUS_DIGITAL": Added command CONFIGURE_MULTIPLE_TESTBUS_DIGITAL in Table 8 "PN5190 command list". Section 4.5.9.2.2 "COMBINED mode": updated.
UM11942 v.3.3	29 March 2022	<ul style="list-style-type: none"> Hardware description improved in Section 4.5.12.2.1 "Command" and Section 4.5.12.2.2 "Response".
UM11942 v.3.2	10 September 2021	<ul style="list-style-type: none"> Firmware version numbers updated from 2.1 to 2.01 and 2.3 to 2.03.
UM11942 v.3.1	27 May 2021	<ul style="list-style-type: none"> Section 4.5.3.5 "RETRIEVE_RF_FELICA_EMD_DATA (FeliCa EMD Configuration)": Section 4.5.3.5.1 "Command" description added.
UM11942 v.3.0	18 January 2021	<ul style="list-style-type: none"> First official released version.

Legal information

Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <https://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this document expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

HTML publications — An HTML version, if available, of this document is provided as a courtesy. Definitive information is contained in the applicable document in PDF format. If there is a discrepancy between the HTML document and the PDF document, the PDF document has priority.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately.

Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

NXP B.V. — NXP B.V. is not an operating company and it does not distribute or sell products.

Licenses

Purchase of NXP ICs with NFC technology — Purchase of an NXP Semiconductors IC that complies with one of the Near Field Communication (NFC) standards ISO/IEC 18092 and ISO/IEC 21481 does not convey an implied license under any patent right infringed by implementation of any of those standards. Purchase of NXP Semiconductors IC does not include a license to any NXP patent (or other IP right) covering combinations of those products with other products, whether hardware or software.

Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

NXP — wordmark and logo are trademarks of NXP B.V.

EdgeVerse — is a trademark of NXP B.V.

FeliCa — is a trademark of Sony Corporation.

MIFARE — is a trademark of NXP B.V.

MIFARE Classic — is a trademark of NXP B.V.

Tables

Tab. 1.	List of HDLL command OP codes	11	Tab. 42.	RETRIEVE_RF_DATA response value	36
Tab. 2.	List of HDLL response OP codes	12	Tab. 43.	RECEIVE_RF_DATA command value	36
Tab. 3.	Response to the GetVersion command	12	Tab. 44.	ReceiveRFConfig bitmask	36
Tab. 4.	Expected values of the response of the GetVersion command	13	Tab. 45.	RECEIVE_RF_DATA response value	36
Tab. 5.	Response to the GetSession command	13	Tab. 46.	RETRIEVE_RF_FELICA_EMD_DATA command value	37
Tab. 6.	Response to the GetDiell command	14	Tab. 47.	RETRIEVE_RF_FELICA_EMD_DATA response value	37
Tab. 7.	Response to the CheckIntegrity command	14	Tab. 48.	SWITCH_MODE_AUTOCOLL command value	41
Tab. 8.	PN5190 command list	17	Tab. 49.	RF Technologies Bitmask	42
Tab. 9.	PN5190 response status values	18	Tab. 50.	SWITCH_MODE_AUTOCOLL response value	42
Tab. 10.	PN5190 events (contents of EVENT_ STATUS)	20	Tab. 51.	EVENT_SWITCH_MODE_AUTOCOLL – AUTOCOLL_EVENT data	42
Tab. 11.	Definitions for EVENT_STATUS bits	22	Tab. 52.	SWITCH_MODE_STANDBY command value	44
Tab. 12.	Definitions for BOOT_STATUS_DATA bits	22	Tab. 53.	Config Bitmask	44
Tab. 13.	Definitions for STANDBY_PREV_STATUS_ DATA bits	23	Tab. 54.	SWITCH_MODE_STANDBY response value	44
Tab. 14.	Definitions for GENERAL_ERROR_ STATUS_DATA bits	24	Tab. 55.	SWITCH_MODE_LPCD command value	46
Tab. 15.	Definitions for LPCD_STATUS_DATA bytes	25	Tab. 56.	Wake-up Control Bitmask	46
Tab. 16.	Definitions for LPCD_CALIBRATION_ DONE status data bytes for ULPCD	25	Tab. 57.	Reference Value byte info	47
Tab. 17.	Definitions for LPCD_CALIBRATION_ DONE status data bytes for LPCD	25	Tab. 58.	SWITCH_MODE_LPCD response value	47
Tab. 18.	Expected event response when different commands terminated with	26	Tab. 59.	EVT_SWITCH_MODE_LPCD	47
Tab. 19.	WRITE_REGISTER command value	27	Tab. 60.	SWITCH_MODE_DOWNLOAD response value	48
Tab. 20.	WRITE_REGISTER response value	27	Tab. 61.	MFC_AUTHENTICATE Command	48
Tab. 21.	WRITE_REGISTER_OR_MASK command value	27	Tab. 62.	MFC_AUTHENTICATE Response	49
Tab. 22.	WRITE_REGISTER_OR_MASK response value	28	Tab. 63.	EPC_GEN2_INVENTORY command value	49
Tab. 23.	WRITE_REGISTER_AND_MASK command value	28	Tab. 64.	EPC_GEN2_INVENTORY response value	50
Tab. 24.	WRITE_REGISTER_AND_MASK response value	28	Tab. 65.	LOAD_RF_CONFIGURATION command value	52
Tab. 25.	WRITE_REGISTER_MULTIPLE command value	29	Tab. 66.	LOAD_RF_CONFIGURATION response value	52
Tab. 26.	WRITE_REGISTER_MULTIPLE response value	29	Tab. 67.	UPDATE_RF_CONFIGURATION command value	52
Tab. 27.	READ_REGISTER command value	30	Tab. 68.	UPDATE_RF_CONFIGURATION response value	53
Tab. 28.	READ_REGISTER response value	30	Tab. 69.	GET_RF_CONFIGURATION command value	53
Tab. 29.	READ_REGISTER_MULTIPLE command value	30	Tab. 70.	GET_RF_CONFIGURATION Response value	53
Tab. 30.	READ_REGISTER_MULTIPLE response value	30	Tab. 71.	RF_FIELD_ON command value	54
Tab. 31.	WRITE_E2PROM command value	31	Tab. 72.	RF_FIELD_ON response value	54
Tab. 32.	WRITE_EEPROM response value	31	Tab. 73.	RF_FIELD_OFF command value	54
Tab. 33.	READ_E2PROM command value	32	Tab. 74.	RF_FIELD_OFF response value	55
Tab. 34.	READ_E2PROM response value	32	Tab. 75.	CONFIGURE_TESTBUS_DIGITAL command value	55
Tab. 35.	GET_CRC_USER_AREA response value	33	Tab. 76.	CONFIGURE_TESTBUS_DIGITAL response value	55
Tab. 36.	EXCHANGE_RF_DATA command value	34	Tab. 77.	CONFIGURE_TESTBUS_ANALOG command value	56
Tab. 37.	RFExchangeConfig Bitmask	34	Tab. 78.	Config bitmask	57
Tab. 38.	EXCHANGE_RF_DATA response value	34	Tab. 79.	CONFIGURE_TESTBUS_ANALOG response value	57
Tab. 39.	TRANSMIT_RF_DATA command value	35			
Tab. 40.	TRANSMIT_RF_DATA response value	35			
Tab. 41.	RETRIEVE_RF_DATA command value	35			

Tab. 80.	CONFIGURE_MULTIPLE_TESTBUS_	Tab. 88.	CTS_FAST_CONFIGURE response value	64
	DIGITAL command value	Tab. 89.	EVT_CTS_DONE This informs the host	
Tab. 81.	CONFIGURE_MULTIPLE_TESTBUS_		that data has been received.	64
	DIGITAL response value	Tab. 90.	CTS_RETRIEVE_LOG command value	64
Tab. 82.	CTS_ENABLE command value	Tab. 91.	CTS_RETRIEVE_LOG response value	65
Tab. 83.	CTS_ENABLE response value	Tab. 92.	PRBS_TEST command value	65
Tab. 84.	This informs the host that data had been	Tab. 93.	PRBS_TEST response value	66
	received. EVT_CTS_DONE	Tab. 94.	GET_DIEID response value	66
		Tab. 95.	GET_VERSION response value	67
Tab. 85.	CTS_CONFIGURE command value	Tab. 96.	Abbreviations	73
Tab. 86.	CTS_CONFIGURE response value	Tab. 97.	Revision history	76
Tab. 87.	CTS_FAST_CONFIGURE command value			

Figures

Fig. 1.	HDLL Frame	3	Fig. 13.	Event message format when an error occurred	21
Fig. 2.	SPI Write sequence	4	Fig. 14.	UseCase1: Event for Normal Operation mode upon power up (POR, Cold Boot)	40
Fig. 3.	SPI Read sequence	4	Fig. 15.	UseCase2: Event sent for terminating already running commands to switch to Normal Operation mode (Abort command)	40
Fig. 4.	Flow indication	5	Fig. 16.	UseCase3: Event for Normal Operation mode upon Warm Boot/Soft-reset of PN5190	41
Fig. 5.	Communication of host controller	6	Fig. 17.	Communication example	43
Fig. 6.	Allowed sequences and rules	6	Fig. 18.	Communication example	45
Fig. 7.	Message format	7	Fig. 19.	Communication example	47
Fig. 8.	TLV format	7	Fig. 20.	RF Protocol configuration indexes	71
Fig. 9.	Reading response/events in multiple SPI frames	7	Fig. 21.	CTS and TESTBUS signals	72
Fig. 10.	Reading of response/events in single SPI frame	8			
Fig. 11.	Procedure to enter Secured firmware download mode	10			
Fig. 12.	Event message format when no errors occurred	21			

Contents

1	Introduction	2	4.5.1.1	WRITE_REGISTER	27
1.1	Introduction	2	4.5.1.2	WRITE_REGISTER_OR_MASK	27
1.1.1	Scope	2	4.5.1.3	WRITE_REGISTER_AND_MASK	28
2	Host communication overview	3	4.5.1.4	WRITE_REGISTER_MULTIPLE	28
2.1	HDLL mode	3	4.5.1.5	READ_REGISTER	29
2.1.1	Description of HDLL	3	4.5.1.6	READ_REGISTER_MULTIPLE	30
2.1.2	Transport mapping over the SPI	4	4.5.2	E2PROM Manipulation	31
2.1.2.1	Write Sequence from the host (direction DH => PN5190)	4	4.5.2.1	WRITE_E2PROM	31
2.1.2.2	Read Sequence from the host (Direction PN5190 => DH)	4	4.5.2.2	READ_E2PROM	32
2.1.3	HDLL protocol	5	4.5.2.3	GET_CRC_USER_AREA	32
2.2	TLV mode	5	4.5.3	CLIF data Manipulation	33
2.2.1	Frame definition	5	4.5.3.1	EXCHANGE_RF_DATA	33
2.2.2	Flow indication	5	4.5.3.2	TRANSMIT_RF_DATA	35
2.2.3	Message type	5	4.5.3.3	RETRIEVE_RF_DATA	35
2.2.3.1	Allowed sequences and rules	6	4.5.3.4	RECEIVE_RF_DATA	36
2.2.4	Message format	7	4.5.3.5	RETRIEVE_RF_FELICA_EMD_DATA (FeliCa EMD Configuration)	37
2.2.4.1	Split frame	7	4.5.4	Switching Operation Mode	38
3	IC operating boot mode - secured FW download mode	9	4.5.4.1	Normal	38
3.1	Introduction	9	4.5.4.2	Standby	38
3.2	How to trigger the "Secured firmware download" mode	9	4.5.4.3	LPCD	38
3.3	Firmware signature and version control	11	4.5.4.4	Autocoll	38
3.4	HDLL commands for legacy encrypted download and hardware crypto assisted encrypted download	11	4.5.4.5	SWITCH_MODE_NORMAL	38
3.4.1	HDLL Command OP codes	11	4.5.4.6	SWITCH_MODE_AUTOCOLL	41
3.4.2	HDLL Response Opcodes	12	4.5.4.7	SWITCH_MODE_STANDBY	43
3.4.3	DL_RESET command	12	4.5.4.8	SWITCH_MODE_LPCD	45
3.4.4	DL_GET_VERSION command	12	4.5.4.9	SWITCH_MODE_DOWNLOAD	47
3.4.5	DL_GET_SESSION_STATE command	13	4.5.5	MIFARE Classic Authentication	48
3.4.6	DL_GET_DIE_ID command	13	4.5.5.1	MFC_AUTHENTICATE	48
3.4.7	DL_CHECK_INTEGRITY command	14	4.5.6	ISO 18000-3M3 (EPC GEN2) Support	49
3.4.8	DL_SEC_WRITE command	15	4.5.6.1	EPC_GEN2_INVENTORY	49
3.4.8.1	First DL_SEC_WRITE command	15	4.5.7	RF configuration management	51
3.4.8.2	Middle DL_SEC_WRITE commands	15	4.5.7.1	LOAD_RF_CONFIGURATION	51
3.4.8.3	Last DL_SEC_WRITE command	15	4.5.7.2	UPDATE_RF_CONFIGURATION	52
4	IC operating boot mode - Normal Operation mode	17	4.5.7.3	GET_RF_CONFIGURATION	53
4.1	Introduction	17	4.5.8	RF Field Handling	54
4.2	Commands list overview	17	4.5.8.1	RF_ON	54
4.3	Response status values	18	4.5.8.2	RF_OFF	54
4.4	Events Overview	20	4.5.9	Test bus configuration	55
4.4.1	Normal events over IRQ pin	20	4.5.9.1	CONFIGURE_TESTBUS_DIGITAL	55
4.4.1.1	Event message formats	21	4.5.9.2	CONFIGURE_TESTBUS_ANALOG	56
4.4.1.2	Different EVENT status definitions	22	4.5.9.3	CONFIGURE_MULTIPLE_TESTBUS_DIGITAL	58
4.4.2	Handling of different boot scenarios	25	4.5.10	CTS Configuration	59
4.4.2.1	Handling of over temperature scenario when PN5190 is under operation	25	4.5.10.1	CTS_ENABLE	59
4.4.2.2	Handling of overcurrent	26	4.5.10.2	CTS_CONFIGURE	59
4.4.2.3	Loss of VDDIO during operation	26	4.5.10.3	CTS_FAST_CONFIGURE	62
4.4.3	Handling of abort scenarios	26	4.5.10.4	CTS_RETRIEVE_LOG	64
4.5	Normal Mode Operation Instruction Details	26	4.5.11	TEST_MODE Commands	65
4.5.1	Register Manipulation	26	4.5.11.1	ANTENNA_SELF_TEST	65
			4.5.11.2	PRBS_TEST	65
			4.5.12	Chip Info Commands	66
			4.5.12.1	GET_DIEID	66
			4.5.12.2	GET_VERSION	66
			5	Appendix (Examples)	68
			5.1	Example for WRITE_REGISTER	68

5.2	Example for WRITE_REGISTER_OR_	
	MASK	68
5.3	Example for WRITE_REGISTER_AND_	
	MASK	68
5.4	Example for WRITE_REGISTER_	
	MULTIPLE	68
5.5	Example for READ_REGISTER	68
5.6	Example for READ_REGISTER_	
	MULTIPLE	69
5.7	Example for WRITE_E2PROM	69
5.8	Example for READ_E2PROM	69
5.9	Example for TRANSMIT_RF_DATA	69
5.10	Example for RETREIVE_RF_DATA	69
5.11	Example for EXCHANGE_RF_DATA	70
5.12	Example for LOAD_RF_CONFIGURATION	70
5.13	Example for UPDATE_RF_	
	CONFIGURATION	70
5.14	Example for RF_ON	70
5.15	Example for RF_OFF	70
6	Appendix (RF protocol configuration	
	indexes)	71
7	Appendix (CTS and TESTBUS signals)	72
8	Abbreviations	73
9	References	74
10	Note about the source code in the	
	document	75
11	Revision history	76
	Legal information	77

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.
