

Rev. 0, 5/2003

3-Phase Sine Wave
Generator TPU Function Set
(3Sin)

By Milan Brejl, Ph.D.

Freescale Semiconductor, Inc.

Functional Overview

The 3-Phase Sine Wave Generator (3Sin) TPU function generates a pulse-width modulated 3-phase sine wave signal for general motor control. The function set consists of 5 TPU functions:

- 3-Phase Sine Wave Generator – Top (3Sin_top)
- 3-Phase Sine Wave Generator – Bottom (3Sin_bottom)
- Synchronization Signal for 3-Phase Sine Wave Generator (3Sin_sync)
- Resolver Reference Signal for 3-Phase Sine Wave Generator (3Sin_res)
- Fault Input for 3-Phase Sine Wave Generator (3Sin_fault)

The 3Sin_top and 3Sin_bottom TPU functions work together to generate a 6-channel 3-phase center-aligned PWM signal with dead-time between the top and bottom channels. The Synchronization Signal for the 3Sin function can

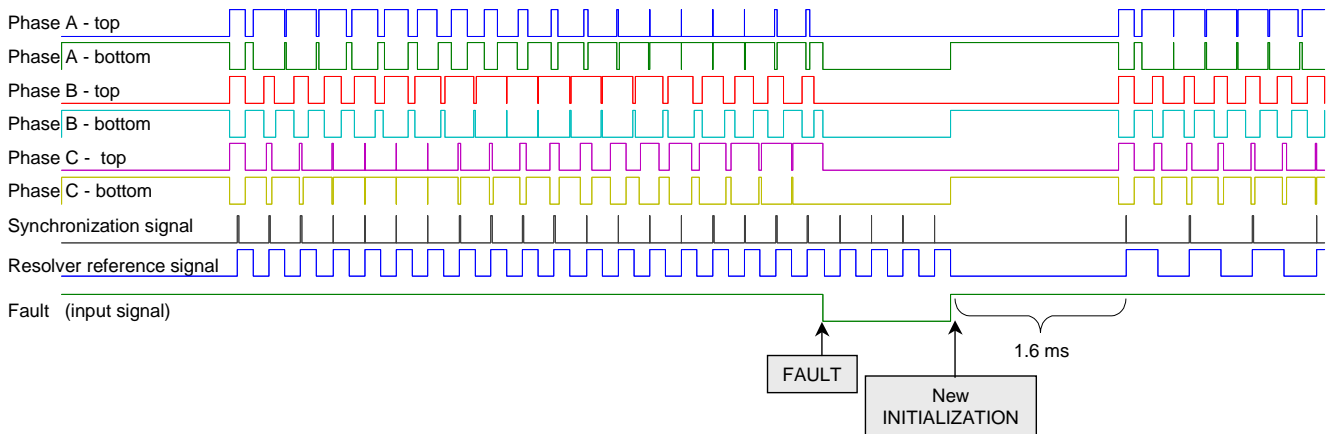


Figure 1. Signals generated by 3Sin TPU function set

be used to generate one or more adjustable signals for a wide range of uses, that are synchronized to the PWM, and track changes in the PWM period. The Resolver Reference Signal for the 3Sin function can be used to generate one or more 50% duty-cycle adjustable signals that are also synchronized to the PWM. The Fault Input for the 3Sin function is a TPU input function that sets all PWM outputs low when the input signal goes low. See [Figure 1](#).

Function Set Configuration

None of the TPU functions in the 3-Phase Sine Wave Generator TPU function set can be used separately. The 3Sin_top and 3Sin_bottom functions have to be used together. The 3Sin_top is used on 3 channels, the 3Sin_bottom on a further 3 channels, and within each phase, the function 3Sin_top has to be assigned on a lower TPU channel than the function 3Sin_bottom. This is illustrated in the examples in [Table 2](#) and [Table 3](#). The 3Sin_top and 3Sin_bottom functions use a table of 32 cosine function values. The table is placed in the parameter space of four consecutive channels. One or more channels running a Synchronization Signal for 3Sin as well as Resolver Reference Signals for 3Sin functions can be added to the 3Sin_top and 3Sin_bottom functions. They can run with different settings on each channel. The function Fault Input for 3Sin can also be added to the 3Sin_top and 3Sin_bottom functions. It is recommended to use it on channel 15, and to select the hardware option that disables all TPU output pins when the channel 15 input signal is low (DTPU bit = 1). This ensures that the hardware reacts quickly to a pin fault state. Note that it is not only the PWM channels, but all TPU output channels, including the synchronization signals, that are disabled in this configuration. The function 3Sin_fault can run on one of the four channels where the table of cosine function values is placed, because the 3Sin_fault function does not have any parameters.

[Table 1](#) shows the configuration options and restrictions.

Table 1. 3Sin TPU function set configuration options and restrictions

TPU function	Optional/ Mandatory	How many channels	Assignable channels
3Sin_top	mandatory	3	any 3 channels, within each phase a lower TPU channel than the same phase 3Sin_bottom
3Sin_bottom	mandatory	3	any 3 channels, within each phase a higher TPU channel than the same phase 3Sin_top
Cosine table	mandatory	4	any 4 consecutive channels
3Sin_sync	optional	1 or more	any channels
3Sin_res	optional	1 or more	any channels
3Sin_fault	optional	1	any, recommended is 15 and DTPU bit set

Table 2 and **Table 3** show two examples of configuration.

Table 2. Example of configuration

Channel	TPU function	Priority
0	3Sin_top	high
1	3Sin_bottom	high
2	3Sin_top	high
3	3Sin_bottom	high
4	3Sin_top	high
5	3Sin_bottom	high
10	3Sin_sync	low
12	Cosine table 1	none
13	Cosine table 2	none
14	Cosine table 3	none
15	3Sin_fault + Cosine table 4	high

Table 3. Example of configuration

Channel	TPU function	Priority
0	3Sin_top	high
1	3Sin_top	high
2	3Sin_top	high
3	3Sin_bottom	high
4	3Sin_bottom	high
5	3Sin_bottom	high
10	3Sin_sync	low
11	3Sin_res	low
12	Cosine table 1	none
13	Cosine table 2	none
14	Cosine table 3	none
15	3Sin_fault + Cosine table 4	high

Table 4 shows the TPU function code sizes.

Table 4. TPU function code sizes

TPU function	Code size
3Sin_top	20 μ instructions + 8 entries = 28 long words
3Sin_bottom	217 μ instructions + 8 entries = 225 long words
3Sin_sync	26 μ instructions + 8 entries = 34 long words
3Sin_res	38 μ instructions + 8 entries = 46 long words
3Sin_fault	9 μ instructions + 8 entries = 17 long words

- Configuration Order** The CPU configures the TPU as follows.
1. Disables the channels by clearing the two channel priority bits on each channel used (not necessary after reset).
 2. Selects the channel functions on all used channels by writing the function numbers to the channel function select bits.
 3. Initializes function parameters. The parameters *T*, *prescaler*, *DT*, *MPW*, *Theta_H*, *Theta_L* and *sync_presc_addr* must be set before initialization. 32 cosine table values must be set. If a 3Sin_sync channel or a 3Sin_res channel is used, then its parameters must also be set before initialization.
 4. Issues an HSR (Host Service Request) type %10 to one of the 3Sin_bottom channels to initialize all PWM channels. Issues an HSR type %10 to the 3Sin_sync channels, 3Sin_res channels and 3Sin_fault channel, if used.
 5. Enables servicing by assigning high, middle or low priority to the channel priority bits. All PWM channels must be assigned the same priority to ensure correct operation. The CPU must ensure that the 3Sin_sync or 3Sin_res channels are initialized after the initialization of the PWM channels:
 - assign a priority to the PWM channels to enable their initialization
 - if a Synchronization Signal or a Resolver Reference Signal channel is used, wait until the HSR bits are cleared to indicate that initialization of the PWM channels has completed and
 - assign a priority to the 3Sin_sync or 3Sin_res channels to enable their initialization

NOTE: *A CPU routine that configures the TPU can be generated automatically using the MPC500_Quick_Start Graphical Configuration Tool.*

Detailed Function Description

3-Phase Sine Wave Generator – Top (3Sin_top) and 3-Phase Sine Wave Generator – Bottom (3Sin_bottom)

The 3Sin_top and 3Sin_bottom TPU functions work together to generate a 6-channel, 3-phase PWM signal, with dead-time between the top and bottom channels. In order to charge the bootstrap transistors, the PWM signals start to run 1.6ms after their initialization (at 20MHz TCR1 clock). The functions generate signals corresponding to an amplitude of 0 (50% duty-cycle) until the first reload values are processed.

The CPU controls the PWM output by setting the TPU parameters. The Stator Reference Voltage Vector Amplitude *Ampl*, the Stator Reference Voltage Vector angle *Theta* (32-bit) and the angle increment *dTheta* (32-bit), can be adjusted during run time. The PWM period *T* and the *prescaler* – the number of

3-Phase Sine Wave Generator TPU Function Set (3Sin)

**For More Information On This Product,
Go to: www.freescale.com**

PWM periods per reload of new values – are also read at each reload, so these parameters can be changed during run time. Conversely, the dead-time (DT) and the minimum pulse width (MPW) are not supposed to be changed during run time. The CPU notifies the TPU that the new reload values are prepared by setting the LD_OK parameter. The TPU notifies the CPU that the reload values have been read and new values can be written by clearing the LD_OK parameter.

The TPU function rotates the Stator Reference Voltage Vector by $dTheta$ angle each period. So the TPU can drive the motor with constant amplitude and constant speed independently of the CPU. The CPU can adjust the $Ampl$ parameter to change the Stator Reference Voltage Vector amplitude and the $dTheta$ parameter to change the rotation speed. The CPU can also set the absolute value of Stator Reference Voltage Vector angle $Theta$. To notify the TPU that the $Theta$ parameter should be loaded instead of using the buffered value, the CPU must set $LD_OK = \$8001$ instead of $\$0001$.

The following equations describe how the 3-phase sine wave PWM signal high-times ht_A , ht_B , ht_C and transition times $t_{low-high}$ and $t_{high-low}$ of each channel are calculated:

$$Theta = Theta + dTheta$$

$$s_A = \cos(Theta)$$

$$s_B = \cos(Theta - 120^\circ)$$

$$s_C = -(s_A + s_B)$$

The function **cos** is calculated using a table of 32 values from the first quadrant of one cosine wave period. The function parameter is mirrored in the first quadrant. The function value is obtained by linear interpolation between the two closest table values. **Figure 2** shows the error of the cosine function value calculation. The maximum error is 7 in the amplitude range $\langle -32768, 32767 \rangle$, that is 0.021%.


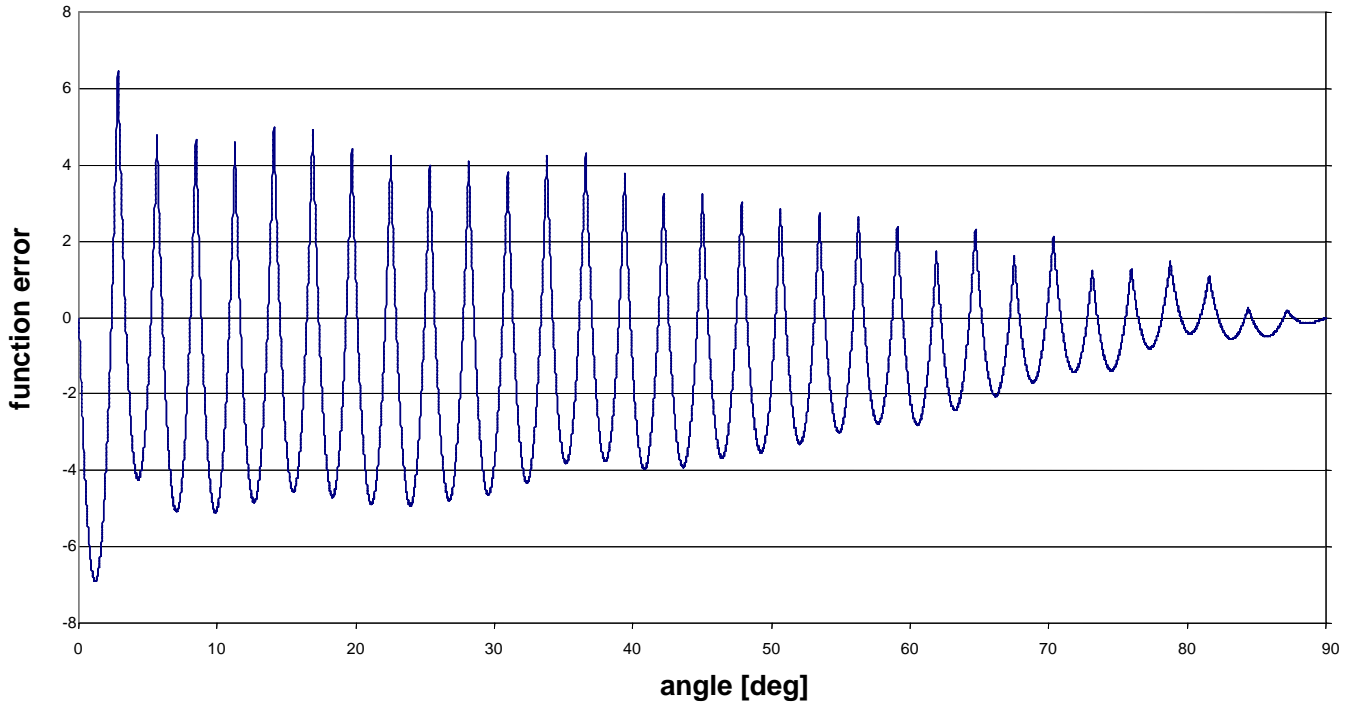


Figure 2. Cosine function value error

$$ht_A = T \cdot \frac{Ampl \cdot s_A + 1}{2}$$

$$ht_B = T \cdot \frac{Ampl \cdot s_B + 1}{2}$$

$$ht_C = T \cdot \frac{Ampl \cdot s_C + 1}{2}$$

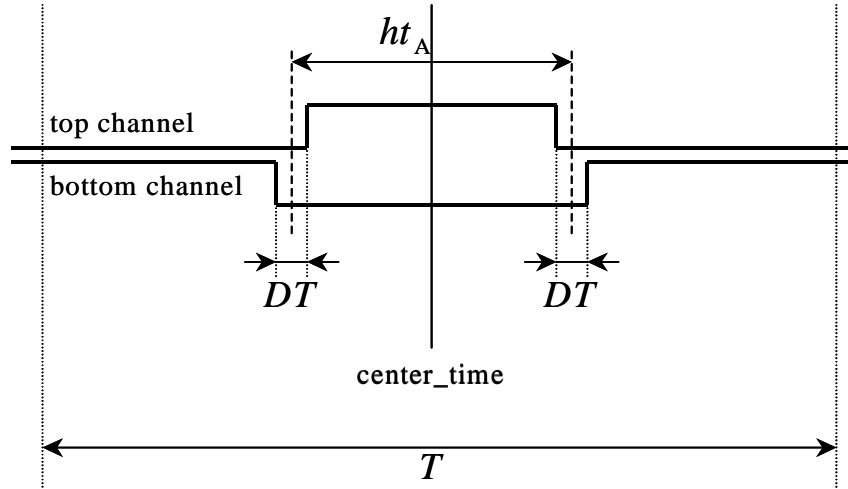

Phase A:
 – top channel

$$t_{\text{low-high}} = \text{center_time} - \frac{ht_A - DT}{2}$$

$$t_{\text{high-low}} = \text{center_time} + \frac{ht_A - DT}{2}$$

– bottom channel

$$t_{\text{high-low}} = \text{center_time} - \frac{ht_A + DT}{2}$$

$$t_{\text{low-high}} = \text{center_time} + \frac{ht_A + DT}{2}$$

Phase B and Phase C similarly with ht_B and ht_C substituted to ht_A .

Host Interface





 Written By CPU	 Written by both CPU and TPU
 Written By TPU	 Not Used

Table 5. 3Sin_top Control Bits

Name	Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Function Select	3Sin_top function number (Assigned during assembly the DPTRAM code from library TPU functions)
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Not used 11 – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="background-color: green; width: 15px; height: 15px;"></div> </div> Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Enable	x – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Status	x – Not used

Table 6. 3Sin_bottom Control Bits

Name		Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 20px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> </div> Channel Function Select	3Sin_bottom function number (Assigned during assembly the DPTRAM code from library TPU functions)	
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 20px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> </div> Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority	
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 20px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> </div> Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Stop	
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 20px; height: 20px; margin-right: 5px;"></div> <div style="background-color: green; width: 20px; height: 20px;"></div> </div> Host Sequence Bits (HSQ)	xx – Not used	
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 20px; height: 20px; margin-right: 5px;"></div> </div> Channel Interrupt Enable	0 – Channel Interrupt Disabled 1 – Channel Interrupt Enabled	
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: blue; width: 20px; height: 20px; margin-right: 5px;"></div> </div> Channel Interrupt Status	0 – Interrupt Not Asserted 1 – Interrupt Asserted	

TPU function 3Sin_bottom generates an interrupt when the current values of *Ampl*, *dTheta* (optionally also *Theta*), *T* and *prescaler* have been read by the TPU and indicates to the CPU that it can write new variables. The CPU program can either wait for this interrupt to occur, or poll the *LD_OK* parameter to check it has cleared. The interrupt is generated at each reload by one of the bottom channels. The top channels do not generate any interrupts.

Table 7. 3Sin_top and 3Sin_bottom Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Phase A top channel	0	htA																
	1	HLtime_AT																
	2	bottom_chan_A																
	3	center_time																
	4	LD_OK																
	5	TA_buf																
	6																	
	7	fault_pinstat																
Phase A bottom channel	0	LHtime_AB																
	1	HLtime_AB																
	2	sA																
	3	T_copy																
	4	Theta_H																
	5	Theta_L																
	6	Theta_buf_H																
	7	Theta_buf_L																
Phase B top channel	0	htB																
	1	HLtime_BT																
	2	bottom_chan_B																
	3	dec																
	4	Ampl																
	5	sync_presc_addr																
	6																	
	7																	
Phase B bottom channel	0	LHtime_BB																
	1	HLtime_BB																
	2	sB																
	3	min_ht																
	4	T																
	5	prescaler																
	6																	
	7																	
Phase C top channel	0	htC																
	1	HLtime_CT																
	2	bottom_chan_C																
	3	prsc_copy																
	4	dTheta_H																
	5	dTheta_L																
	6	dTheta_buf_H																
	7	dTheta_buf_L																

Table 7. 3Sin_top and 3Sin_bottom Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Phase C bottom channel	0	LHtime_CB																
	1	HLtime_CB																
	2	Fchan																
	3	max_ht																
	4	DT																
	5	MPW																
	6																	
	7																	

Table 8. 3Sin_top and 3Sin_bottom parameter description

Parameter	Format	Description
Parameters written by CPU		
Ampl	16-bit fractional	Stator Reference Voltage Vector amplitude, positive values only!
Theta	32-bit fractional	Stator Ref. Voltage Vector angle range $\langle -1, 1 \rangle$ corresponds to $\langle -180^\circ, 180^\circ \rangle$
dTheta	32-bit fractional	Stator Reference Voltage Vector angle increment range $\langle -1, 1 \rangle$ corresponds to $\langle -180^\circ, 180^\circ \rangle$
T	16-bit unsigned integer	PWM period in number of TCR1 TPU cycles
prescaler	16-bit unsigned integer	The number of PWM periods per reload of new values
DT	16-bit unsigned integer	Dead-time in number of TCR1 TPU cycles
MPW	16-bit unsigned integer	Minimum pulse width in number of TCR1 TPU cycles. See Performance for details.
sync_presc_addr	8-bit unsigned integer	address of synchronization channel <i>prescaler</i> parameter: $\$X4$, where X is synchronization channel number. $\$0$ if no synchronization channel is used.

Table 8. 3Sin_top and 3Sin_bottom parameter description

Parameter	Format	Description
Parameters written by both TPU and CPU		
LD_OK	16-bit unsigned integer	0 CPU can update variables <>0 .. TPU can read variables: \$0001 ... load <i>Ampl</i> , <i>dTheta</i> , <i>T</i> and <i>prescaler</i> only \$8001 ... load also <i>Theta</i> CPU sets \$0001 or \$8001, TPU sets 0
Parameters written by TPU		
fault_pinstate	0 or 1	If fault channel is used, state of fault pin: 0 ... low 1 ... high
Theta_buf	32-bit fractional	Actual Stator Reference Voltage Vector angle range <-1, 1) corresponds to <-180°, 180°)
Other parameters are just for TPU function inner use.		

Performance

The maximum PWM frequency is 32kHz (PWM period $T = 625$ at 20MHz TCR1 clock). This can be achieved when only 3Sin_top and 3Sin_bottom run on the TPU and the IMB clock is 40MHz. When other functions run on the same TPU the minimum PWM period T has to be greater. Get all the other enabled function states that can be served during one PWM period. Get their lengths (number of IMB clock cycles) and add a time slot transition of 10 IMB clock cycles to each one. Sum all the state lengths, including the time slot transition. Convert the result from IMB clock cycles to TCR1 clock cycles according to TCR1 prescaler settings. The result then indicates how much greater than its minimum value of 625, T has to be for the particular case.

Table 9. 3Sin_top State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
HL	2	1
LH_C7	32	10

Table 10. 3Sin_bottom State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	122	36
STOP	38	0
LH	2	1
HL	2	1
LH_RLD	62	23
C1	46	4
C2	84	10
C3	82	6
C4	62	6
C5	62	6
C6	66	6

NOTE: Execution times do not include the time slot transition time ($TST = 10$ or 14 IMB clocks)

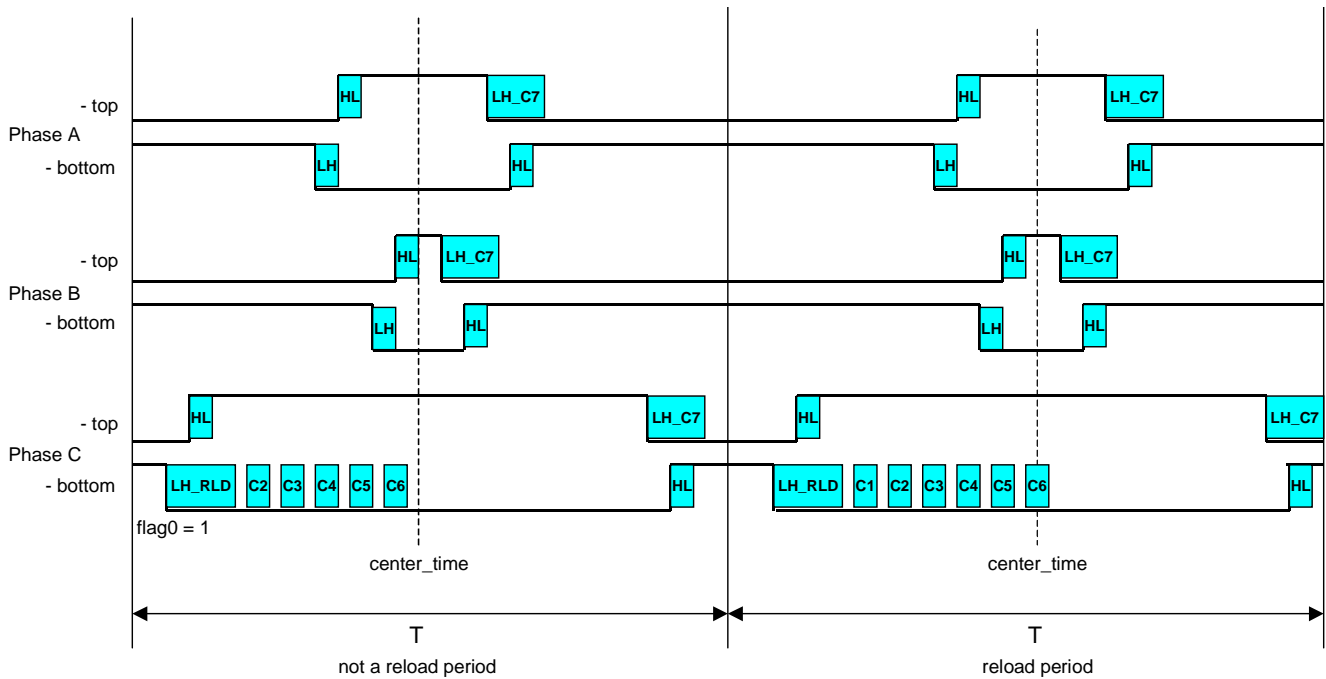


Figure 3. 3Sin_top and 3Sin_bottom timing

NOTE: The bottom channel with longest momentary low-time is marked by a flag0 and runs the LH_RLD and C1, C2, C3, C4, C5, C6 states.

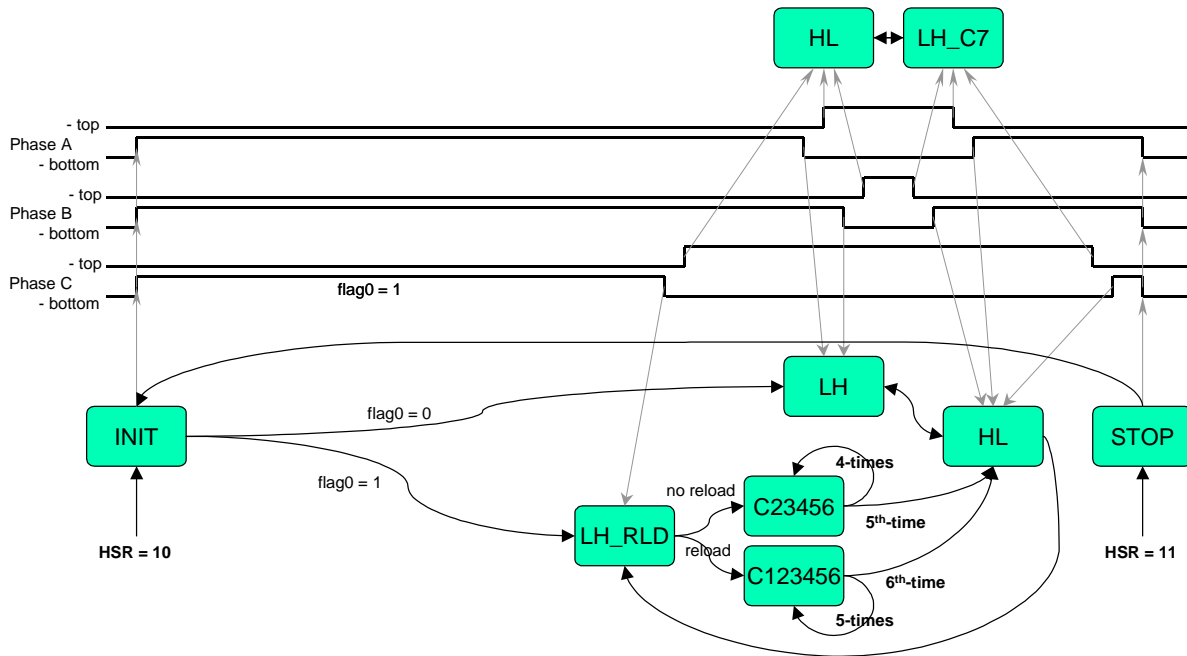


Figure 4. 3Sin_top and 3Sin_bottom state diagram

Minimum Pulse Width

The TPU cannot generate PWM signals with duty cycle ratios very close to 0% or 100%. The minimum pulse width that the TPU can be guaranteed to correctly generate is determined by the TPU function itself and by the activity on the other channels. When the TPU function is requested to generate a narrower pulse, a collision can occur. To prevent this, the parameter *MPW* (minimum pulse width) is introduced. The TPU functions 3Sin_top and 3Sin_bottom limit the narrowest generated pulse widths to *MPW*. The CPU program should check, and limit, the maximum amplitude of the Stator Reference Voltage Vector. The maximum amplitude of the Stator Reference Voltage Vector should be less than

$$1 - \frac{2(MPW + DT)}{T}$$

If this is not the case, the TPU function will start to limit the minimum pulse widths to *MPW* to prevent a collision, and the duty cycle ratio traces will be deformed as shown on [Figure 5](#).

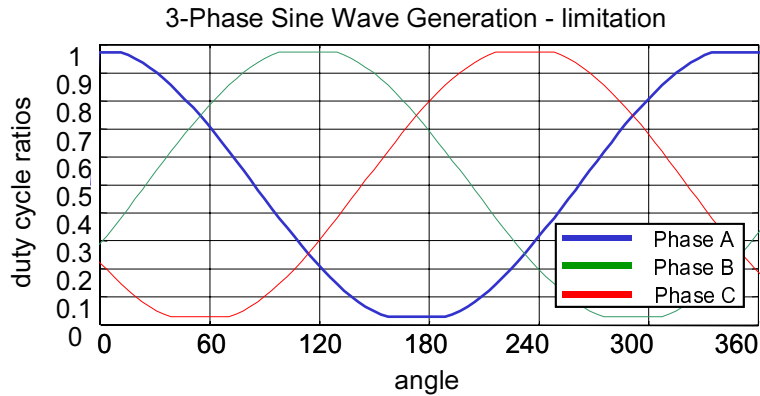


Figure 5. Effect of limitation

The *MPW* is written by the CPU. The *MPW* depends on the whole TPU unit configuration, especially the lengths of the longest states of the other functions, and their priorities, running on the same TPU. The *MPW* has to be correctly calculated at the time the whole TPU unit is configured.

Figure 6. Timing of the worst case

When 3Sin_top and 3Sin_bottom are running alone on one TPU, the minimum pulse width can be calculated according to **Figure 6**. This illustrates the worst case timing. The bottom channel low to high transition runs the HL state that sets the following high to low transition. The HL state lasts 2 IMB clock cycles (see **Table 10**). Each state is preceded by the Time Slot Transition (TST), which takes 10 IMB clock cycles. So the time necessary to set the next transition on the bottom channel is 12 IMB clock cycles. In addition, there is a latency between the low to high transition and the start of the HL state. The top channel state LH_C7, which is serviced at the time, causes the latency. The

LH_C7 state lasts 32 IMB clock cycles (see [Table 9](#)). Its time slot transition is 10 IMB clock cycles. The service starts immediately after the top channel high to low transition, which occurs at a period of *DT* before the bottom channel low to high transition (see [Figure 6](#)), so that the latency is 32 IMB clock cycles + 10 IMB clock cycles – *DT*. The 3Sin functions are designed so that no other 3Sin state can request service at this time. The *MPW*, in the case when only 3Sin functions are running on one TPU, is then

$$\begin{aligned} & \text{latency} + 12 \text{ IMB clock cycles} = \\ & = 32 \text{ IMB clock cycles} + 10 \text{ IMB clock cycles} - DT + 12 \text{ IMB clock cycles} = \\ & = 54 \text{ IMB clock cycles} - DT \end{aligned}$$

and has a minimum value of at least 12 IMB clock cycles (when latency = 0).

Note that the *MPW*, as well as the *DT*, are not entered into the parameter RAM in IMB clock cycles, but in TCR1 clock cycles. It is recommended for the 3Sin function that the TCR1 clock is configured for its maximum speed, which is the IMB clock divided by 2. In this case the $MPW = 27 - DT$, with a minimum value of 6.

When other functions are running concurrently on the same TPU, the longest state of each function with its time-slot transition can increase the calculated *MPW* value. The 3Sin_fault function does not affect the *MPW*. The 3Sin_sync, if used, increases the *MPW* value by 22 (44 IMB clock cycles). The 3Sin_res, if used, increases the *MPW* value by 20 (40 IMB clock cycles).

If a lower value than the one calculated, is set for the *MPW* parameter, the motion system can run with a higher motor voltage amplitude, but with a risk, that the dead-time is not maintained.

It is also possible to use the Worst-Case Latency (WCL), which is automatically calculated by the MPC500_Quick_Start Graphical Configuration Tool. It can serve as a good approximation of *MPW*. The calculated WCL is always longer than the real-case is. Let the WCL be calculated after the configuration of the TPU channels and then find the longest WCL value within all 3Sin PWM channels. Convert the number, from IMB clock cycles to TCR1 clock cycles, to get the *MPW*.

**Synchronization
signal for 3-Phase
Sine Wave
Generator
(3Sin_sync)**

The 3Sin_sync TPU function uses information obtained from 3Sin PWM functions, the actual PWM center times and the PWM periods. This allows a signal to be generated, which tracks the changes in the PWM period and is always synchronized with the PWM. The synchronization signal is a positive pulse generated repeatedly after the *prescaler* or *presc_copy* PWM periods (see next paragraph). The low to high transition of the pulse can be adjusted by a parameter, either negative or positive, to go a number of TCR1 TPU cycles before or after the PWM period center time. The pulse width *pw* is another synchronization signal parameter.

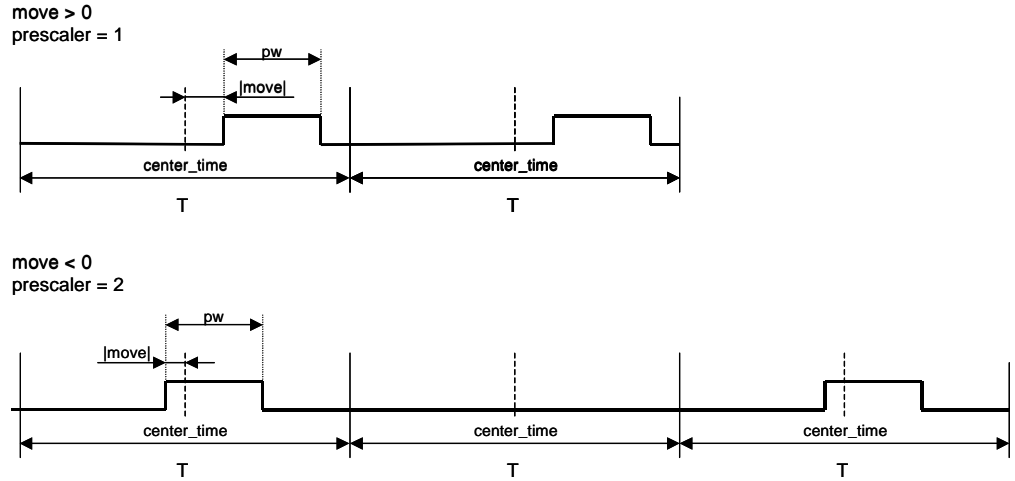


Figure 7. Synchronization signal adjustment examples

Synchronized Change of PWM Prescaler And Synchronization Signal Prescaler

The 3Sin_sync TPU function actually uses the *presc_copy* parameter instead of the *prescaler* parameter. The *prescaler* parameter holds the prescaler value that is copied to the *presc_copy* by the 3Sin_bottom function at the time the PWM parameters are reloaded. This ensures that new prescaler values for the PWM signals, as well as the synchronization signal, are applied at the same time. Write the synchronization signal *prescaler* parameter address to the *sync_presc_addr* parameter to enable this mechanism. Write 0 to disable it, and remember to set the synchronization signal *presc_copy* parameter instead of the *prescaler* parameter in this case.

Host Interface

- Written By CPU
- Written by both CPU and TPU
- Written By TPU
- Not Used

Table 11. 3Sin_sync Control Bits

	Name	Options				
3 2 1 0	Channel Function Select	3Sin_sync function number (Assigned during assembly the DPTRAM code from library TPU functions)				
<table border="1" style="width: 100%; height: 20px; border-collapse: collapse;"> <tr> <td style="width: 25%;"></td> <td style="width: 25%;"></td> <td style="width: 25%;"></td> <td style="width: 25%;"></td> </tr> </table>						
1 0	Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority				
<table border="1" style="width: 100%; height: 20px; border-collapse: collapse;"> <tr> <td style="width: 50%;"></td> <td style="width: 50%;"></td> </tr> </table>						

Table 11. 3Sin_sync Control Bits

Name		Options
<div style="display: flex; justify-content: space-around;"> 1 0 </div> <div style="display: flex; justify-content: space-around;"> <input type="checkbox"/> <input type="checkbox"/> </div>	Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Not used
<div style="display: flex; justify-content: space-around;"> 1 0 </div> <div style="display: flex; justify-content: space-around;"> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> </div>	Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around;"> 0 </div> <div style="display: flex; justify-content: space-around;"> <input type="checkbox"/> </div>	Channel Interrupt Enable	0 – Channel Interrupt Disabled 1 – Channel Interrupt Enabled
<div style="display: flex; justify-content: space-around;"> 0 </div> <div style="display: flex; justify-content: space-around;"> <input checked="" type="checkbox"/> </div>	Channel Interrupt Status	0 – Interrupt Not Asserted 1 – Interrupt Asserted

TPU function 3Sin_sync generates an interrupt after each low to high transition.

Table 12. 3Sin_sync Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Synchronization channel	0	move																
	1	pw																
	2	prescaler																
	3	presc_copy																
	4	time																
	5	dec																
	6	T_copy																
	7																	

Table 13. 3Sin_sync parameter description

Parameter	Format	Description
Parameters written by CPU		
move	16-bit signed integer	The number of TCR1 TPU cycles to forego (negative) or come after (positive) the PWM period center time
pw	16-bit unsigned integer	Synchronization pulse width in number of TCR1 TPU cycles.

Table 13. 3Sin_sync parameter description

Parameter	Format	Description
prescaler	16-bit unsigned integer	The number of PWM periods per synchronization pulse – use in case of synchronized prescalers change
presc_copy	16-bit unsigned integer	The number of PWM periods per synchronization pulse – use in case of asynchronous prescalers change
Parameters written by TPU		
Other parameters are just for TPU function inner use.		

Performance

There is one limitation. The absolute value of parameter *move* has to be less than a quarter of the PWM period *T*.

$$|move| < \frac{T}{4}$$

Table 14. 3Sin_sync State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	12	5
S1	12	6
S2	8	3
S3	16	7

NOTE: Execution times do not include the time slot transition time ($TST = 10$ or 14 IMB clocks)

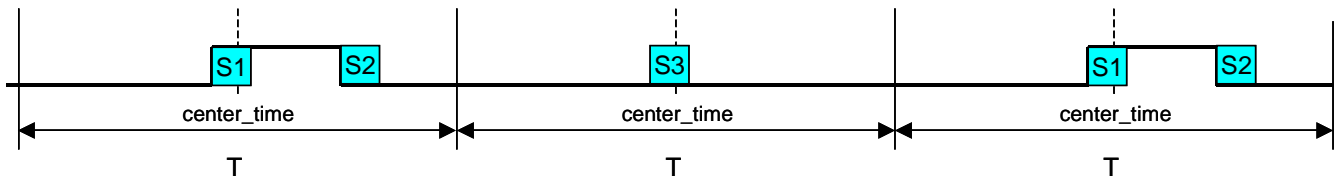


Figure 8. 3Sin_sync timing


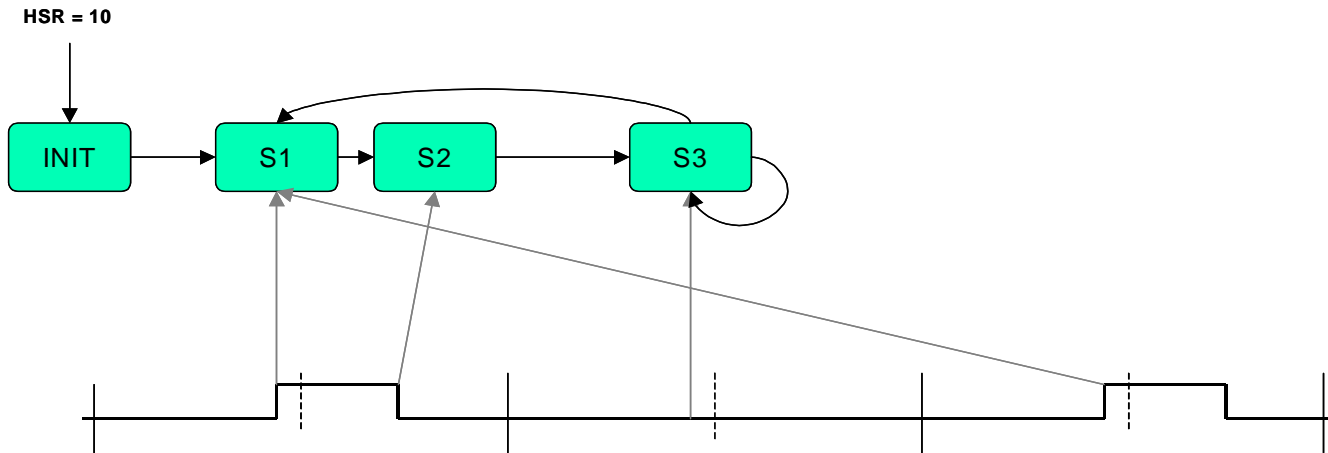


Figure 9. 3Sin_sync state diagram

Resolver Reference Signal for 3-Phase Sine Wave Generator (3Sin_res)

The 3Sin_res TPU function uses information read from the 3Sin PWM functions, the actual PWM center times and the PWM periods. This allows a signal to be generated, which tracks the changes of the PWM period and is always synchronized with the PWM. The resolver reference signal is a 50% duty-cycle signal with a period equal to *prescaler* or synchronization channel *presc_copy* PWM periods (see next paragraph). The low to high transition of the pulse can be adjusted by a parameter, either negative or positive, to go a number of TCR1 TPU cycles before or after the PWM period center time.

move > 0
prescaler = 1

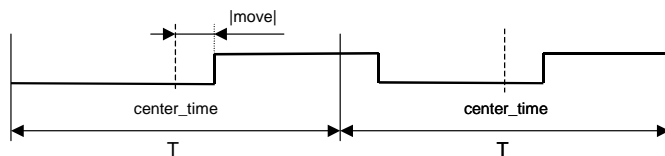

move < 0
prescaler = 2

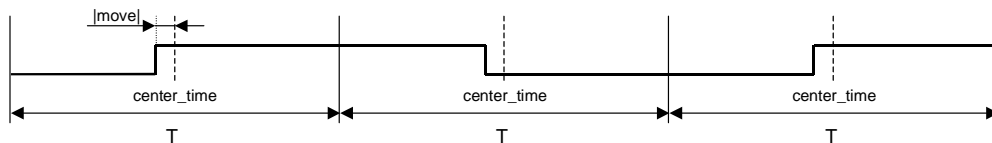


Figure 10. Resolver reference signal adjustment examples

Synchronized Change of PWM Prescaler And Resolver Reference Signals Prescaler

The 3Sin_res TPU function can inherit the Synchronization Signal prescaler that is synchronously changed with the PWM prescaler. Write the synchronization signals *presc_copy* parameter address to the *presc_addr* parameter to enable this mechanism. Write 0 to disable it, and in this case set the *prescaler* parameter to directly specify prescaler value.

Host Interface





 Written By CPU	 Written by both CPU and TPU
 Written By TPU	 Not Used

Table 15. 3Sin_res Control Bits







Name	Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div>  Channel Function Select	3Sin_res function number (Assigned during assembly the DPTRAM code from library TPU functions)
<div style="display: flex; justify-content: space-around; width: 40px;"> 10 </div>  Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
<div style="display: flex; justify-content: space-around; width: 40px;"> 10 </div>  Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Not used
<div style="display: flex; justify-content: space-around; width: 40px;"> 10 </div>  Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around; width: 40px;"> 0 </div>  Channel Interrupt Enable	x – Not used
<div style="display: flex; justify-content: space-around; width: 40px;"> 0 </div>  Channel Interrupt Status	x – Not used

Table 16. 3Sin_res Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Resolver	0	move															
	1																
	2	presc_addr															
	3	prescaler															
	4	time															
	5	dec															
	6	T_copy															
	7																

Table 17. 3Sin_res parameter description

Parameter	Format	Description
Parameters written by CPU		
move	16-bit signed integer	The number of TCR1 TPU cycles to forego (negative) or come after (positive) the PWM period center time
presc_addr	16-bit unsigned integer	\$00X6, where X is a number of Synchronization Signal channel, to inherit Sync. channel prescaler or \$0000 to enable direct specification of prescaler value in prescaler parameter
prescaler	1, 2, 4, 6, 8, 10, 12, 14, ...	The number of PWM periods per synchronization pulse – use when apresc_addr = 0
Parameters written by TPU		
Other parameters are just for TPU function inner use.		

Performance

There is one limitation. The absolute value of parameter *move* has to be less than a quarter of the PWM period *T*.

$$|move| < \frac{T}{4}$$

Table 18. 3Sin_res State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	12	5
S1	26	9
S3	18	7

NOTE: Execution times do not include the time slot transition time ($TST = 10$ or 14 IMB clocks)

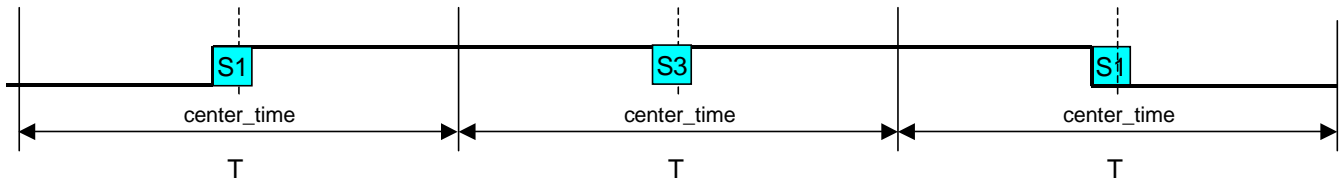


Figure 11. 3Sin_res timing

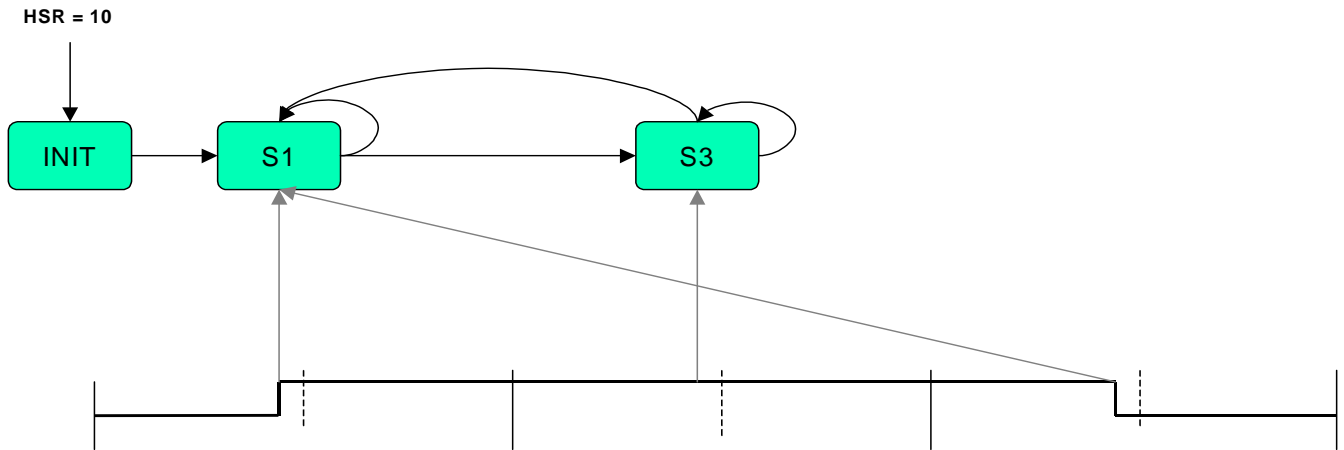


Figure 12. 3Sin_res state diagram

Fault Input for 3-Phase Sine Wave Generator (3Sin_fault)

The 3Sin_fault is an input TPU function that monitors the pin, and if a high to low transition occurs, immediately sets all PWM channels low and cancels all further transitions on them. The PWM channels, as well as the synchronization and resolver reference signal channels (if used), have to be initialized again to start them running.

The function returns the actual pinstate as a value of 0 (low) or 1 (high) in the parameter *fault_pinstate*. The parameter is placed on the Phase A – top channel to keep the fault channel parameter space free.

Host Interface

<input type="checkbox"/>	Written By CPU	<input type="checkbox"/>	Written by both CPU and TPU
<input type="checkbox"/>	Written By TPU	<input type="checkbox"/>	Not Used

Table 19. 3Sin_fault Control Bits

Name	Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Function Select	3Sin_fault function number (Assigned during assembly the DPTRAM code from library TPU functions)
<div style="display: flex; justify-content: space-around; width: 40px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
<div style="display: flex; justify-content: space-around; width: 40px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Not used
<div style="display: flex; justify-content: space-around; width: 40px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="background-color: green; width: 15px; height: 15px;"></div> </div> Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around; width: 40px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Enable	0 – Channel Interrupt Disabled 1 – Channel Interrupt Enabled
<div style="display: flex; justify-content: space-around; width: 40px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: blue; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Status	0 – Interrupt Not Asserted 1 – Interrupt Asserted

TPU function 3Sin_fault generates an interrupt when a high to low transition appears.

Table 20. 3Sin_fault Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Fault input	0																
	1																
	2																
	3																
	4																
	5																
	6																
	7																

Table 21. 3Sin_fault parameter description

Parameter	Format	Description
Parameters written by TPU		
fault_pinstate	0 or 1	State of fault pin: 0 ... low 1 ... high

Performance

Table 22. 3Sin_fault State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	8	2
FAULT	44	1
NO_FAULT	4	1

NOTE: Execution times do not include the time slot transition time (TST = 10 or 14 IMB clocks)



Figure 13. 3Sin_fault timing

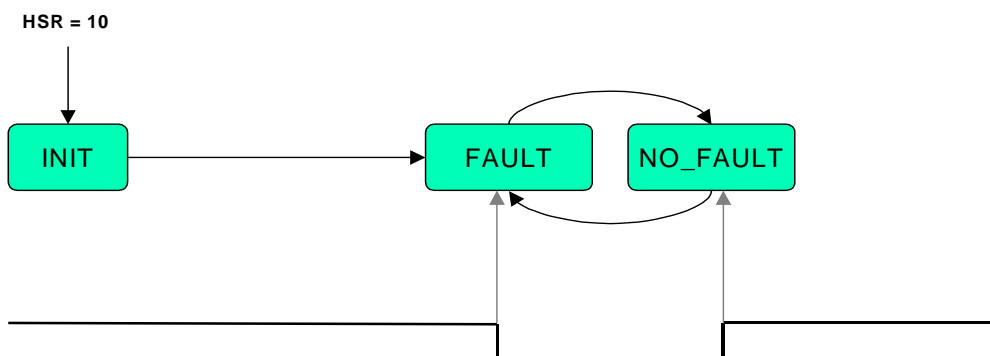


Figure 14. 3Sin_fault state diagram

How to Reach Us:

Home Page:

www.freescale.com

E-mail:

support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor
 Technical Information Center, CH370
 1300 N. Alma School Road
 Chandler, Arizona 85224
 +1-800-521-6274 or +1-480-768-2130
 support@freescale.com

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
 Technical Information Center
 Schatzbogen 7
 81829 Muenchen, Germany
 +44 1296 380 456 (English)
 +46 8 52200080 (English)
 +49 89 92103 559 (German)
 +33 1 69 35 48 48 (French)
 support@freescale.com

Japan:

Freescale Semiconductor Japan Ltd.
 Headquarters
 ARCO Tower 15F
 1-8-1, Shimo-Meguro, Meguro-ku,
 Tokyo 153-0064
 Japan
 0120 191014 or +81 3 5437 9125
 support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd.
 Technical Information Center
 2 Dai King Street
 Tai Po Industrial Estate
 Tai Po, N.T., Hong Kong
 +800 2666 8080
 support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center
 P.O. Box 5405
 Denver, Colorado 80217
 1-800-441-2447 or 303-675-2140
 Fax: 303-675-2150
 LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document. Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale Semiconductor, Inc.

