

No.: ETR25105369 Date: 03-Feb-2025 Page: 1 of 13

Ajinomoto Fine-Techno Co., Inc.

1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

The following sample(s) was/were submitted and identified by the applicant as:

Sample Submitted By : Ajinomoto Fine-Techno Co., Inc.

Sample Name : CURED EPOXY RESIN

Style/Item No. : ABF-GX13code13/ABF-GX13code13R

Sample Receiving Date : 20-Jan-2025

Testing Period : 20-Jan-2025 to 03-Feb-2025

Test Requested : (1) As specified by client, with reference to RoHS 2011/65/EU Annex II and amending

Directive (EU) 2015/863 to determine Cadmium, Lead, Mercury, Cr(VI), PBBs, PBDEs,

DBP, BBP, DEHP, DIBP contents in the submitted sample(s).

(2) Please refer to next pages for the other item(s).

Test Results : Please refer to following pages.

Conclusion : (1) Based on the performed tests on submitted sample(s), the test results of Cadmium,

Lead, Mercury, Cr(VI), PBBs, PBDEs, DBP, BBP, DEHP, DIBP comply with the limits as set by RoHS Directive (EU) 2015/863 amending Annex II to Directive 2011/65/EU.

Troy Chang / Department Malager
Signed for and on behalf of Alwah
SGS TAIWAN LTD.
Chemical Laboratory - Taipei



PIN CODE: 3281B270



No.: ETR25105369 Date: 03-Feb-2025 Page: 2 of 13

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Test Part Description

No.1 : YELLOW/IVOYR LUMP

Test Result(s)

Test Item(s)	Method	Unit	MDL	Result	Limit
				No.1	
Cadmium (Cd)	With reference to IEC 62321-5: 2013,	mg/kg	2	n.d.	100
	analysis was performed by ICP-OES.				
Lead (Pb)	With reference to IEC 62321-5: 2013,	mg/kg	2	n.d.	1000
	analysis was performed by ICP-OES.				
Mercury (Hg)	With reference to IEC 62321-4: 2013+	mg/kg	2	n.d.	1000
	AMD1: 2017, analysis was performed				
	by ICP-OES.				
Hexavalent Chromium Cr(VI)	With reference to IEC 62321-7-2: 2017,	mg/kg	8	n.d.	1000
	analysis was performed by UV-VIS.				
Monobromobiphenyl		mg/kg	5	n.d.	-
Dibromobiphenyl		mg/kg	5	n.d.	-
Tribromobiphenyl		mg/kg	5	n.d.	-
Tetrabromobiphenyl		mg/kg	5	n.d.	-
Pentabromobiphenyl		mg/kg	5	n.d.	-
Hexabromobiphenyl		mg/kg	5	n.d.	-
Heptabromobiphenyl		mg/kg	5	n.d.	-
Octabromobiphenyl		mg/kg	5	n.d.	-
Nonabromobiphenyl		mg/kg	5	n.d.	-
Decabromobiphenyl		mg/kg	5	n.d.	=
Sum of PBBs	With reference to IEC 62321-6: 2015,	mg/kg	-	n.d.	1000
Monobromodiphenyl ether	analysis was performed by GC/MS.	mg/kg	5	n.d.	=
Dibromodiphenyl ether		mg/kg	5	n.d.	=
Tribromodiphenyl ether		mg/kg	5	n.d.	=
Tetrabromodiphenyl ether		mg/kg	5	n.d.	=
Pentabromodiphenyl ether		mg/kg	5	n.d.	=
Hexabromodiphenyl ether		mg/kg	5	n.d.	-
Heptabromodiphenyl ether		mg/kg	5	n.d.	-
Octabromodiphenyl ether		mg/kg	5	n.d.	-
Nonabromodiphenyl ether		mg/kg	5	n.d.	-
Decabromodiphenyl ether		mg/kg	5	n.d.	-
Sum of PBDEs		mg/kg	-	n.d.	1000



No.: ETR25105369 Date: 03-Feb-2025 Page: 3 of 13

Ajinomoto Fine-Techno Co., Inc.

1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Test Item(s)	Method	Unit	MDL	Result	Limit
				No.1	
Butyl benzyl phthalate (BBP)	With reference to IEC 62321-8: 2017,	mg/kg	50	n.d.	1000
	analysis was performed by GC/MS.				
Dibutyl phthalate (DBP)	With reference to IEC 62321-8: 2017,	mg/kg	50	n.d.	1000
	analysis was performed by GC/MS.				
Di-(2-ethylhexyl) phthalate (DEHP)	With reference to IEC 62321-8: 2017,	mg/kg	50	n.d.	1000
	analysis was performed by GC/MS.				
Diisobutyl phthalate (DIBP)	With reference to IEC 62321-8: 2017,	mg/kg	50	n.d.	1000
	analysis was performed by GC/MS.				
Fluorine (F) (CAS No.: 14762-94-8)	With reference to BS EN 14582: 2016,	mg/kg	50	n.d.	-
	analysis was performed by IC.				
Chlorine (Cl) (CAS No.: 22537-15-1)	With reference to BS EN 14582: 2016,	mg/kg	50	204	-
	analysis was performed by IC.				
Bromine (Br) (CAS No.: 10097-32-2)	With reference to BS EN 14582: 2016,	mg/kg	50	n.d.	-
	analysis was performed by IC.				
lodine (I) (CAS No.: 14362-44-8)	With reference to BS EN 14582: 2016,	mg/kg	50	n.d.	-
	analysis was performed by IC.				
Perfluorooctane sulfonates and its	Modified EN 17681-1: 2022 & EN	mg/kg	0.01	n.d.	-
salts (PFOS and its salts) (CAS No.:	17681-2: 2022, analysis was performed				
1763-23-1 and its salts)	by LC/MS/MS.				
Perfluorooctanoic acid and its salts	Modified EN 17681-1: 2022 & EN	mg/kg	0.01	n.d.	-
(PFOA and its salts) (CAS No.: 335-	17681-2: 2022, analysis was performed				
67-1 and its salts)	by LC/MS/MS.				
Antimony (Sb) (CAS No.: 7440-36-0)	With reference to US EPA 3052: 1996,	mg/kg	2	n.d.	-
	analysis was performed by ICP-OES.				

Note:

- 1. mg/kg = ppm; 0.1wt% = 0.1% = 1000ppm
- 2. MDL = Method Detection Limit
- 3. n.d. = Not Detected (Less than MDL)
- 4. "-" = Not Regulated
- 5. Unless otherwise stated, the decision rule for conformity reporting is based on Binary Statement for Simple Acceptance Rule (w=0) stated in ILAC-G8:09/2019. According to this rule, the judgement of conformity is based on the comparing test results with limits.



No.: ETR25105369 Date: 03-Feb-2025 Page: 4 of 13

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

PFAS Remark:

The quantitative technology of PFAS is to analyze the specific structure of PFAS substances. However, PFAS acid and its salts with the same carbon number group have the same specific structure that can be identified. The tested results of the analyzed specific structure cannot be distinguished to identify the contribution from PFAS acid or its salts. Therefore, the tested results display the sum of concentrations of PFAS acids and its salts with the same carbon number group. The concentration of PFAS substances in the below table have been included in the tested results, please refer to the table for relevant information: (The listed PFAS substances are examples only, it do not include all PFAS salts with the same carbon number group.)

Group Name	Substance Name	CAS No.
	Perfluorooctane sulfonates (PFOS)	1763-23-1
	Potassium perfluorooctanesulfonate (PFOS-K)	2795-39-3
	Perfluorooctanesulfonic acid, lithium salt (PFOS-Li)	29457-72-5
	Perfluorooctanesulfonic acid, ammonium salt (PFOS-NH ₄)	29081-56-9
	Perfluorooctane sulfonate diethanolamine salt (PFOS-NH(OH) ₂)	70225-14-8
	Perfluorooctanesulfonic acid, tetraethylammonium salt (PFOSN(C_2H_5) ₄)	56773-42-3
	N-decyl-N,N-dimethyldecan-1-aminium 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluorooctane-1- sulfonate (PFOS-DDA)	251099-16-8
	TetrabutylAmmonium perfluorooctanesulfonate (PFOS-N(C ₄ H ₉) ₄)	111873-33-7
PFOS, its salts & derivatives	Perfluorooctane sulfonyl fluoride (POSF)	307-35-7
1103, its saits & delivatives	Perfluorooctanesulfonic acid, magnesium salt (PFOS-Mg)	91036-71-4
	Perfluorooctanesulfonic acid, sodium salt (PFOS-Na)	4021-47-0
	Piperidine 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8- heptadecafluorooctanesulfonate	71463-74-6
	Perfluorooctanesulfonate (anion)	45298-90-6
	1-Octanesulfonic acid, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluoro-, compd. with N,N-diethylethanamine (1:1) (PFOS-N(C ₂ H ₅) ₃)	54439-46-2
	Methanaminium, N,N,N-trimethyl-, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluoro-1- octanesulfonate (1:1) (PFOS-N(CH ₃) ₄)	56773-44-5
		56773-56-9



No.: ETR25105369 Date: 03-Feb-2025 Page: 5 of 13

Ajinomoto Fine-Techno Co., Inc.

1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Group Name	Substance Name	CAS No.
PFOS, its salts & derivatives	1-Butanaminium, N,N-dibutyl-N-methyl-, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluoro-1- octanesulfonate (1:1) (PFOS-N(C ₄ H ₉) ₃ (CH ₃))	124472-68-0
	lodonium, bis[4-(1,1-dimethylethyl)phenyl]-, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluoro-1- octanesulfonate (1:1)	213740-80-8
	Sulfonium, diphenyl(2,4,6-trimethylphenyl)-, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluoro-1- octanesulfonate (1:1)	258341-99-0
	Pyridinium, 1-hexadecyl-, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluoro-1-octanesulfonate (1:1)	334529-63-4
	1-Decanaminium, N,N,N-triethyl-, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-heptadecafluoro-1- octanesulfonate (1:1)	773895-92-4
	Tetrabutylphosphonium perfluorooctane sulfonate (PFOS- $P(C_4H_9)_4$))	2185049-59-4
	Perfluorooctanesulfonic acid diethylamine salt (PFOS-C ₄ H ₁₁ N)	2205029-08-7
	$\label{lem:heptyldimethyl} Heptyldimethyl \ \{2-[(2-methylprop-2-enoyl)oxy]ethyl\} azanium perfluorooctanesulfonate (PFOS-C_{15}H_{30}NO_2)$	1203998-97-3
	1-Octanesulfonic acid, 1,1,2,2,3,3,4,4,5,5,6,6,7,7,8,8,8- heptadecafluoro-, 1,1'-anhydride (PFOSAN)	423-92-7
	Perfluorooctanoic acid (PFOA)	335-67-1
	Sodium perfluorooctanoate (PFOA-Na)	335-95-5
	Potassium perfluorooctanoate (PFOA-K)	2395-00-8
	Silver perfluorooctanote (PFOA-Ag)	335-93-3
	Perfluorooctanoyl fluoride (PFOA-F)	335-66-0
	Ammonium pentadecafluorooctanoate (APFO)	3825-26-1
	Lithium perfluorooctanoate (PFOA-Li)	17125-58-5
	Cobalt perfluorooctanoate (PFOA-Co)	35965-01-6
PFOA, its salts & derivatives	Cesium perfluorooctanoate (PFOA-Cs)	17125-60-9
	Octanoic acid, 2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-pentadecafluoro-, chromium(3+) (PFOA-Cr(3 ⁺))	68141-02-6
	Pentadecafluorooctanoic acidpiperazine (2/1)PFOA- NH(C ₄ H ₁₀ N)	423-52-9
	Pentadecafluorooctanoate (anion)	45285-51-6
	Perfluorooctanoic Anhydride	33496-48-9
	Ethanaminium, N,N,N-triethyl-, 2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-pentadecafluorooctanoate (1:1)	98241-25-9
	Tetramethylammoniumperfluoroctanoat	32609-65-7



No.: ETR25105369 Date: 03-Feb-2025 Page: 6 of 13

Ajinomoto Fine-Techno Co., Inc.

1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Group Name	Substance Name	CAS No.
PFOA, its salts & derivatives	1-Propanaminium, N,N,N-tripropyl-, 2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-pentadecafluorooctanoate (1:1)	277749-00-5
	Octanoic acid, 2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-pentadecafluoro-, potassium salt, hydrate (1:1:2) (PFOA-K(H ₂ O) ₂)	98065-31-7
	Octanoic acid, 2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-pentadecafluoro-, compd. with ethanamine (1:1) (PFOA- C_2H_7N)	1376936-03-6
	Octanoic acid, pentadecafluoro-, compd. with pyridine (1:1) (9CI) (PFOA- C_5H_5N)	95658-47-2
	Pentadecafluorooctanoic acid- 1-phenylpiperazine(1:1) $(PFOA-C_{10}H_{14}N_2)$	1514-68-7
	1-Octanaminium, N,N,N-trimethyl-, 2,2,3,3,4,4,5,5,6,6,7,7,8,8,8-pentadecafluorooctanoate (1:1) (PFOA- $C_{11}H_{26}N$)	927835-01-6




No.: ETR25105369 Date: 03-Feb-2025

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Analytical flow chart of heavy metal

These samples were dissolved totally by pre-conditioning method according to below flow chart.

(Cr⁶⁺ test method excluded)

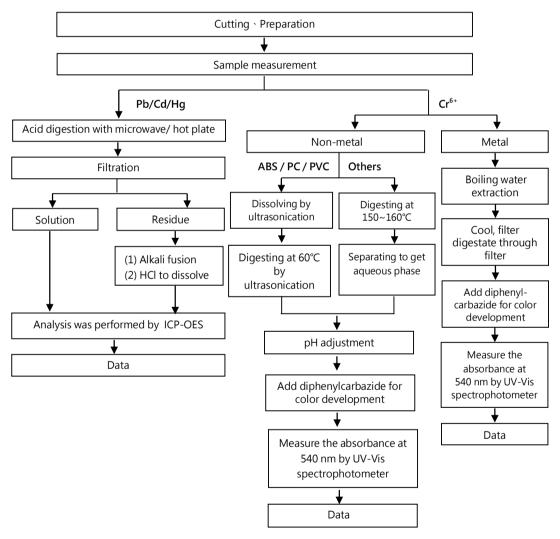

This document is issued by the Company subject to its General Conditions of Service printed overleaf, available on request or accessible at https://www.sgs.com.tw/terms-of-service. Attention is drawn to the limitation of liability, indemnification and jurisdiction issues defined therein. Any holder of this document is advised that information contained hereon reflects the Company's findings at the time of its intervention only and within the limits of client's instruction, if any. The Company's sole responsibility is to its Client and this document does not exonerate parties to a transaction from exercising all their rights and obligations under the transaction documents. This document cannot be reproduced, except in full, without prior written approval of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this document is unlawful and offenders may be prosecuted to the fullest extent of the law. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested.

Page: 7 of 13



No.: ETR25105369 Date: 03-Feb-2025


Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Analytical flow chart - PBBs / PBDEs

First testing process

Optional screen process

Confirmation process

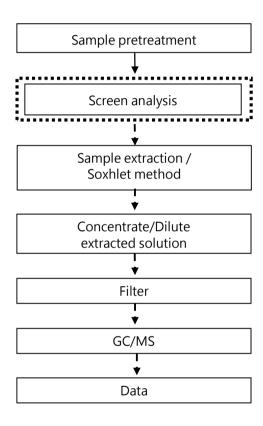

This document is issued by the Company subject to its General Conditions of Service printed overleaf, available on request or accessible at https://www.sgs.com.tw/terms-of-service. Attention is drawn to the limitation of liability, indemnification and jurisdiction issues defined therein. Any holder of this document is advised that information contained hereon reflects the Company's findings at the time of its intervention only and within the limits of client's instruction, if any. The Company's sole responsibility is to its Client and this document does not exonerate parties to a transaction from exercising all their rights and obligations under the transaction documents. This document cannot be reproduced, except in full, without prior written approval of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this document is unlawful and offenders may be prosecuted to the fullest extent of the law. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested.

Page: 8 of 13




No.: ETR25105369 Date: 03-Feb-2025

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Analytical flow chart - Phthalate

【Test method: IEC 62321-8】

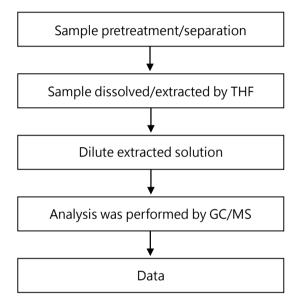

This document is issued by the Company subject to its General Conditions of Service printed overleaf, available on request or accessible at https://www.sgs.com.tw/terms-of-service. Attention is drawn to the limitation of liability, indemnification and jurisdiction issues defined therein. Any holder of this document is advised that information contained hereon reflects the Company's findings at the time of its intervention only and within the limits of client's instruction, if any. The Company's sole responsibility is to its Client and this document does not exonerate parties to a transaction from exercising all their rights and obligations under the transaction documents. This document cannot be reproduced, except in full, without prior written approval of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this document is unlawful and offenders may be prosecuted to the fullest extent of the law. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested.


Page: 9 of 13



No.: ETR25105369 Date: 03-Feb-2025 Page: 10 of 13

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Analytical flow chart - Halogen

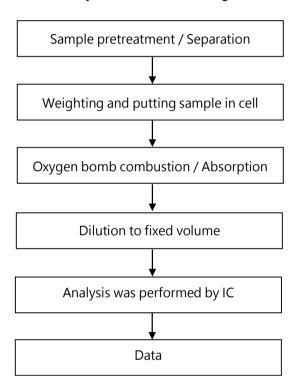




No.: ETR25105369 Date: 03-Feb-2025

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Analytical flow chart – PFAS (including PFOA/PFOS/its related compound, etc.)

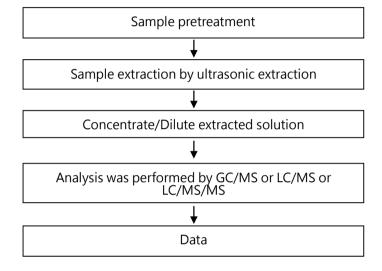

This document is issued by the Company subject to its General Conditions of Service printed overleaf, available on request or accessible at https://www.sgs.com.tw/terms-of-service. Attention is drawn to the limitation of liability, indemnification and jurisdiction issues defined therein. Any holder of this document is advised that information contained hereon reflects the Company's findings at the time of its intervention only and within the limits of client's instruction, if any. The Company's sole responsibility is to its Client and this document does not exonerate parties to a transaction from exercising all their rights and obligations under the transaction documents. This document cannot be reproduced, except in full, without prior written approval of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this document is unlawful and offenders may be prosecuted to the fullest extent of the law. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested.

Page: 11 of 13




No.: ETR25105369 Date: 03-Feb-2025

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

Analytical flow chart of elements (Heavy metal included)

These samples were dissolved totally by pre-conditioning method according to below flow chart.

[Reference method : US EPA 3051A \ US EPA 3052]

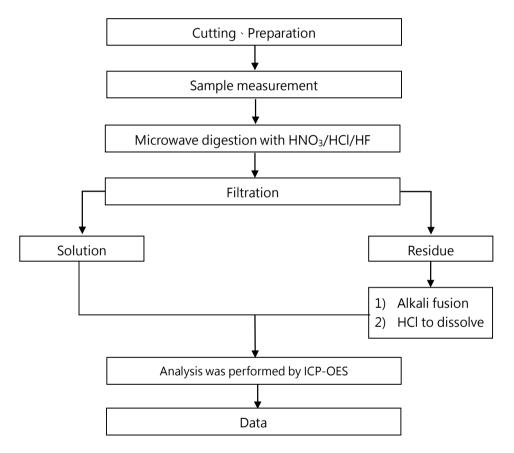

^{*} US EPA 3051A method does not add HF.

This document is issued by the Company subject to its General Conditions of Service printed overleaf, available on request or accessible at https://www.sgs.com.tw/terms-of-service. Attention is drawn to the limitation of liability, indemnification and jurisdiction issues defined therein. Any holder of this document is advised that information contained hereon reflects the Company's findings at the time of its intervention only and within the limits of client's instruction, if any. The Company's sole responsibility is to its Client and this document does not exonerate parties to a transaction from exercising all their rights and obligations under the transaction documents. This document cannot be reproduced, except in full, without prior written approval of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this document is unlawful and offenders may be prosecuted to the fullest extent of the law. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested.

Page: 12 of 13



No.: ETR25105369 Date: 03-Feb-2025 Page: 13 of 13

Ajinomoto Fine-Techno Co., Inc. 1-2 Suzuki-cho Kawasaki-ku Kawasaki-shi 210-0801 Japan

* The tested sample / part is marked by an arrow if it's shown on the photo. *

ETR25105369



ETR25105369



** End of Report **